


Flexible Pipe Deer Clip Fan

Product Parameter

Product model: GXZ- F 803
Material:ABS/ PP/ PC/Electronic components
Battery voltage:3 . 7 V
Battery capacity: 2000 mAh
Input voltage/current: DC5 V/ 1000 mA
Output power:4 W
Motor speed: Low speed:4.6V 2300 rpm
Medium speed:6.5 V 3100rpm
High speed:8.3 V 3700rpm ($\pm 10\%$)
Working current:Low speed:290 mA;
Medium speed:510 mA
High speed:890 mA;
Working power: Low speed:1.1 W;Medium speed:1.9 W
High speed:3.3 W ;
Product size:104 * 115 * 370 mm
Product weight:307 g
Standard:GB 4706.1-2005/GB 4706.27-2008
Inspection: Qualified
Place of origin: Shenzhen ,China

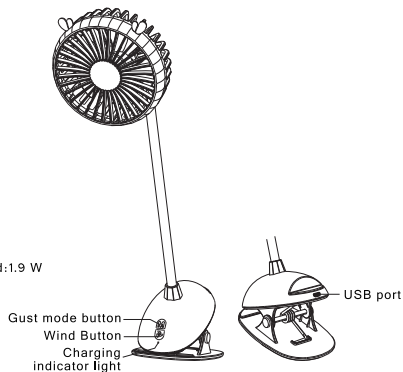

Function operation

Fan button: Fan button: (3 speed for clip fan) 1st single press the wind button to start the low speed; 2nd single press the wind button to start the medium speed; 3rd single press the wind button to start the high speed; 4th press to turn off the fan.

Gust mode button: Press the "M" mode button when the fan in working situation, the wind will change to gust mode(10s on and 5s stop), press again back to normal operation.

Using time

Low speed: about 6.8h; Medium speed: about 4h; High speed: about 2.2h

Indicator light

- Charging indicator light: Red light is on when charging, red light is off when fully charged
- Fan indicator: blue light is bright
- Mode "M" indicator: Blue light turns into a breathing light
- Battery low voltage warning: When the battery voltage is lower than 3.2V, the indicator light at the current gear will flash for 60s and will be shut down automatically.

Charging current/time

- charging current 1000mA and it takes about 3.5h to fully charge.

Product Maintenance

- Please charge the product more than 2h before using.
- please charge the fan every 3 months to avoid the battery damage.
- Please do not let under 6 years old child use this product alone.

Product Standard

Mini Fan *1pc USB cable*1pc User manual *1pc