

DYNAMO SERIES


HICON
CHAIRS




01 Check Various Accessories

Details of accessories


Please check and ensure all the things are in the package.
Please contact us for help if something is not included.

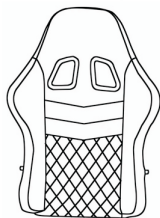


a x1
Back

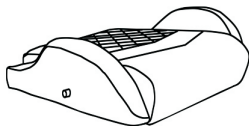

b x1
Seat

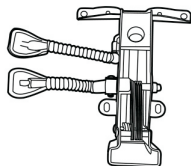

c x1
Mechanism

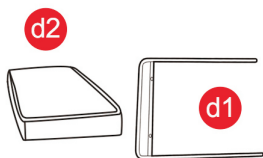

d x1
Footrest




e x1
Headrest



f x5
Caster




g x1
Connector

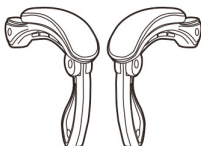

h x2
Armrest



i1

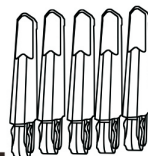


i2

i x1
Base




j _____ x1

Lumbar Pillow

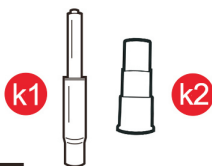

k _____ x1

Gas Lift / Cover



l _____ x1

Wrench



S _____ x2

Guide Rail

Screws and other accessories



m M6*20 **4pcs**
Chair seat mechanism



n M5*10 **1pc**
Footrest d1



o M6*25 **10pcs**



p M8*35 **4pcs**
Armrest Screws




r Cap **4pcs**
Armrest





t M8*20 **2pcs**
Connector

02 Instructions Before Using Chair Installation


- 1** Combine **i1** and **i2**.

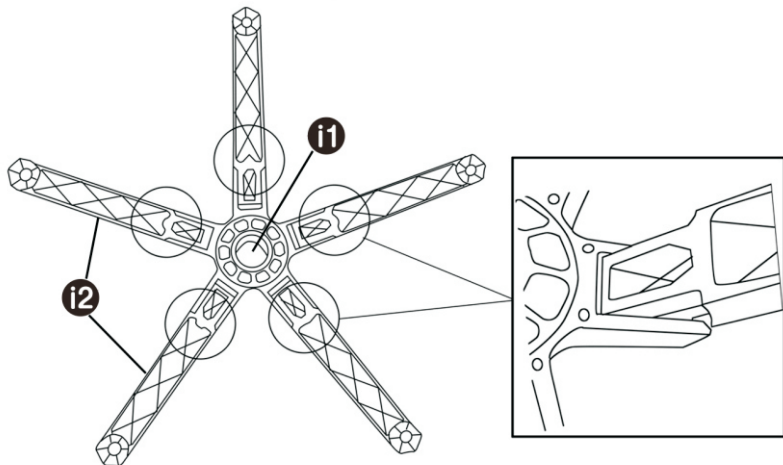


- 2** Insert the caster wheels into the bottom of the base as indicated in the image below.

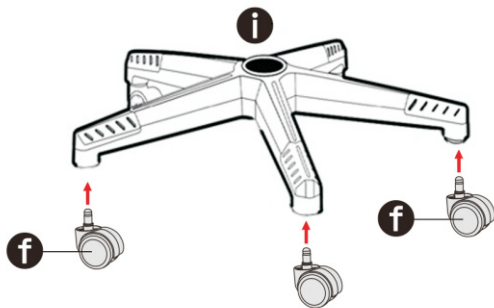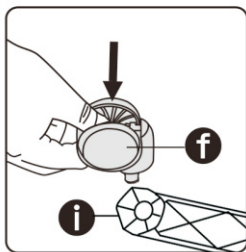

1. Insert the Gas Lift and Cover into the base as shown

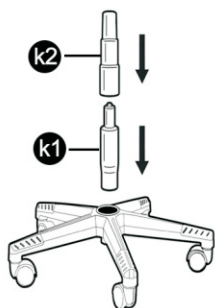

3 Install the Guide Rail. Then, Install the Mechanism

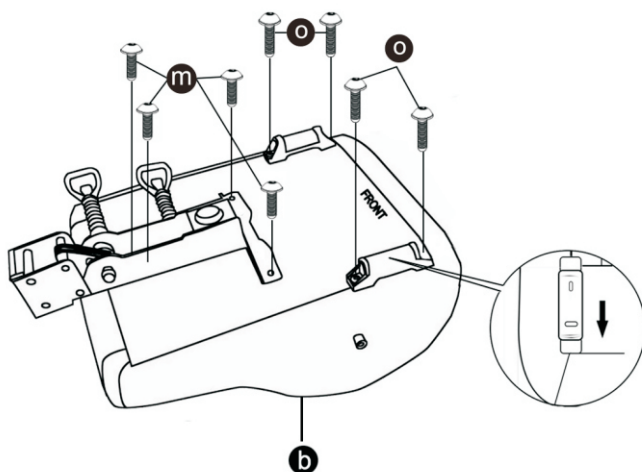

X4

Guide Rail

o M6*25



X4


Mechanism

m M6*20

⚠ Attention

DO NOT tighten the screws completely until they are all fixed in the correct position.

4 Install the Footrest. Then, Install the Mechanism

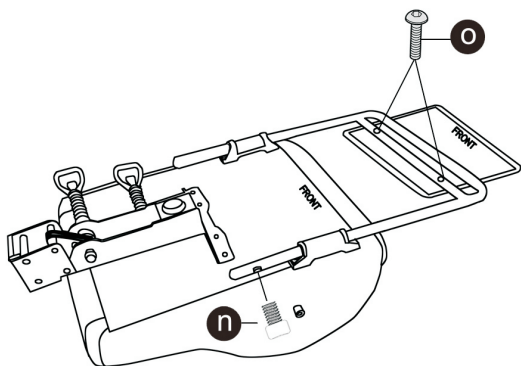

X2

o M6*25





X1

n M5*10



⚠ Attention

DO NOT tighten the screws completely until they are all fixed in the correct position.

5 Place the seat on the gas lift.

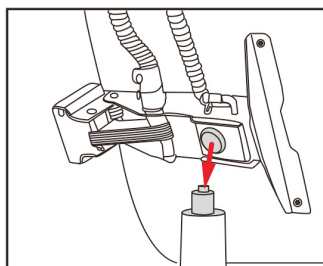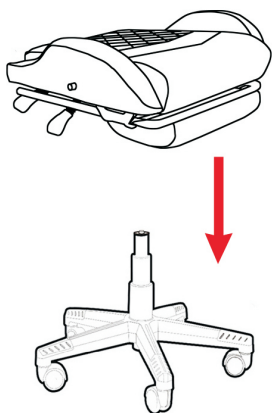


6 Install the connector on the chair back.

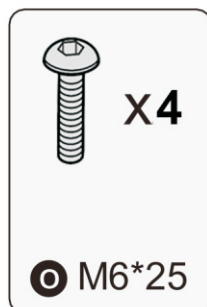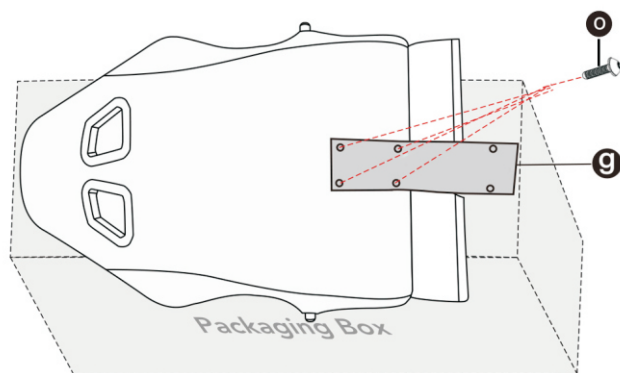



⚠ Attention

DO NOT tighten the screws completely until they are all fixed in the correct position.



7 Attach the headrest and lumbar pillow to the backrest.

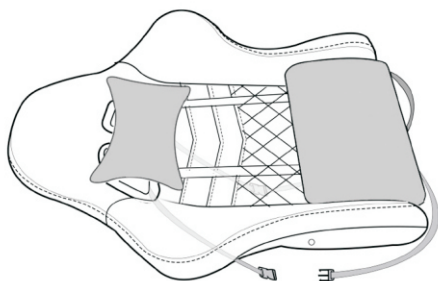



Install the lumbar support and headrest as shown in the picture.
Pass the belt through the hole for vertical adjustment of lumbar support.
When installing the headrest, please refer to the drawing and select a installation method that suits you.

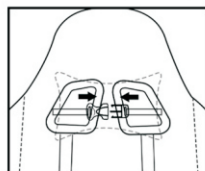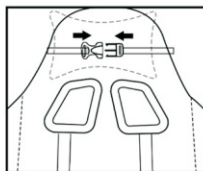

* Length-adjustable belt

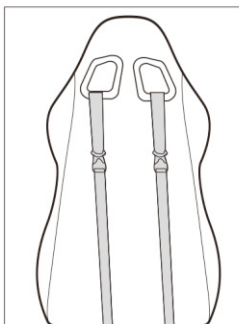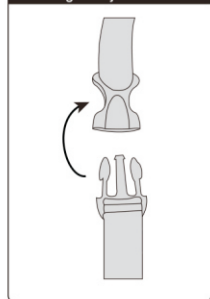

8 Install the connector into the rear end of mechanism.

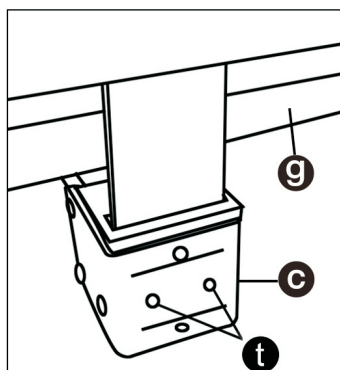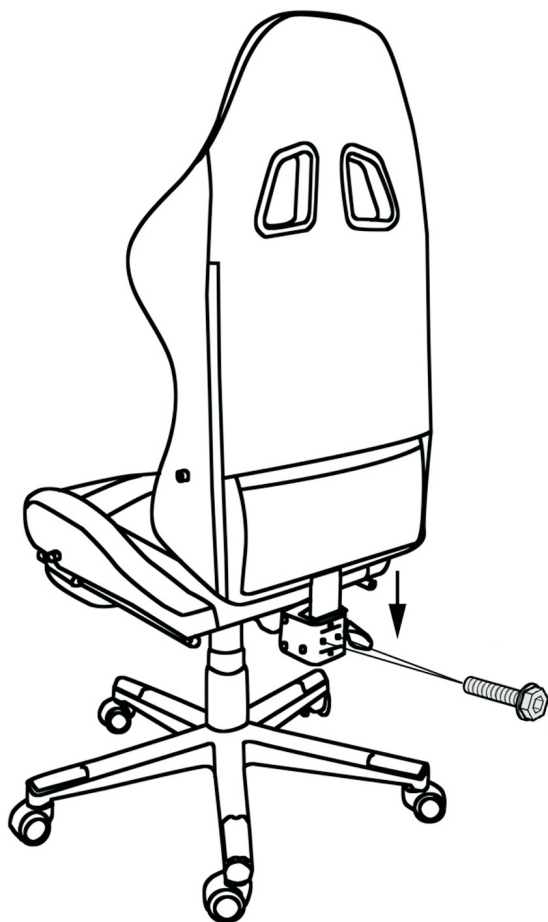

Note: Connector **g** INTO mechanism **c**.



X2

Connector





M8*20

! Attention

DO NOT tighten the screws completely until all the screws are fixed in the correct position.

9 Install the armrests. Then, install the caps.

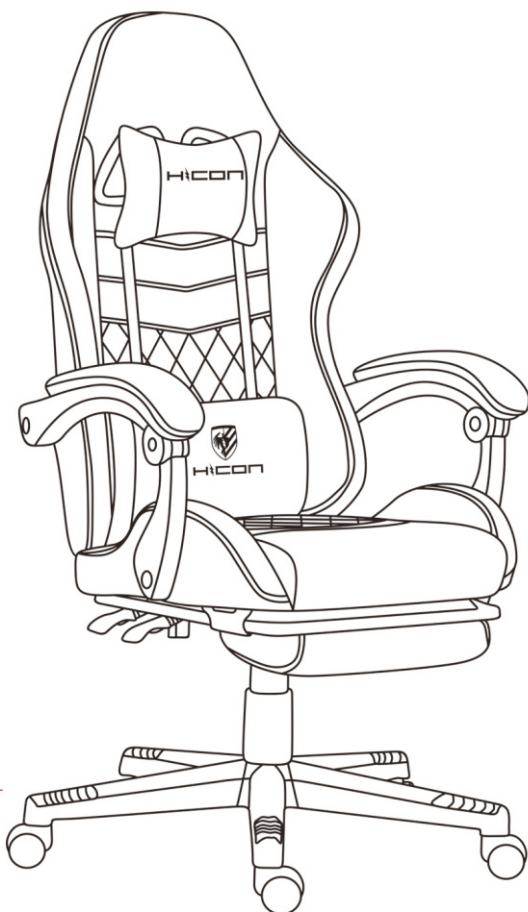
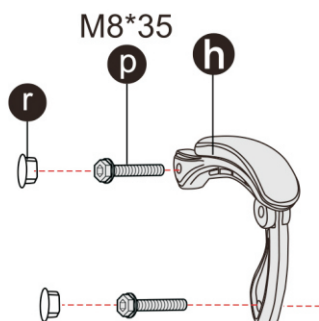


! Attention

DO NOT tighten the screws completely until all the screws are fixed in the correct position.

B Back Recline Function

Pull up on “RCL” lever and the back angle tilts independently with user’s motion. Push down on “RCL” lever and the back angle is locked in position. Rest on the back when resetting back to its normal position, otherwise the back may rebound rapidly.

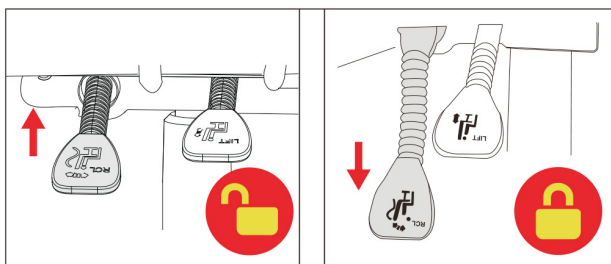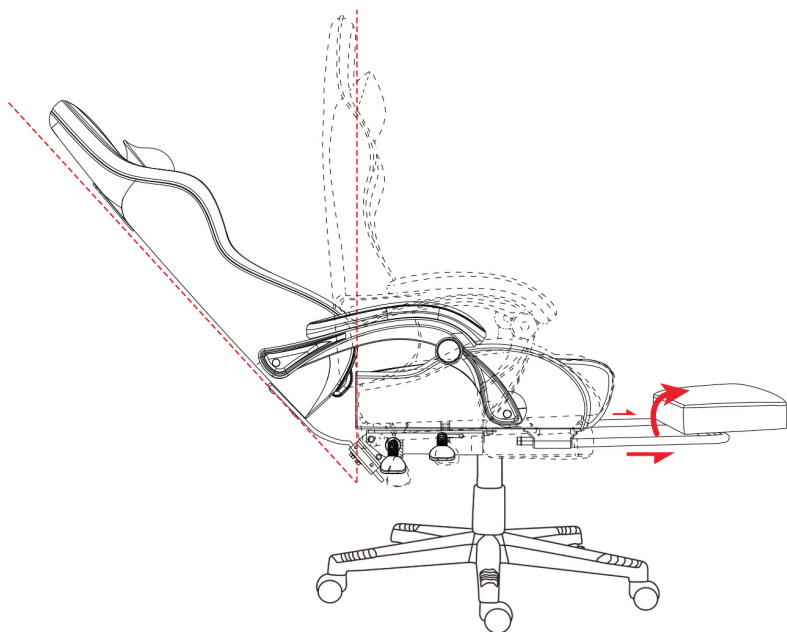



H  **CON**
CHAIRS