英语说明书(HB66)

说明书为折叠式 尺寸: 540*120MM 材质: 100g双胶纸 (彩色)

版本: V1.1 类型: 环保

审核 审批 设计 王勇 Verry 2019/10/08 2019/10/09 2019-10-09

HelloBaby[®]

Focus on Mom & Baby Care!

User Manual

2.4GHz Digital Wireless Video Baby Monitor



Model: HB66

www.hellobaby.net.cn

Thank you for purchasing the HB66 HelloBaby Baby Monitor. With our baby monitor, you could see and hear your baby sleeping or playing in their room anytime

Please retain your original dated sales receipt for your records. For warranty service of yo $HelloBaby\ product,\ you\ will\ need\ to\ provide\ a\ copy\ of\ your\ dated\ sales\ receipt\ to\ confirm$ warranty status. Registration is not required for warranty coverage.

Parent unit x 1 Camera unit x 1

Power Adapter x 2

1. SAFETY INSTRUCTIOINS

CAUTION: Keep the device away from children

Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of ildren (more than 3ft (0.9m) away). Never use extension cords with AC Adapters. Only use

Read and keep to instructions: All the safety and operating in structions should be read before the video baby monitor is operated. This product cannot replace responsible adult Water and moisture: This product is designed for indoor use only. The unit should not be

exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be use **DO NOT:** Use the appliance if the cord or plug is damaged. If your baby monitor is not operating properly or has suffered any damage, contact "HelloBaby" service center to

request inspection and repair of the appliance in order to avoid any possible risk.

DO NOT: Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit. Otherwise, the guarantee will be made void.

Ventilation: This baby monitor should not be used on a bed, sofa, rug or similar surface that

may block the ventilation openings, or be placed in an enclosed area such as a bookcase or Keep away from sources of heat: This unit should not be exposed to direct heat source

such as a candle, radiator, heat register, stove or other appliance that emits heat. The unit should not be left in direct sunlight. Power source: This unit should only be used with the AC power adapters included in this

Damage requiring service: This unit should be serviced by qualified personnel only when Objects have fallen or liquid has been spilled into the product; . The units have been exposed to rain:

. The units do not appear to operate normally or exhibits a distinct change in performance

2. WARRANTY TERMS

We offer one-year warranty from the original purchase date against defects in workmanshi and materials. If you have warranty or support issues, please contact our after-sales service

3.INSTALLATION GUIDELINES

- * To use your parent unit and camera unit together, you have to establish a radio link between them, and the range will be affected by environmental conditions. Any large metal object, like a refrigerator, a mirror, a filling cabinet, metallic doors or
- reinforced concrete between the baby and parent unit may block the radio signal. The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV, computers, cordless or mobile phones, fluorescent

* Use of other 2.4GHz product, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the bab monitor away at least 5ft (1.5m) from such products, or turn them off if they cause

4. PLACEMENT OF THE BABY MONITOR

he camera can be placed on the desktop or mounted on the wall. Don't place baby monitor on soft quiltsor blankets or in the corners of cupboards, shelves, etc; Keep the baby monito way from heat sources such as radiators, chimneys, cookers and direct sunlight; Keep the baby unit away from TV sets, microwave oven and radios. If interference occurs, move the

* Place the camera within 6 feet (2 meters) of the area being monitored for optimum

5. GETTING STARTED

5.1 TURN ON THE BABY UNIT:

 Insert the DC plug of the power adapter into the DC jack in the rear of the Baby Unit;
 Insert the other end of the power adapter into a suitable electrical outlet; . Once the adapter is connected, the power LED will light up;

5.2 TURN ON THE PARENT UNIT: 1. Insert the DC plug of the power adapter into the DC jack in the side of the parent Unit; 3. Press and hold the power key 3 seconds on the top of the parent unit;

4. Once parent unit is on, the power LED will light up and the image will display on the LCD


light conditions. In this mode, only black and white images will be displayed on the monitor, the optimum image lie in where baby unit is 6ft (2m) away from object. The camera is in night vision mode, the icon will be displayed on the top of screen.

6. PRODUCT OVERVIEW


5.3 INFRARED NIGHT VISION (AUTOMATIC)



6.2 PARENT UNIT OVERVIEW:

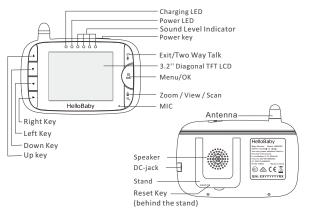

6. 3 BABY UNIT OVERVIEW:

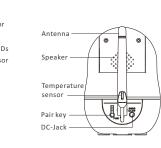

7. KEY OPERATION

7.1 POWER SAVE/SCREEN OFF

HelloBaby

Press and hold the power $\ensuremath{\boldsymbol{\mho}}$ key 3seconds to turn on / off the parents unit.

7.3 DOWN ▼ KEY

7.4 LEFT ◀ KEY

7.5 RIGHT ► KEY

7.6 CAMERA VIEW/SCAN 🚇 Press scan 🖁 key to view/scan camera : during scan mode, the scan icon 🕾 will be displayed on the top of screen. Each camera's video will be displayed on the LCD aroun

10 seconds then change to next camera; 7.7 DIGITAL ZOOM 🔍 Press and hold the key around 2 seconds to operate zoom in/out.

7.8 Two Way Talk 🖳

Press and hold ∰ key to enter two way talk mode. A microphone icon ∰ will be displayed on the top of the LCD screen. Release the key to stop.

Note: When you are in the two-way talk mode, the parent unit speaker is muted

8.1 PAIRING THE CAMERA AND PARENT UNITS

The baby unit is pre-registered to your parent unit. You do not need to register it again unles the baby unit loses its link with the parent unit. To re-register your baby unit, or register a

Note: Camera icon with " "means it is well registered. You should select and pair with the camera icon without " 🕶 " sign. 8.1.1 ADD CAMERA

1. Press the MENU (key then the menu will pop up;

2. Press the $4/\sqrt[]{k}/\sqrt[]{k}$ key until the camera icon (is selected by red box; 3. Press OK (♣) key to enter into sub-menu, then press ▲ / ▼ key to select your desired

4. Press ⓐ key enter into sub-menu; Press ▲ / ▼ key to select ⓐ+ then press ⓐ key 5. When the icon 🖫 ··· displayed on the LCD screen, press the PAIR button 6. Once paired, Successful pairing icon shows on the LCD screen;

7. If fails, repeat the above steps.

8.1.2 DELETE CAMERA 1. Press the MENU (key and the menu will pop up;

2. Press the \P / \P / \P key until the camera icon \P is selected by red box;

3. Press OK (♣) key to enter into sub-menu, then press ▲ / ▼ key to select the camera yo

4. Press 👼 key enter into sub-menu; Press 🛦 / 🔻 key to select 📵 — then press 👼 key Press ▼ key to select ✓ icon to delete the camera;

6. Press OK (key to confirm the option 8.2 VOLUME 1. Press the (key then the menu will pop up;

2. Press the ◀ / ▶ / ▲ / ▼ key until the Volume icon 🚺 is selected by red box;

3. Press the (a) key enter into sub-menu;
4. Press the √ / ▶ key to select the desired volume level from level 1~5. B.3 DISPLAY BRIGHTNESS

2. Press the \blacktriangleleft / \blacktriangleright / \bigstar / \blacktriangledown key until the brightness icon $\stackrel{\diamondsuit}{\boxtimes}$ is selected by red box;

4. Press ◀/ ► keys to select the desired brightness level from level 1 ~ 5.

(The default brightness level setting is level 3.)
8.4 TEMPERATURE UNIT SETTING

2. Press the ◀ / ▶ / ▲ / ▼ until the temperature icon 🐧 is selected by red box;

4. Press the ◀ / ▶ key to select the °F or °C for setting temperature unit

5. Press (key to confirm)

8.4.1 TEMPERATURE ALARM SETTING

1. Press the ◀ / ▶ / ▲ / ▼ key to select ∜ for turn on alarm function; Press (key

2. Press the ◀ / ▶ / ▲ / ▼ key to select 😿 for turn off alarm function; Press 👵 key

8.4.2 SET TEMPERATURE HI/LO ALERT LIMITS

1. Press ◀/ ▶ to select ⑤ or ⑤ for Hi/Lo limits settings;

2. Press \blacktriangle / \blacktriangledown keys to adjust the Hi limit when \circledR (red)is selected;

3. Press \blacktriangle / \blacktriangledown keys to adjust the Lo limit when \circledR (green) is selected; Note: The High temperature alarm range is 20-40 °C, and the Low temperature alarm range 0-19 °C. The high temperature alarm default setting is 36 °C, and the low temperature alar default setting is 8 $^{\circ}$ C. When the temperature goes above or below the settings, the temperature icon turns red. It will flash to alert user by audio beeps. Press any key on the

ovu can soothe the baby to sleep by playing a gentle lullaby from the Camera unit.

1. Press the MENU (3) key and the menu will pop up.

Press the ◀ / ▶ / ▲ / ▼ keys until the lullaby icon is selected by red box;

4. Press the ◀ / ▶ / ▲ / ▼key to select one of the 8 available lullables, you can pick single

playback, loop (all 8 lullabies) playback 🏂 or stop 🕢 . 5. Press (key to confirm.

rent unit to stop beeping and flashing.

B.6 ALARM SETTING

1. Press the MENU 🗓 key and the menu will pop up.

2. Press the \blacktriangleleft / \blacktriangleright / \blacktriangleleft key until the alarm icon is selected by red box. 3. Press the ▲ / ▼ key enter into sub-menu, Press the ◀ / ▶ / ▲ / ▼key to selected the

4. Press (key to confirm:

Note 1: The minimum unit is 0.5 hour. The maximum setting is 5 hours (7 levels). Note 2: Once the alarm is turned on, alarm icon will display on top of the screen. Note 3: The alarm default setting is OFF.

Note 4: When the alarm is ringing, press any key on the parent unit to turn the alarm off. Note 5: If you don't turn off the alarm, the alarm will ring for 1 minute. After three minute the alarm will ring again for 1 minute. The alarm will ring for three times in total, after this

8.7 VOX SETTING his mode allows you to control the sound activation of your baby unit. If there is no sound around the baby unit within 30 seconds, it will stop audio transmission and turn off the

en of the parent unit. When the baby unit detects any sounds louder than the sensitivity level, it will start transmitting the signal to the parent unit again and turn on the screen of the parent unit. To change the VOX level, please follow the below instructions.

1. Press the MENU (key and the menu will pop up. 2. Press the ◀ / ▶ / ▲ / ▼ key until the VOX icon 🎳 is selected by red box. 3. Press 👵 key enter into sub-menu, then press ▲/▼ key to select desired level;

Note: Sound before the VOX

Note: is middle sensitivity lev Note: is High sensitivity level, the baby don't have to make a lot of sound before the VOX

8.8 LANGUAGE SETTING 1. Press the MENU (key and the menu will pop up.

2. Press the ◀ / ▶ / ▲ / ▼ keys until the language icon ③ is selected by red box; 3. Press ♠ key to enter into sub-menu, then press ◀ / ▶ / ▲ / ▼ key to select the

5. Press key to Exit.

4. Press 🖟 key to confirm;

9. TECHNICAL DATA	
Frequency	2403.5MHz~2475.5MHz
	Parent Unit: Input: 100-240VAC 50/60Hz
	Output: 5V DC 1A
Power Adaptor	Camera Unit: Input: 100-240VAC 50/60Hz
	Output: 5V DC 1A
Operating Range	Up to 1000ft (300m) outdoor (line of sight) Up to 165ft (50m) indoor
	Op to 1631t (30ff) Indoor
Display	3.2" Diagonal TFT LCD
Battery (Parent Unit)	Li-ion 3.7V 950mAh (3.515Wh)
Battery Life	Up to 6 hours
Maximum power	<19dBm
Operation environment	Operation Temperature: +32F~+104F (0°C~40°C)
	Battery Charging Temperature: +50F~+104F (10°C~40°C)
	Relative Humidity : 15%-85%

No reception on the * Confirm that the camera and monitor are ON; * Camera and monitor may not be properly paired; follow PAIRING in * Move the monitor close to the camera;
Interference or poor
* The camera or monitor may be placed too close to many metal objects * Other electronic devices may be interfering with the signal; * The camera and monitor may be placed too closed (high pitched noise) * The volume on the monitor may be set too high; Repower the baby unit (plug out the adapter, then plug it into Frozen Picture on socket again);

* Press the RESET key at the back of parent unit

11. MAINTENANCE

'Clean your baby monitor with a slightly damp or anti-static cloth.

12. DISPOSAL GUIDE FOR BATTERY AND PRODUCT

* Do not attempt to repair or adjust any of the electrical or mechanical functions of the

* Remember to dispose of the product in an environmentally responsible way; $\boldsymbol{*}$ For proper collection and processing of these products, take them to the collection points designated by local authorities. You can also contact the store where you

purchased the product. FCC AND IC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following tw onditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operat

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment

"This equipment has been tested and found to comply with the limits for a Class B digital evice, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment nerates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communical

lowever, there is no guarantee that interference will not occur in a particular installation f this equipment does cause harmful interference to radio or tel evision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to prrect the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receive -Connect the equipment into an outlet on a circuit different from that to which the receive

s connected.

Industry Canada Operation is subject to the following two conditions: (1) this device may not cause nterference, and (2) this device must accept any interference, including interference that

may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appar ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout

uncontrolled environment. Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limite établies pour un environnement non contrôlé.

a separation distance of at least 20 cm from all persons IC Radiation Déclaration d'exposition Attention: Cet émetteur doit être installé pour ournir une distance de séparation d'au moins 20 cm de toute personne.

EU Declaration of Conformity (DOC)

Hereby, HelloBaby Technology (HK) Limited declares that the radio equipment type (2.4GHz Digital Wireless Video Baby Monitor HB66) is in compliance with RED Directive The full text of the EU declaration of conformity is available on the website:

Trade Name : HelloBaby Model: HB66 Responsible Party: Startline LLC

Add: 22 Hazelwood Drive, Jericho, NY 11753

www.hellobaby.net.cn

Shenzhen Videotimes Technology Co.,Ltd

leakage of flammable liquid or gas.

Room 601, F6, Building.B, Chuanglingtong Technology Building, Shihua Road, Fubao Community, Fubao Street, Futian District, Shenzhen, China.

Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property. Use only the types of the batteries which are indicated in this manual. CAUTION: Risk of Fire and Burns. Do Not Open, Crush, Heat Above 45 degree C or Incinera

- Disposal of a battery into fire or a hot over, or mechanically crushing or cutting of a battery that can result in an explosion: - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

The battery shall not be exposed to excessive heat such as sunshine, fire or the like:

A battery subjected to extremely low air pressure that may result in an explosion or the

Risk Group 1

WARNING IR emitted from this product. Do not stare at operating lamp Product tested against EN62471



Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not remove this tag

AVERTISSEMENT

DANGER D'ÉTRANGLEMENT: Des enfants se sont ÉTRANGLÉS avec des cordons électriques. Garde le cordonélectrique hors de la portée des enfants(à plus de 0.9m/3 pi du lit d'enfant). Ne pas enlever cette étiquette.









www.hellobaby.net.cn

Made in China