


## Usage

1. Plug the USB connector (1) in the USB port (1A) and the Micro-USB connector (2) in the Micro-USB port (2A).
2. Lay carefully the Device (3) on the Wireless Charger surface (4)

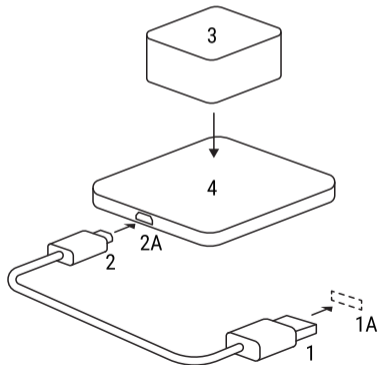

# ***WIRELESS CHARGER***



by  ROLLINGSQUARE®

Read the instruction manual and safety guide before using the product and always include this instruction manual when passing the product to third parties.

Do not use an obviously damaged product to prevent damage to health and accidents.

## Safety informations

- Do not disassemble or damage the product to avoid malfunctions.
- Use the product between 0 C° and 25 C°, do not expose the product to water, fire or corrosive substances.
- Clean the product only with a soft, dry cloth.
- Keep the product, accessories and packaging parts out of reach of children and pets to prevent accidents.
- Do not put magnetic card on the surface to prevent card demagnetization.
- Keep the product at least 40cm away from implanted medical devices (i.e. pacemakers).

## Specifications

Model: Wireless Charger by RollingSquare®

Weight: 56g

Input: 5V - 2A 9V - 2A

Output: 10W (MAX)

Size: 86 - 86 - 10 mm

Transmission distance: ≤8mm

Conversion efficiency: ≥73%

## LED indicator

Status

LED

Connected to power source	ON for 5 sec
Device (3) charging	ON

(ONLY FOR DIMENSIONS)

