

Yo Tag User Manual

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Getting Started

1. Check For Updates

To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPad OS, or macOS is recommended.

2. Power On

Pull the plastic tab to enable battery contact, it should beep once indicating it is powered on. If you don't hear the beeps, press the button to power on, then you will hear the beeps and will be in pairing status.

Plastic tab




3. Add Your Item Locator

3.1 Start the APP

Open Find My APP on your supported iPhone or iPad.

3.2 Connect your Item Locator

Step1. Select the "Items" tab then Tap the "Add Item" tab, +symbol (Figure 1)

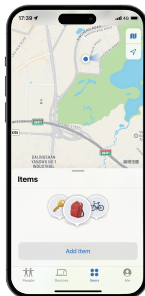

Step2. Tap "Other Supported Items".





Step3. Make sure your Item Locator is close to your phone. Wait... until you see "Yo tag", then tap "Connect".



5. Function Introduction

Locate your Item

- Find Item Locator
- Tap "Play Sound" to make your Item Locator beep when it is nearby.
- Find your Item Locator's location
- Your Item Locator's last known location will appear on the map as emoji you choose during set up, tap "Directions" to navigate to the last known location.

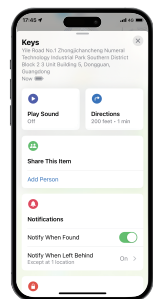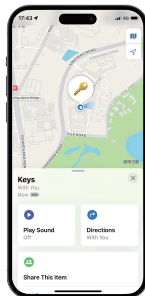


Find Item When Out of Range

- Enable the "Notify When Left Behind" toggle, you will receive a notification when you leave your Item Locator behind and it is no longer in range of your device.
- Enable the "Notify when Found" toggle, when your Item location is seen by another Find My enabled device, you will receive a notification of its updated location.
- Note: "Notify When Found" can only be activated when your Item Locator is out of range.



When Your Item is Lost

- When Your Item is Lost Under "Lost Mode", tap the "Enable" tab, a screen detailing Lost Mode will pop up, tap "Continue". You can enter your phone number or email address and tap "Next". You may enter a message that will be shared with the person that finds your item. Tap "Activate" to enable "Lost Mode"
- Note: When "Lost Mode" is enabled, "Notification When Found" is automatically enabled.
- Note: When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device.

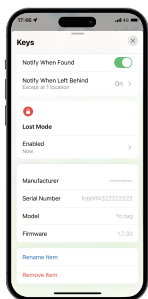

Remove your Item Locator


- Ensure "Lost Mode" is disabled, tap "Remove Item" tab, a summary will open, tap "Remove" to confirm.

Reset your Item Locator

- After successfully removing the Item Locator from the APP, press the Item Locator's function button four times rapidly, and then hold it a fifth time until you hear a ringing chime, the Item Locator is now reset and ready to pair to a new device.

How to replace the Battery:

- Use your fingernails at the small gap on the side of your Item Locator to carefully open the case.
- Replace the battery with a new CR2032 battery 3V. (Positive pole upward).
- Carefully close the Item Locator.



Unwanted Tracking Detection:

If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Item Locator is not connected to its owner's phone, so your partner's Item Locator will not trigger a sound if they are with you.

Button function

1. Power on (Findmy function is on). Press the function button once to turn it on. It should a ringing chime indicating it is powered on.

If the product is not paired, it will be closed within 3 minutes. You need to trigger the findmy function again to continue pairing.

2. Power off (Findmy function is off). Hold the function button for at least three seconds then release it... you will hear two beeps indicating it is powered off.
3. Enable learn more information query. Press the function button two times rapidly and you will hear a confirmation sound, this operation will be displayed on the findmy app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.
4. Restore factory settings (reset the device locally and restore it to pairing status)

Press the function button four times rapidly and then hold it a fifth time until you hear a ringing chime. A reset operation is required to enable the device to enter the pairing state again (synchronization of Findmy also requires simultaneous unbinding) and rebind the new Apple Id account.



Function button

Important tips:

1. When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended: 1. Change the phone's network, such as switching between WiFi and mobile. The first pairing may take a long time, please wait patiently. 2. Reset your item. 3. Repair with Findmy APP.
2. When "Lost Mode" is enable, DO NOT REMOVE ITEM in the APP. Your Item Locator will be locked and cannot be paired to a new device.
3. The battery usage time varies depending on personal usage habits. Frequent use of the call function can accelerate battery consumption.



Regulatory Safety Information

Warning: The battery must be kept out of the reach of children. Due to chemical burns and potential esophageal perforation, swallowing may cause serious injury or death. If the child accidentally swallows the button battery, please call the rescue phone immediately and seek medical advice in time.

