



**8-Port True 4K HDMI Switch
VS0801HB User Manual**



www.aten.com

Preface

EMC Information

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE

STATEMENT: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

CE Warning: Operation of this equipment in a residential environment could cause radio interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RoHS

This product is RoHS compliant.



User Information

Online Registration

Be sure to register your product at our online support center:

International	http://eservice.aten.com
---------------	---

Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-10-82961301 or 86-10-82961302
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988
United Kingdom	44-8-4481-58923

User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed as *is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

Package Contents

- ◆ 1 VS0801HB 8-Port True 4K HDMI Switch
- ◆ 1 IR Remote Control Unit
- ◆ 1 IR Receiver
- ◆ 1 Power Adapter
- ◆ 1 Rack Mount Kit
- ◆ 1 User Instructions

Note: Make sure that all of the components are present and in good order. If anything is missing or was damaged in shipping, contact your dealer.

© Copyright 2018 ATEN® International Co., Ltd.
Manual Date: 2018-03-01

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved.
All other brand names and trademarks are the registered property of their respective owners.

Table of Contents

Preface

EMC Information	ii
RoHS	ii
User Information	iii
Package Contents	iv
About this Manual	vi
Conventions	vii
Product Information	viii

1. Introduction

Overview	1
Features	2
Planning the Installation	3
Required Equipment	3
Optional Equipment	3

2. Hardware Setup

Components	5
Front View	5
Rear View	6
IR Remote Control Unit	7
Installation	8

3. Operation

Overview	11
Switching the Display Source	12
Setting the Switch Mode	13
Enabling/Disabling the Next Mode	13
Enabling/Disabling the Priority and POD Mode	13
Enabling/Disabling the Standby Mode	14
Executing an RS-232 Command	14
Restarting the VS0801HB	14

Appendix

Safety Instructions	17
Rack Mounting	19
Technical Support	20
Specifications	21
Limited Warranty	23

About this Manual

This user manual is provided to help you get the most from the VS0801HB. It covers all aspects of installation, configuration, and operation. An overview of the information found in the manual is provided below.

Chapter 1, *Introduction* introduces you to the 8-Port True 4K HDMI Switch. Its purpose, features, and installation considerations are described and discussed.

Chapter 2, *Hardware Setup* describes the panel components and the steps to quickly and safely set up the VS0801HB.

Chapter 3, *Operation* provides details on how to operate and configure the VS0801HB using the panel pushbuttons, IR remote control unit, and RS-232 commands.


Appendix provides a list of safety instructions and precautions, contact information for ATEN technical support, product specifications, and other technical information.

Note:

- ◆ Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit or any connected devices.
 - ◆ ATEN regularly updates its product documentation for new features and fixes. For an up-to-date VS0801HB documentation, visit <http://www.aten.com/global/en/>
-

Conventions

This manual uses the following conventions:

- | | |
|---|--|
| Monospaced | Indicates text that you should key in. |
| [] | Indicates keys you should press. For example, [Enter] means to press the Enter key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt]. |
| 1. | Numbered lists represent procedures with sequential steps. |
| ◆ | Bullet lists provide information, but do not involve sequential steps. |
| → | Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the <i>Start</i> menu, and then select <i>Run</i> . |
|  | Indicates critical information. |

Product Information

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	http://www.aten.com
North America	http://www.aten-usa.com

Chapter 1

Introduction

Overview

The ATEN VS0801HB is designed for applications that require routing of 8 sources to one compatible display device. The VS0801HB supports video resolutions up to true 4K (4096 x 2160 @ 60Hz 4:4:4), data rates up to 18 Gbps, 3D, Deep Color up to 12-bit, and HD lossless audio formats. The VS0801HB features different switch modes for automatic port selection and Instant Switching for a smooth video transition among its HDMI ports. Multiple control options (panel pushbuttons, RS-232 commands, IR remote control unit) are available to conveniently operate the unit, allowing for easy integration.

Engineered to meet today's demand of true 4K signal transmission and user-oriented design, the ATEN VS0801HB is a powerful solution for a wide range of settings, such as home theater, meeting rooms, trade shows, and shopping centers.

Features

- ◆ Allows up to 8 HDMI sources to be connected to one HDMI display
- ◆ HDMI 2.0 (3D, Deep Color, 4K); HDCP 2.2 compliant
- ◆ Superior video quality – True 4K resolutions of 4K x 2K @ 60 Hz (4:4:4) and standard 1080p (1920 x 1080 @ 60 Hz)
- ◆ Built-in bi-directional RS-232 serial port for high-end system control
- ◆ Switch modes for automatic port selection
- ◆ Instant switching among HDMI input sources
- ◆ Supports IR extension
- ◆ Clear LED indication of device status
- ◆ Plug-and-play
- ◆ Rack Mountable

Planning the Installation

Required Equipment

- ◆ 1 ~ 8 source devices equipped with an HDMI Type-A connector
- ◆ 1 display device equipped with an HDMI Type-A connector
- ◆ 1 ~ 8 HDMI cables (each not exceeding 3 m) to connect the VS0801HB to source devices
- ◆ 1 HDMI cable (not exceeding 3 m) to connect the VS0801HB to the display device

Note:

- ◆ You can connect a DVI source to the VS0801HB via a DVI to HDMI adapter.
 - ◆ ATEN strongly recommends that you use high-quality HDMI cables of appropriate length since this will affect the quality of the audio and video output. Contact your dealer to purchase the correct table sets.
-

Optional Equipment

To control the VS0801HB using RS-232 serial commands, prepare the following equipment:

- ◆ 1 hardware controller, e.g. a PC
- ◆ 1 serial cable with a 9-pin male connector


This Page Intentionally Left Blank

Chapter 2

Hardware Setup


Components

Front View

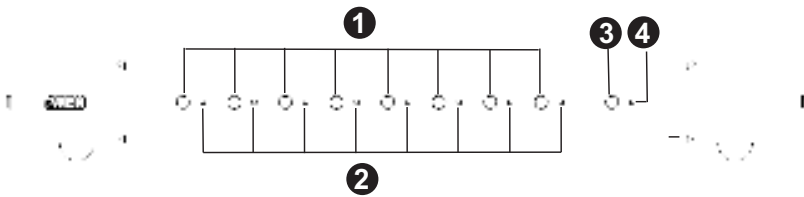


No.	Component	Description
1	Port Selection Pushbuttons	Press a Port Selection Pushbutton to route the HDMI source from the corresponding input port to the output port for display.
2	Port LEDs	A Port LED lights green to indicate that the corresponding port has been selected.
3	Power Button	Press to enable the standby mode, a low-power mode where the port selection pushbuttons, port LEDs, and IR receiver are disabled. To disable the standby mode, press the power button again.
4	Power LED	Lights green to indicate that the VS0801HB is in standby mode.

Rear View

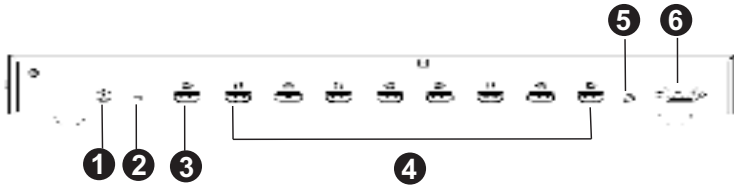

No.	Component	Description
1	Power Jack	Connects to the power adapter cable.
2	Auto Switch ON/OFF	Enables or disables the next mode. For details, see <i>Setting the Switch Mode</i> , page 13. Note: When the Auto Switch is put to ON , the VS0801HB will remain in next mode regardless of any RS-232 commands to set the unit into other switch modes.
3	HDMI Out Port	Connects to the HDMI In Port on the display device.
4	HDMI In Port	Connects to the HDMI Out Port on the source device.
5	IR Extend	Connects to an IR Receiver to extend the reception range for IR signals.
6	RS-232 Serial Port	Connects to a serial controller via a serial cable.

IR Remote Control Unit

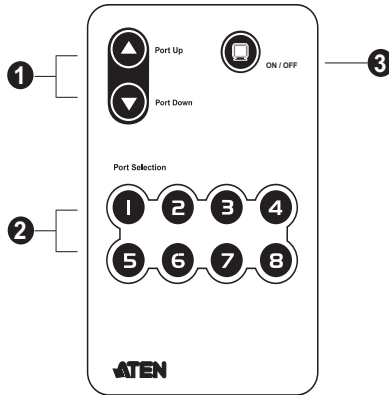


No.	Component	Description
1	Port Up / Port Down Buttons	Press the Port Up Button to cycle forward (e.g. source 1 to 2) through the source devices and the Port Down Button to cycle backward (e.g. source 2 to 1).
2	Port Selection Buttons	Press to display the source from the associated source device to the connected display device.
3	On/Off Button	Press to enable or disable the HDMI output.

Installation



1. Please review the safety information regarding the placement of this device in *Safety Instructions*, page 17.
2. Do not power on the VS0801HB and the connected devices until all the necessary hardware is connected.

Follow the steps below to safely connect the required devices to the VS0801HB.

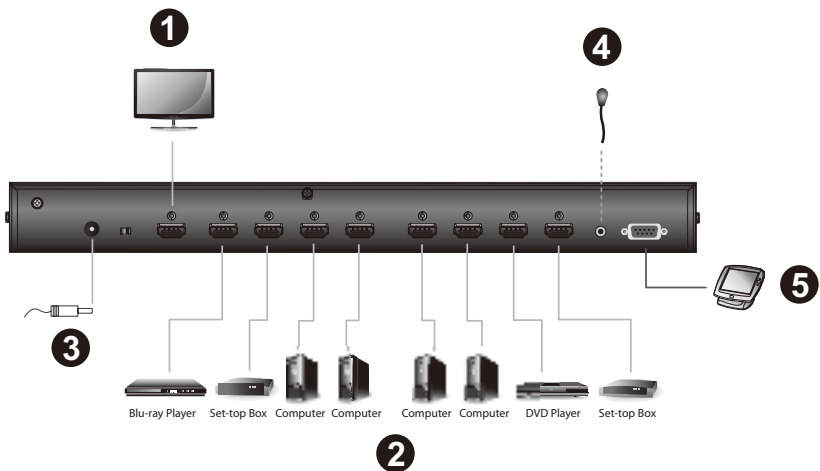

1. Connect the HDMI In port of your display device to the HDMI Out port on the VS0801HB using an HDMI cable.*
2. Connect the HDMI Out port(s) of your source device(s) to the HDMI In port(s) on the VS0801HB using HDMI cables.*
3. Plug the provided power adapter into the an appropriate AC power source, and then plug the power adapter cable into the power jack on the VS0801HB.
4. For remote control using the IR remote control unit, plug the IR receiver cable to the IR Extend port.

5. To configure the VS0801HB system settings using RS-232 serial commands, connect a hardware/software controller to the RS-232 Serial Port on the VS0801HB.
6. Power on the VS0801HB and the connected devices.

Note: To ensure the output quality, make sure the HDMI cables used in this setup do not exceed 3 m.

This Page Intentionally Left Blank

Chapter 3

Operation

Overview

You can operate the VS0801HB using the panel pushbuttons, the IR remote control unit, or an RS-232 serial controller. The availability of actions with the three methods is summarized in the table below.

Action	Operation Methods		
	Panel Pushbuttons	IR Remote Control Unit	Serial Controller
Switch the port			
Switch the display to a specific source	✓	✓	✓
Switch to the next available port		✓	
Switch to the previous available port		✓	
Set the switch mode			
Enable the off mode	✓		✓
Enable the next mode (default)	✓		✓
Enable the priority mode			✓
Enable/disable the POD mode			✓
Other settings			
Enable/disable the standby mode	✓		
Read (display) the device settings			✓

Switching the Display Source

You can switch the display source using either the panel pushbuttons, IR remote control unit, or RS-232 serial controller:

- ◆ Panel pushbuttons

Press the **Port Selection Pushbutton** that corresponds to the source you wish to switch to. The corresponding Port LED lights green to indicate that the source is selected.

- ◆ IR remote control unit

Aim the IR remote control unit at the VS0801HB and press the corresponding **Port Selection Button**. Alternatively, cycle through the available sources by pressing the **Port Up** button to cycle forward (e.g. from source 1 to 2), and the **Port Down** button to cycle backward (e.g. from source 2 to 1).

- ◆ RS-232 serial controller

You can switch the display to a specific source by executing RS-232 commands. For detailed steps, refer to the *RS-232 Commands*, page 15.

Note:

- ◆ Make sure to use the IR mote control unit within the effective range (6 m).
 - ◆ For optimum performance, make sure there is a clear line-of-sight between the remote control unit and the connected IR receiver on the VS0801HB.
-

Setting the Switch Mode

You can have VS0801HB automatically switch ports for display. The VS0801HB supports the following switch modes:

Switch Mode	Description
off mode	The VS0801HB does not switch ports automatically.
next mode (default)	The VS0801HB switches to the next port that has a new source device connected to it.
priority mode	The VS0801HB switches to and only displays the source from a user-defined port as soon as a source is detected from the port.
POD mode	The Power-on Detection (POD) mode allows the VS0801HB to automatically switch to the next port with a powered-on source device when the currently connected source device is powered off. The POD mode works independently of the other switch modes.

Enabling/Disabling the Next Mode

Use any of the following methods to enable/disable the next mode

- ◆ Device Panel
 - Put the Auto Switch to **ON** or **Off** to enable or disable the next mode respectively.
- ◆ RS-232 serial controller
 - Send an RS-232 command from the serial controller. For detailed steps, refer to the *Setting the Switch Mode*, page 13.

Note:

When the Auto Switch is put to **ON**, the VS0801HB will remain in next mode regardless of any RS-232 commands to set the unit into other switch modes.

Enabling/Disabling the Priority and the POD Mode

Send an RS-232 command from the serial controller. For detailed steps, refer to the *Setting the Switch Mode*, page 13.

Enabling/Disabling the Standby Mode

The standby mode is a low-power mode where the port selection pushbuttons, port LEDs, and IR receiver are disabled. To enable standby mode, press the **Power** button on the device panel; press again to disable the standby mode. When the standby mode is enabled, the port LEDs are immediately turned off, and the Power LED lights green.

Executing an RS-232 Command

1. Make sure you have connected a hardware device (e.g. PC) to the VS0801HB. For information on device requirements and installation, see *Optional Equipment*, page 3 and *Installation*, page 8 respectively.
2. Send the command from your serial controller. For details on RS-232 commands, see *RS-232 Commands*, page 15.

Restarting the VS0801HB

Make sure to follow the steps below to safely restart the VS0801HB.

1. Power off the attached devices.
2. Unplug the power adapter cable from the VS0801HB.
3. Wait 10 seconds, and then replug the power adapter cable
4. After the VS0801HB is powered on, power on the attached devices.

Note:

When the VS0801HB is restarted, it selects the first port detected with a powered-on source.

RS-232 Commands

Task	RS-232 Command	Description
Switch the source		
Switch the display to a specific source	sw i<source_number>	For example, to switch to source 1, type sw i01
Turn on the output port	sw on	-
Turn off the output port	sw off	-
Change the switch mode		
Enable the next mode (Default)	swmode next	The VS0801HB switches to the next port that has a new source device connected to it.
Enable the priority mode	swmode i<source_number> priority	The VS0801HB switches to and only displays the source from a user-defined port as soon as a source is detected from the port. For example, to prioritize port 1, type swmode i01 priority
Disable the switch mode	swmode off	Disable the switch mode and the VS0801HB does not switch ports automatically.
Enable the POD mode	swmode pod on	The Power-on Detection (POD) mode allows the VS0801HB to automatically switch to the next port with a powered-on source device when the currently connected source device is powered off.
Disable the POD mode	swmode pod off	The POD mode works independently of the other switch modes.
Other		
Read (display) the VS0801HB's settings	read	-

Note: Separate each command string with a space.

This Page Intentionally Left Blank

Safety Instructions

General

- ◆ This product is for indoor use only.
- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.

- ◆ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- ◆ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - ◆ The power cord or plug has become damaged or frayed.
 - ◆ Liquid has been spilled into the device.
 - ◆ The device has been exposed to rain or water.
 - ◆ The device has been dropped, or the cabinet has been damaged.
 - ◆ The device exhibits a distinct change in performance, indicating a need for service.
 - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

Rack Mounting

- ◆ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ◆ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ◆ Make sure that the rack is level and stable before extending a device from the rack.
- ◆ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ◆ After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- ◆ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ◆ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ◆ Ensure that proper airflow is provided to devices in the rack.
- ◆ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- ◆ Do not step on or stand on any device when servicing other devices in a rack.

Technical Support

International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: <http://support.aten.com>
- ◆ For telephone support, See *Telephone Support*, page vi:

North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	http://www.aten-usa.com/support
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ◆ Product model number, serial number, and date of purchase
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software
- ◆ Any error messages displayed at the time the error occurred
- ◆ The sequence of operations that led up to the error.
- ◆ Any other information you feel may be of help

Specifications

Function	Specifications	
Video Input		
Interfaces	8 x HDMI Type A Female (Black)	
Impedance	100 Ω	
Max. Distance	3 m	
Video Output		
Interfaces	1 x HDMI Type A Female (Black)	
Impedance	100 Ω	
Video		
Max. Data Rate	18 Gbps (6 Gbps per lane)	
Max. Pixel Clock	600 MHz	
Compliance	HDMI 2.0 (3D, Deep Color)	
	HDCP 2.2	
	Consumer Electronics Control (CEC)	
Max. Resolutions	Up to 4096 x 2160 / 3840 x 2160 @ 60Hz (4:4:4)	
Max Distance	Up to 3 m	
Audio		
Input	8 x HDMI Type A Female (Black)	
Output	1 x HDMI Type A Female (Black)	
Control		
RS-232	Connectors	1 x DB-9 Female (Black)
	Baud Rate	19200
	Data Bits	8
	Stop Bits	1
	Parity	No
	Flow Control	No
IR	1 x Mini Stereo Jack Female (Black)	
Power		
Connectors	1 x DC Jack (Black)	
Consumption	5 VDC, 14.84W	
Environmental		

Function	Specifications
Operating Temperature	0 - 40°C
Storage Temperature	-20 - 60°C
Humidity	0 x 80% RH, Non-Condensing
Physical Properties	
Housing	Metal
Weight	2.14 Kg (4.72 lb)
Dimensions (L x W x H)	48.3 x 15.8 x 4.4 cm (19.0 x 6.2 x 1.7 in)

Limited Warranty

ATEN warrants its hardware in the country of purchase against flaws in materials and workmanship for a Warranty Period of two [2] years (warranty period may vary in certain regions/countries) commencing on the date of original purchase. This warranty period includes the LCD panel of ATEN LCD KVM switches. Select products are warranted for an additional year (see *A+ Warranty* for further details). Cables and accessories are not covered by the Standard Warranty.

What is covered by the Limited Hardware Warranty

ATEN will provide a repair service, without charge, during the Warranty Period. If a product is defective, ATEN will, at its discretion, have the option to (1) repair said product with new or repaired components, or (2) replace the entire product with an identical product or with a similar product which fulfills the same function as the defective product. Replaced products assume the warranty of the original product for the remaining period or a period of 90 days, whichever is longer. When the products or components are replaced, the replacing articles shall become customer property and the replaced articles shall become the property of ATEN.

To learn more about our warranty policies, please visit our website:

<http://www.aten.com/global/en/legal/policies/warranty-policy/>