



LevelOne

User Manual

WBR-6805

300Mbps Wireless Travel Router

Ver. 1.0

FCC Certifications



Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CE Mark Warning



This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class B for ITE, the essential protection requirement of Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility and R&TTE Directive 1999/5/EC to meet the regulation of the radio equipment and telecommunications terminal equipment.

Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information. No part of this document can be copied or reproduced in any form without written consent from the company.

Trademarks:

All trade names and trademarks are the properties of their respective companies.

Copyright © 2011, All Rights Reserved.

General Public License

This product incorporates open source code into the software and therefore falls under the guidelines governed by the General Public License (GPL) agreement.

Adhering to the GPL requirements, the open source code and open source license for the source code are available for free download at <http://global.level1.com>.

If you would like a copy of the GPL or other open source code in this software on a physical CD medium, LevelOne (Digital Data Communications) offers to mail this CD to you upon request, for a price of US\$9.99 plus the cost of shipping.

Default Settings

IP Address	192.168.1.1
Password	admin
Wireless Mode	Enable
Wireless SSID	LevelOne
Security	None

Contents

Unpacking Information	5
Chapter 1 Introduction to the Wireless Router	6
1.1 General Description	6
1.2 Key Features	6
1.3 The Front Panel	7
1.4 The Rear Panel	8
Chapter 2 Installation and Basic Configuration	9
2.1 Operation Mode	9
2.2 Connect This Router to Your Network	9
2.3 Configure the IP Address of Your Computer	10
Chapter 3 Web-Based Management	13
3.1 Start the Web-Based Management Interface	13
3.2 The Graphic User Interface	14
3.3 Setup Wizard	17
3.4 Wireless	20
3.4.1 Basic Settings	20
3.4.2 Advanced Settings	23
3.4.3 Security	24
3.4.4 Access Control	28
3.4.5 Wireless Site Survey	29
3.4.6 WPS Settings	33
3.5 TCP/IP Settings	35
3.5.1 LAN Interface Setup	35
3.5.2 WAN Interface Setup	36
3.6 Firewall Settings	41
MAC Filtering	41
3.7 Management	42
3.7.1 Status	42
3.7.2 Statistics	43
3.7.3 Log	43
3.7.4 Upgrade Firmware	44
3.7.5 Save/Reload Setting	45
3.7.6 Password	45
3.7.7 Logout	46
Appendix A: Product Specifications	47
Appendix B: Glossary	48

Unpacking Information

Thank you for purchasing the product. Before you start, please check all the contents of this package.

The product package should include the following:

1. WBR-6805 300Mbps Wireless Travel Router
2. Power Adapter
3. USB Cable
4. CD-ROM with Manual and QIG
5. Quick Installation Guide

Note:

Make sure that the package contains the above items. If any of the listed items are damaged or missing, please contact with your distributor.

Conventions

The router mentioned in this guide stands for IEEE 802.11n Wireless 2T2R Router without any explanation.

Chapter 1 Introduction to the Wireless Router

1.1 General Description

This is a wireless router with 2T2R MIMO technology, providing an excellent network solution for home, SOHO and hotspot users. It complies with standards IEEE 802.11n with data rate up to 300 Mbps, and IEEE 802.11b/g with maximum data rate of 54 Mbps. It can also interoperate with all the 11/54 Mbps wireless (802.11b/g) products.

The router allows multiple users to share one broadband connection, as well as secures your private network. LAN users can share files, printers, or playing network games all at a blazing speed in a large area.

As to information security, this router supports up-to-date security encryption, such as WPA, WPA2, open shared key, and pair-wise key authentication services, ensuring you the best encryption types. What's more, this router supports energy efficient Ethernet and saves power consumption, preferring a cost-effective network connection.

1.2 Key Features

- Comply with IEEE 802.11n and IEEE802.11b/g wireless standards
- 2.4GHz frequency band and 2T2R and high speed transfer rate up to 300Mbps
- Support auto-MDI/MDI-X, backpressure and flow control
- Support Wireless access control by MAC address (deny or accept)
- Support wireless encryption for WEP, WPA-PSK, WPA2-PSK and WPA2-Mixed
- Support WAN Access Type: Static IP, DHCP Client, PPPoE
- Support IEEE802.3az Energy Efficient Ethernet
- Provide one WPS/Reset button
- Provide one slide switch to control AP/Router/Client mode
- Support WMM funcion. NAT IP Sharing. WPS in AP and client mode.
- Support Multiple APs(up to 4 AP SSID(including primary)) in Router and AP mode.
- Support Firewall security with MAC filtering.
- Supports DHCP server to provide clients auto IP addresses assignment
- Supports Statistics, VPN Pass-through, System Log
- Support universal repeater mode (one wlan interface used as AP and client concurrently) in Client Operation Mode

1.3 The Front Panel

The front panel of the Wireless Router:



Name	Status	Indication
PWR	Green	Power on
	Dark	Power off
WPS	Blink green one time	System reboot
	Blink green	WPS connecting
	Dark	System stability
WLAN	Off	The wireless function is disabled.
	Flashing	The wireless function is enabled.
	Flashing fast	Sending or receiving data over wireless.
WAN / LAN	Off	There is no device linked to the corresponding port or the connection is dropping off.
	On	There are devices linked to the corresponding ports but no data transmitted or received.
	Flashing	Sending or receiving data over corresponding port.

1.4 The Rear Panel

The rear panel of the Wireless Router is shown below.



- **LAN:** Through this port, you can connect the router to your PCs and the other Ethernet network devices.
- **WAN:** This WAN port is where you will connect the cable/DSL Modem, or Ethernet.
- **DC IN:** Plug the circle end of the USB cable firmly into the rear panel of the router, and put the other end into an electric service outlet, then the system is ready.
- **WPS/Reset Button:**
Click this button for once it means to start PBC configuration method, in which users can easy setup WPS connection.
If you push the button for more than 5 seconds and then release it, the system will return to factory default setting. In the meantime, system rewrites flash to default value and then system reboot. Approximately 60 seconds later, the whole system parameters have returned to factory default value. If the process has been interrupted by any reason(like power off), the system will fail. Before perform the process, please ensure a safe operating environment!
- **Antenna:** The function of the antenna is to enhance the wireless signal and expand the range of signal.

Warning : Incomplete factory setting recovery procedure will cause the Wireless Router malfunction ! If you are unfortunately in this situation, do not try to repair it by yourself. Consult your local distributor for help!

Chapter 2 Installation and Basic Configuration

This chapter will guide you steps by steps to install and configure the Wireless Router. We suggest you go over the whole chapter first and then do more advanced operation.

2.1 Operation Mode

In this device, there are three modes for your selection:

- **AP mode**
- **Router mode**
- **Client mode**



Different mode functions different. You can glide the slide switch on the left side of the device to the left hand side (AP mode), middle (Router mode) or right hand side (Client mode) to choose the mode you want.

Before installation, please choose an operation mode first and then go on other configurations.

2.2 Connect This Router to Your Network

Steps to build up the network:

1. Connect the phone line from the wall socket to the line-in port on the ADSL modem, or the coaxial cable to the line-in port on the cable modem.
2. **A---Router Mode:** Connect the ADSL or cable modem to the Ethernet WAN port on the back of the Wireless Router by using the UTP cable.
B---AP Mode: Connect a router to one of the two ports on the back of this device by using the UTP cable.
C---Client Mode: Go to steps 3 directly.
3. Plug-in the USB cable to the modem and turn on the power. Install the Ethernet card into the computer by referring to the User Guide that came with the card.
4. Connect the computer to the Wireless Router by using standard twisted-pair Ethernet cable from the computer's Ethernet card to a 10/100Mbps Ethernet LAN port on the back of the Wireless Router. (In AP/Client mode both the ports can be used as LAN ports)
5. Plug the USB cable (mini-USB cable) into the router port and put the other end into an electric service outlet (recommend output value: 5V/1A DC).

2.3 Configure the IP Address of Your Computer

In order to communicate with this Wireless Router, you have to configure the IP address of your computer to make it compatible with the device.

Note: The router supports DHCP server and it is enabled as default. Users who configure his IP address as “**Obtain an IP address automatically**” may skip the following IP configuration instruction.

1. The default network setting of the device:

IP address: 192.168.1.1


Subnet Mask: 255.255.255.0

DHCP Server: enable


2. In the following TCP/IP configuration guide, the IP address “192.168.1.2” is assumed to be your IP address if you want to specify IP addresses manually. Please **DO NOT** choose “192.168.1.1” as the IP address, for the IP address “192.168.1.1” has been set as the default IP for this device.
3. The following TCP/IP configuration guide uses windows XP as the presumed operation system.

Procedures to configure IP addresses for your computer:


1. If you are in Classic Start menu view, click **Start > Settings > Network Connections**.
If you are in Start menu view, click **Start > Control Panel > Network Connections**.

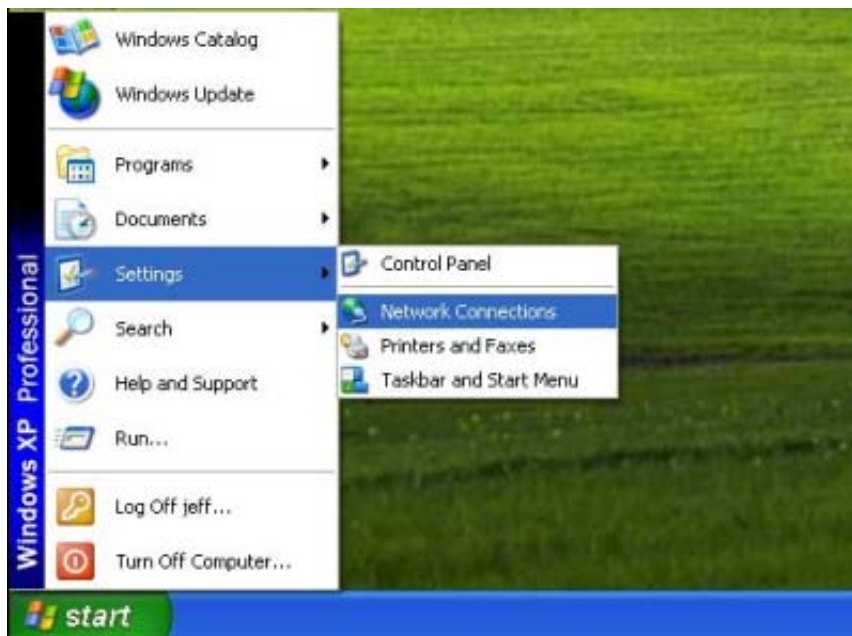


2. Right-click **Local Area Connection** item and click **Properties**.

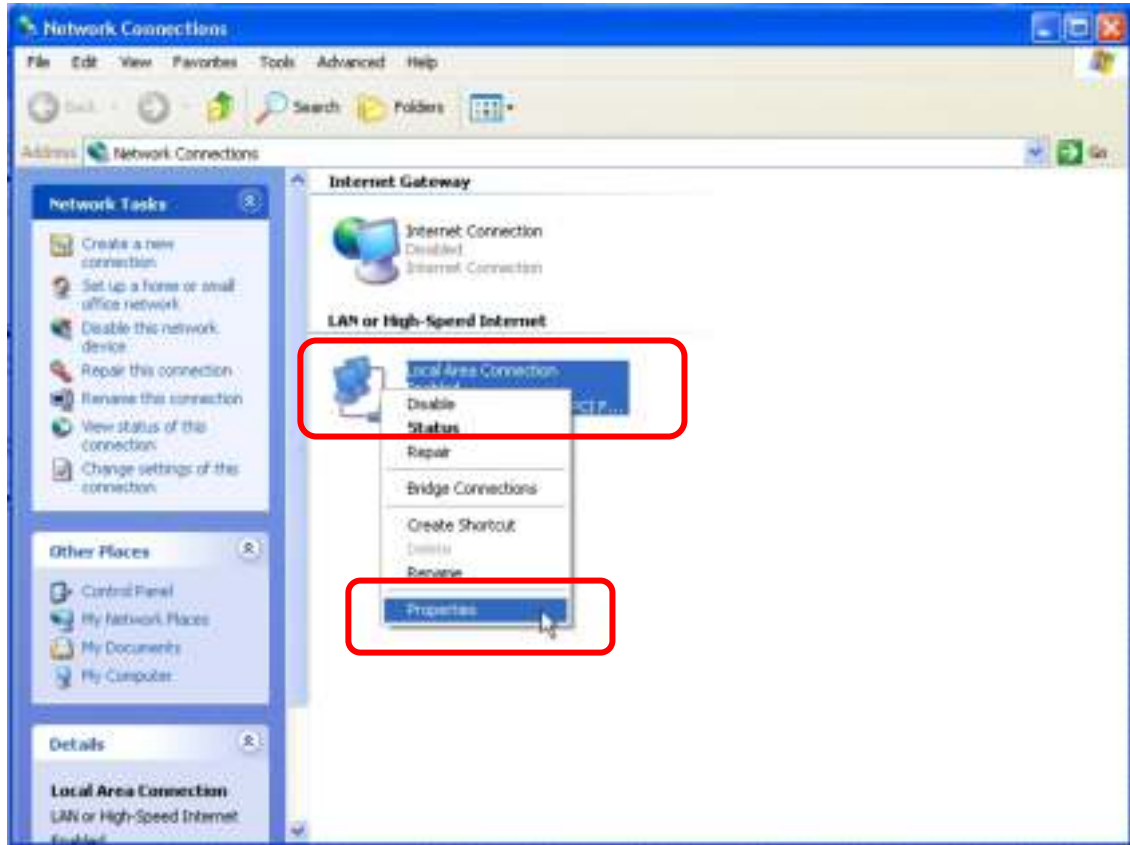

3. Choose **Internet Protocol (TCP/IP)** and click **Properties**.

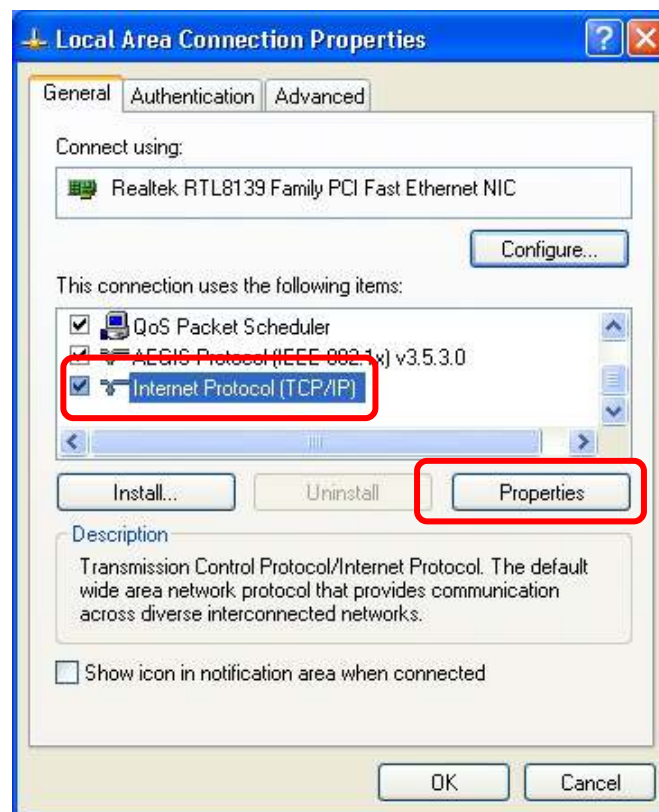

4. You may choose **Obtain an IP address automatically** (recommend) to get an IP address automatically. Or you can choose **Use the following IP address** to specify an IP address manually. Please click the **OK** button after your configuration.

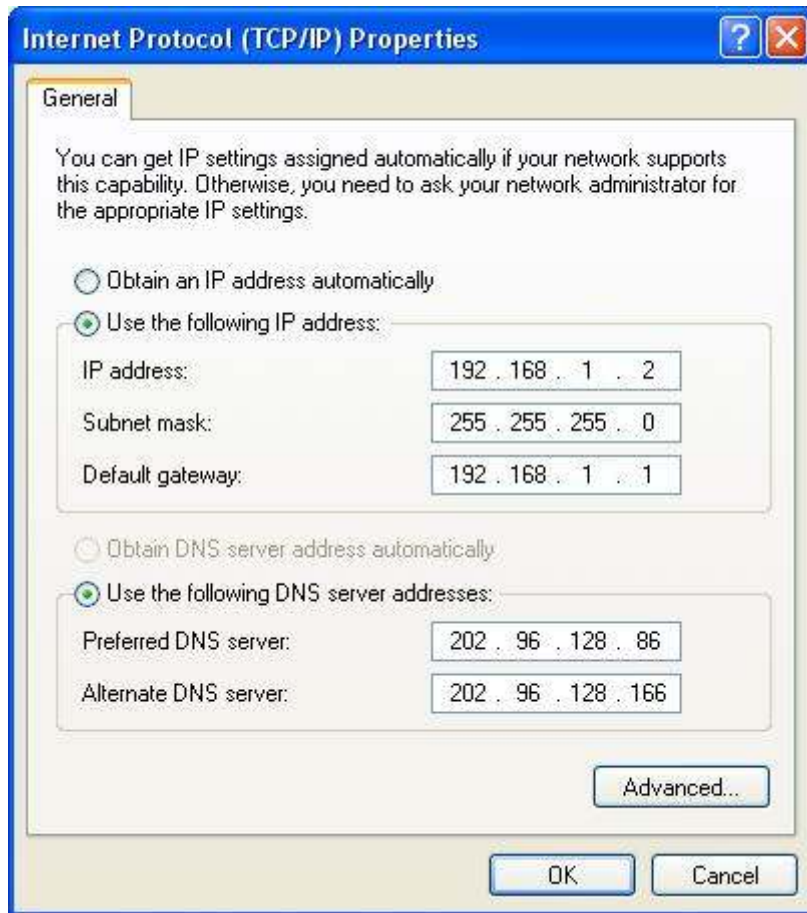

Chapter 3 Web-Based Management

3.1 Start the Web-Based Management Interface

The device uses Web as the management interface. You can use a browser to access the management interface easily. Please follow the steps listed below.


1. Open the Internet Web browser.
2. Type **192.168.1.1** into the URL Web address location and press Enter.
3. The Login window appears.
 - Enter **admin** in the User Name location (default value).
 - Enter **admin** in the Password location (default value).
 - Click **OK** button.



3.2 The Graphic User Interface

After the password authorization, the information page shows up as the home page of the graphic user interface. You may click the menu link on left column of the window to get access to each configuration page.

Router Mode:

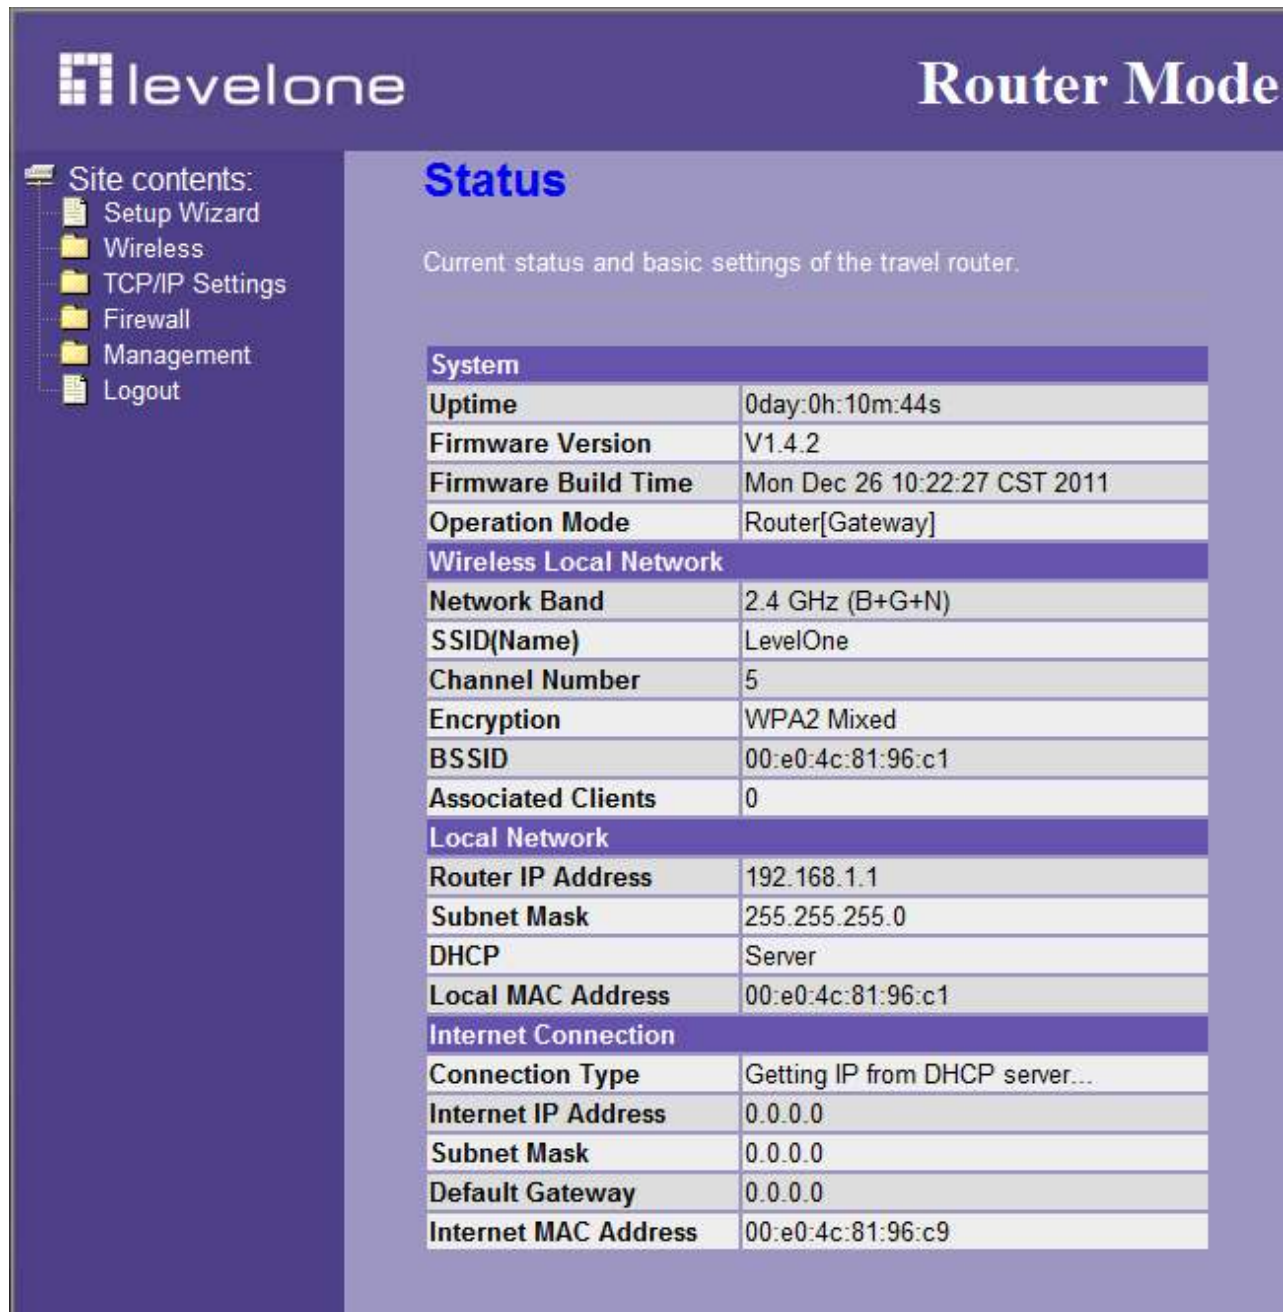

The screenshot displays the LevelOne Router Mode web interface. The top header features the LevelOne logo on the left and "Router Mode" on the right. A left-hand navigation menu lists "Site contents:" with sub-items: "Setup Wizard", "Wireless", "TCP/IP Settings", "Firewall", "Management", and "Logout". The main content area is titled "Status" and includes a sub-header "Current status and basic settings of the travel router." Below this is a table of system and network parameters.

System	
Uptime	0day:0h:10m:44s
Firmware Version	V1.4.2
Firmware Build Time	Mon Dec 26 10:22:27 CST 2011
Operation Mode	Router[Gateway]
Wireless Local Network	
Network Band	2.4 GHz (B+G+N)
SSID(Name)	LevelOne
Channel Number	5
Encryption	WPA2 Mixed
BSSID	00:e0:4c:81:96:c1
Associated Clients	0
Local Network	
Router IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP	Server
Local MAC Address	00:e0:4c:81:96:c1
Internet Connection	
Connection Type	Getting IP from DHCP server...
Internet IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
Internet MAC Address	00:e0:4c:81:96:c9

AP Mode:

The screenshot displays the LevelOne AP Mode configuration interface. The top left features the LevelOne logo, and the top right shows 'AP Mode'. A sidebar on the left lists 'Site contents' with options: Setup Wizard, Wireless, TCP/IP Settings, Management, and Logout. The main content area is titled 'Status' and includes a description: 'Current status and basic settings of the travel router.' Below this, there are three tables: 'System', 'Wireless Local Network', and 'Local Network', each listing various parameters and their values.

System	
Uptime	0day:0h:0m:25s
Firmware Version	V1.4.2
Firmware Build Time	Mon Dec 26 10:22:27 CST 2011
Operation Mode	AP[Bridge]

Wireless Local Network	
Network Band	2.4 GHz (B+G+N)
SSID(Name)	LevelOne
Channel Number	1
Encryption	WPA2 Mixed
BSSID	00:e0:4c:81:96:c1
Associated Clients	0

Local Network	
Router IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP	Disabled
Local MAC Address	00:e0:4c:81:96:c1

Client Mode:

The screenshot displays the LevelOne Client Mode web interface. The top header features the LevelOne logo on the left and the text "Client Mode" on the right. A left-hand navigation menu lists "Site contents:" with sub-items: "Wireless", "TCP/IP Settings", "Firewall", "Management", and "Logout". The main content area is titled "Status" and includes a descriptive sentence: "Current status and basic settings of the travel router." Below this, there are several tables of configuration data:

System	
Uptime	0day:0h:0m:19s
Firmware Version	V1.4.2
Firmware Build Time	Mon Dec 26 10:22:27 CST 2011
Operation Mode	Client

Wireless Internet Network	
Network Band	2.4 GHz (B+G+N)
Internet SSID(Name)	LevelOne
Channel Number	2
Encryption	WPA2 Mixed
BSSID	00:e0:4c:81:96:c1
State	Started

Wireless Local Network	
SSID(Name)	LevelOne
Encryption	Disabled
BSSID	00:00:00:00:00:00
Associated Clients	0

Local Network	
Router IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP	Server
Local MAC Address	00:e0:4c:81:96:c1


Internet Connection	
Connection Type	Getting IP from DHCP server...
Internet IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
Internet MAC Address	00:e0:4c:81:96:c1

3.3 Setup Wizard


If you are using the router for the first time, please follow the procedures of the setup wizard to do a step-by-step configuration.

Note: The configurations in AP, Router and Client modes are almost the same. The following guide mainly introduces this device under the Router mode environment. Users want to do management in AP/Client mode please refer to the Router mode. The following instruction makes an overall introduction to the Setup Wizard


1. Click “Setup Wizard” on the left menu link, and then click the “Next” button to proceed.

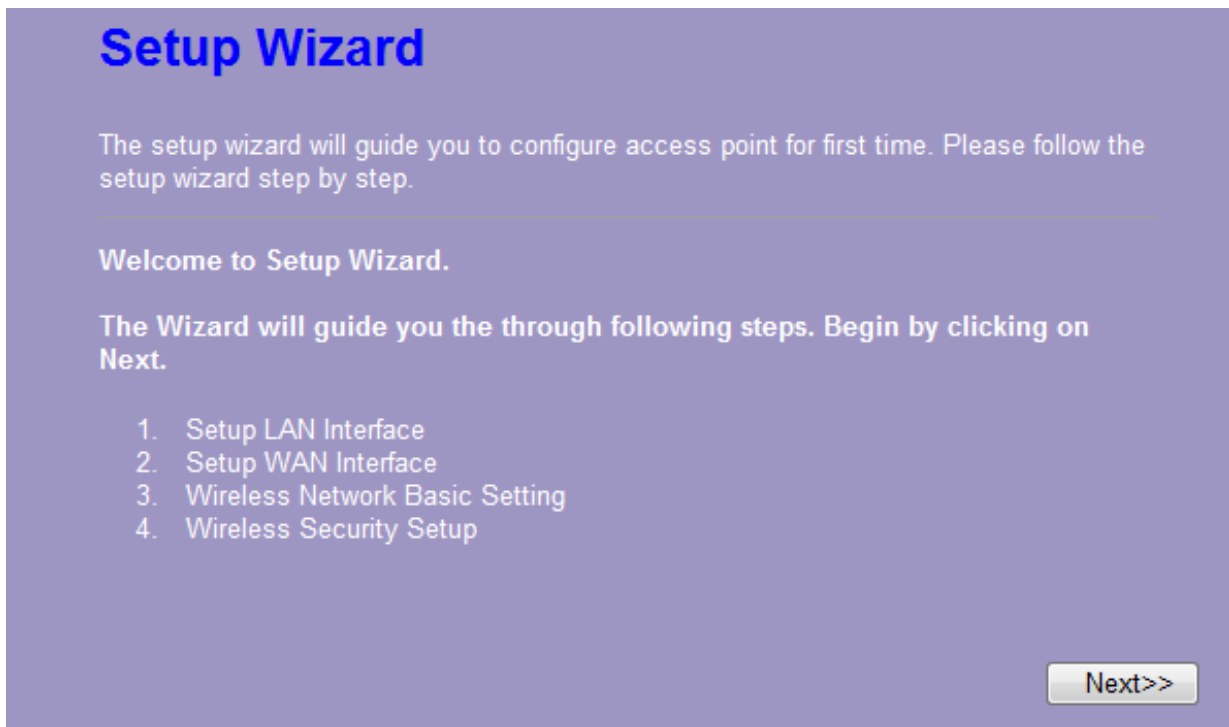

2. Click “Next” button, the “LAN Interface Setup” pops out.

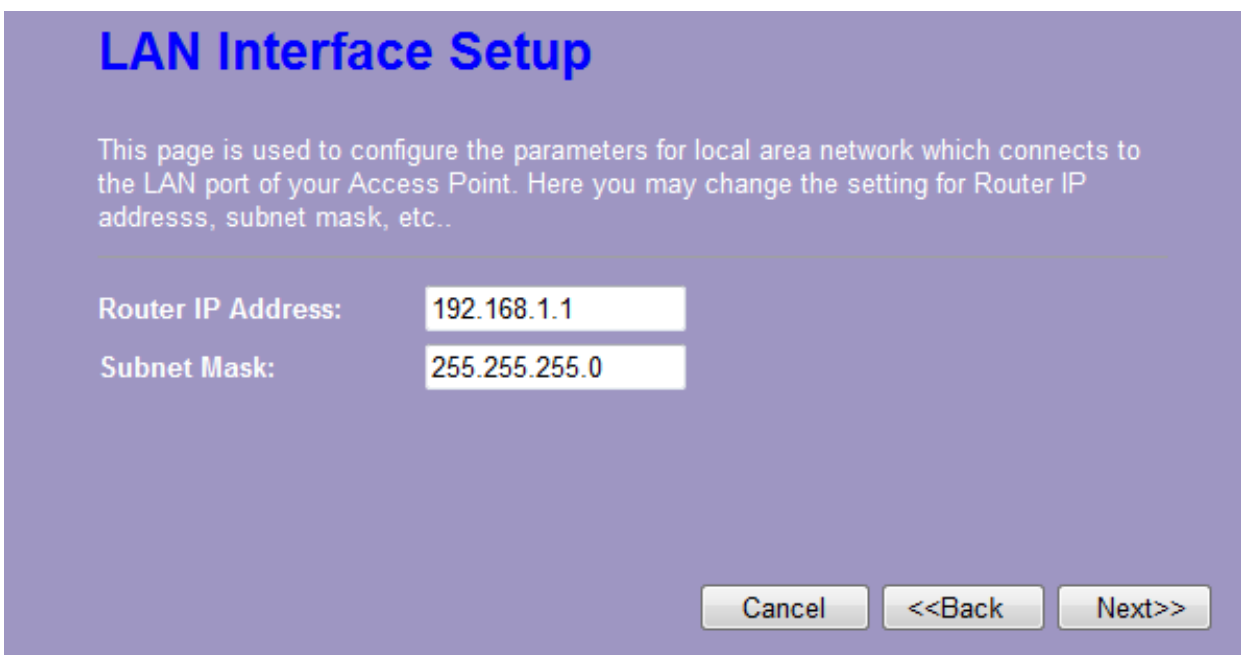

3. Click “Next” button, the “WAN Interface Setup” pops out. Or you can click “Back/Cancel” for any changing. You may get those parameters from your ISP. WAN Access Type: Static IP, DHCP Client and PPPoE.

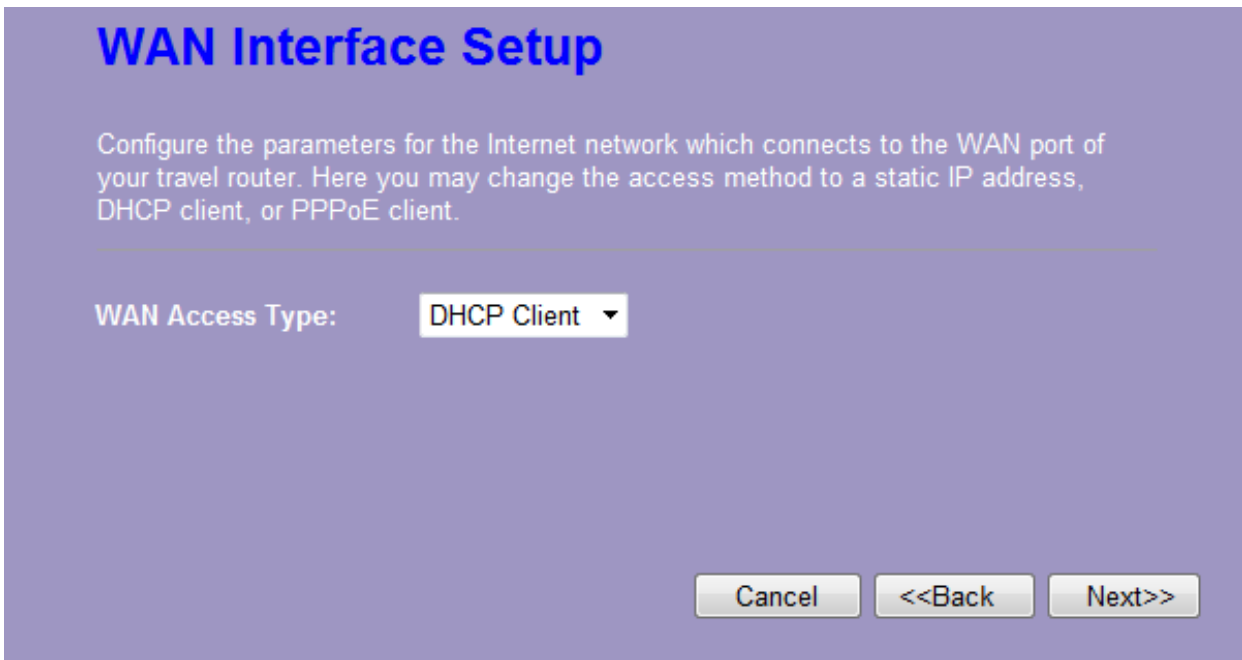


WAN Interface Setup

Configure the parameters for the Internet network which connects to the WAN port of your travel router. Here you may change the access method to a static IP address, DHCP client, or PPPoE client.

WAN Access Type:

4. Click “Next” button, the “Wireless Network Basic Settings” pops out.

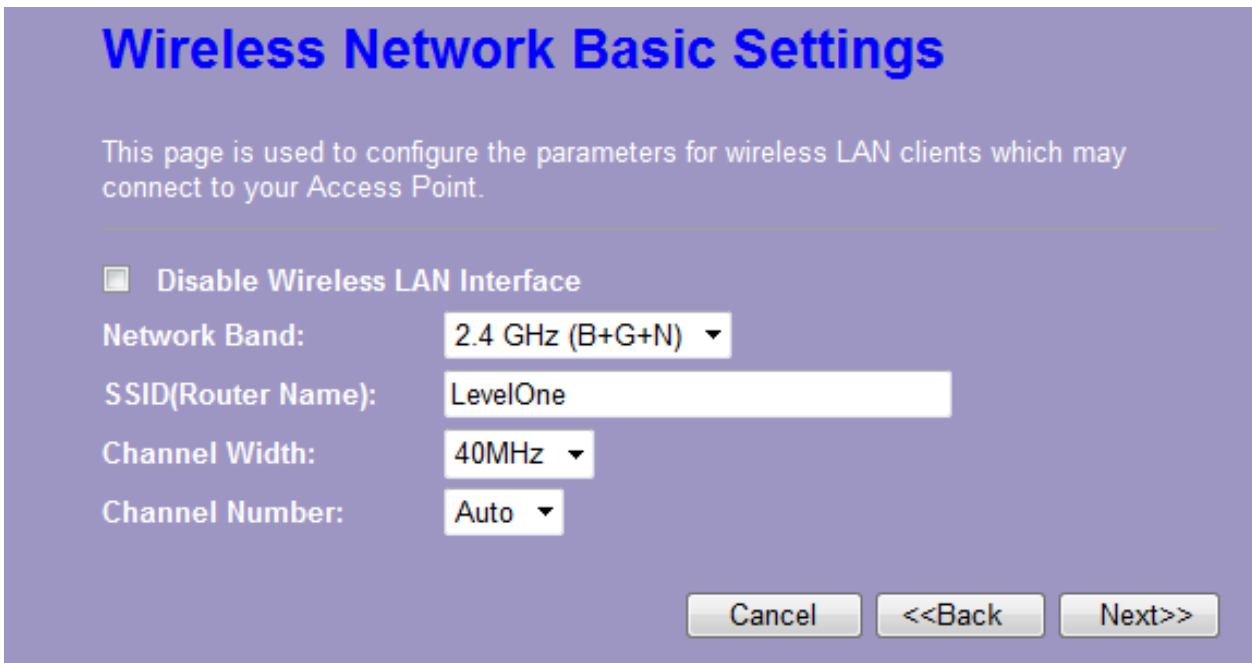

Wireless Network Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point.

Disable Wireless LAN Interface

Network Band:

SSID(Router Name):

Channel Width:

Channel Number:

5. Click “Next” button, the “Wireless Security Setup” pops out.




Having finished these steps, you can use the router to surf the Internet. If you need more detailed information, please refer to the following instruction.

3.4 Wireless

In Client mode, the Wireless interface default support universal repeater (one wlan interface used as AP and client concurrently) function; you can set wireless client mode connect Access Point, and then the Virtual AP mode can sharing IP to Wireless Clients.

3.4.1 Basic Settings


You can set up the configuration of your Wireless basic settings and monitor the Wireless Clients associate with your router.


Items	Information
Disable Wireless Network	Mark the checkbox to disable the Wireless Network.
Network Band	We provide six modes for your selection: 2.4GHz (B), 2.4 GHz (G), 2.4 GHz (N), 2.4GHz (B+G), 2.4 GHz (G+N), 2.4 GHz (B+G+N). Click the drop list, you may select one type of network band.
Multiple AP	The  button is to show and update the wireless settings for Multiple APs. Click this button to do more configurations.

	Note: This function only support in Router & AP mode, not support in Client mode.
Wireless Mode	In the drop list, there are two types of wireless mode: "AP" and "Client". You may select one type for your configuration. Note: This fuction only support in AP mode.
SSID	Service set identifier (SSID) for the name of the wireless network. In Client Mode, this SSID is used for setting Virtual AP's name.
Channel Width	Select 20MHz or 40MHz (40MHz only support in 11n mode) as the wireless channel frequency.
Channel Number	Select a channel for the wireless network of this device.
Country	It contains USA(FCC), Canada(IC), Europe(ETSI), Spain, France, Japan(MKK) for your selection.
Broadcast SSID	If you enable "Broadcast SSID", every wireless station located within the coverage of this wireless router can discover this wireless router easily. If you are building a public wireless network, enabling this feature is recommended. Disabling "Broadcast SSID" can be more safe.
Associated Client	Click "Show Active Clients" button, then an "Active Wireless Client Table" will pop up. You can see the status of all active wireless stations that are connecting to the access point.

* Please click on the **Apply Changes** button or the **Reset** button at the bottom to save/reset the configurations.

1. Multiple APs

This is the window that pops up after clicking the  button.

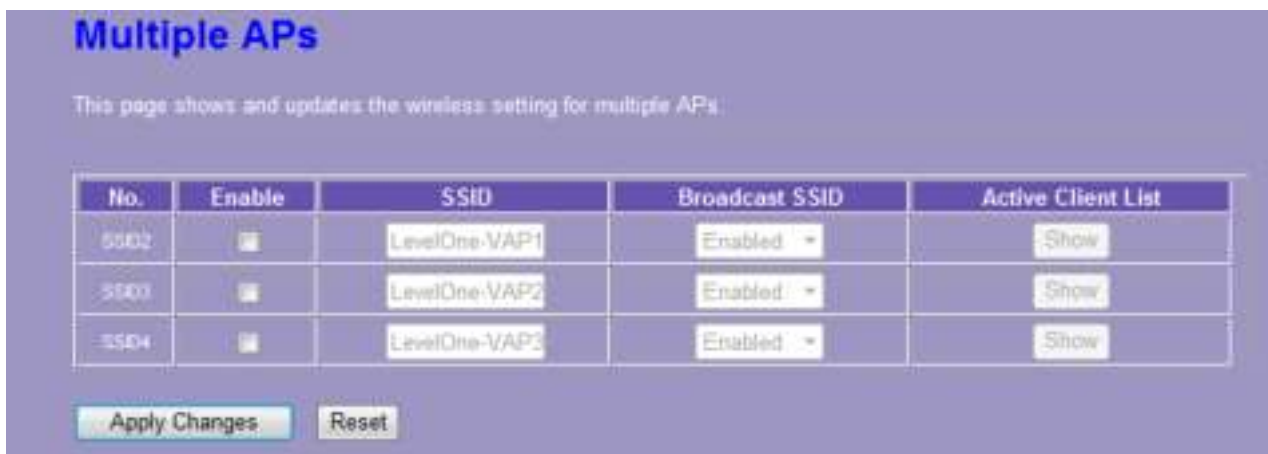

Multiple APs

This page shows and updates the wireless setting for multiple APs.

No.	Enable	SSID	Broadcast SSID	Active Client List
SS02	<input checked="" type="checkbox"/>	LevelOne-VAP1	Enabled ▾	Show
SS03	<input checked="" type="checkbox"/>	LevelOne-VAP2	Enabled ▾	Show
SS04	<input checked="" type="checkbox"/>	LevelOne-VAP3	Enabled ▾	Show

Apply Changes **Reset**

Click “Enable” to activate this AP, and then click the button “Show”, “Active Wireless Client Table – AP1” window pops up as the following:

Active Wireless Client Table - AP1

This table shows the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client.

MAC Address	Mode	Tx Packet	Rx Packet	Tx Rate (Mbps)	Power Saving	Expired Time (s)
None	---	---	---	---	---	---

2. Active Wireless Client Table

This is the window that pops up after clicking the button.

Active Wireless Client Table

This table shows the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client.

MAC Address	Mode	Tx Packet	Rx Packet	Tx Rate (Mbps)	Power Saving	Expired Time (s)
None	---	---	---	---	---	---

3.4.2 Advanced Settings

You can set advanced wireless LAN parameters for this router. We recommend not changing these parameters unless you know what changes will be on this router.

Wireless Advanced Settings

For technically advanced users who have a sufficient knowledge of wireless LANs. These settings should not be modified unless you know the effect the changes will have on your travel router.

Fragment Threshold: (256-2346)

RTS Threshold: (0-2347)

Beacon Interval: (20-1024 ms)

Preamble Type: Long Preamble Short Preamble

RF Output Power: 100% 70% 50% 35% 15%

Items	Information
Fragment Threshold	This value should remain at its default setting of 2346. If you experience a high packet error rate, you may slightly increase your fragmentation threshold within the value range of 256 to 2346. Setting the fragmentation threshold too low may result in poor performance.
RTS Threshold	Request To Send threshold. This value should remain at its default setting of 2347. If you encounter inconsistent data flow, only minor modifications to the value range between 0 and 2347 are recommended.
Beacon Interval	Beacons are packets sent by an access point to synchronize a wireless network. Specify a beacon interval value. Default (100ms) is recommended.
Preamble Type	The length of CRC blocks in the frames during the wireless communication.
RF Output Power	Select the signal strength for the wireless network.

* Please click on the **Apply Changes** button or the **Reset** button at the bottom to save/reset the configurations.

3.4.3 Security

The Security function protects your wireless network from invasion. We provide WEP and WPA encryption to secure your wireless network. Please select “Disable”, “WEP”, “WPA-PSK”, “WPA2-PSK”, or “WPA2-Mixed” in the drop list. If you select “Disable”, any data will be transmitted without encryption and any station can access the router.

Items	Information
Select SSID	Please choose a SSID you have set for this router in the Wireless > Basic Settings from the drop-down list. The SSID will be shown on the wireless network for recognizing.
Encryption	There are 5 modes for you to select: Disable, WEP, WPA-PSK, WPA2-PSK and WPA2-Mixed. Please refer to the following description. Note: WEP & TKIP unsupported in 11n Mode, It's only support in 11g mode. WPA2-Mixed Encryption unsupported in Client mode.
Show Password	Select to show the password or not.

* Please click on the **Apply Changes** button or the **Reset** button to save/reset the configurations.

1. Security Mode – Disable

Select “Disable” means to access your wireless network without any encryption.

Wireless Security Setup

Configure the wireless security for the travel router. Enable WEP or WPA encryption to prevent unauthorized access to your wireless network.

Select SSID:

Encryption:

2. Security Mode -- WEP

Wireless Security Setup

Configure the wireless security for the travel router. Enable WEP or WPA encryption to prevent unauthorized access to your wireless network.

Select SSID: LevelOne ▾

Encryption: WEP ▾

Authentication: Open System Shared Key Auto

Key Length: 64-bit ▾

Key Format: Hex (10 characters) ▾

Encryption Key:

Show Password:

Items	Information
Select SSID	Please choose a SSID you have set for this router in the Wireless > Basic Settings from the drop-down list. The SSID will be shown on the wireless network for recognizing.
Encryption	Select a security encryption mode for this router.
Authentication	There provide three options for selecting: Open System, Shared Key, Auto.
Key Length	Select "64-bit" or "128-bit" as the key encryption length.
Key Format	Select "ASCII ¹ " or "Hex ² " to setup the key value.
Encryption Key	Enter the key according to the key format you select.
Show Password	Select to show the password or not.

* Please click on the **Apply Changes** button or the **Reset** button to save/reset the configurations.

¹ ASCII (American Standard Code for Information Interchange) is a code for representing English letters as numbers from 0-127.

² Hexadecimal digits consist of the numbers 0-9 and the letters A-F.

3. Security Mode – WPA / WPA 2-PSK

Wireless Security Setup

Configure the wireless security for the travel router. Enable WEP or WPA encryption to prevent unauthorized access to your wireless network.

Select SSID: LevelOne ▾ Apply Changes Reset

Encryption: WPA ▾

WPA Cipher Suite: TKIP AES

Pre-Shared Key Format: Passphrase ▾

Pre-Shared Key:

Show Password:

Wireless Security Setup

Configure the wireless security for the travel router. Enable WEP or WPA encryption to prevent unauthorized access to your wireless network.

Select SSID: LevelOne ▾ Apply Changes Reset

Encryption: WPA2 ▾

WPA2 Cipher Suite: TKIP AES

Pre-Shared Key Format: Passphrase ▾

Pre-Shared Key:

Show Password:

Items	Information
Select SSID	Please choose a SSID you have set for this router by clicking “Wireless > Basic Settings” from the drop-down list. The SSID will be shown on the wireless network for your recognition.
Encryption	Select a security encryption mode for this router.
WPA/WPA2 Cipher Suite	WPA Cipher Suite: the default setting is TKIP. WPA2 Cipher Suite: the defaulting setting is AES

Pre-Shared Key Format	To decide the format, select “Passphrase” or “Hex” in the drop list.
Pre-Shared Key	Enter the “Pre-shared Key” according to the pre-shared key format you select. This is the shared secret between AP and STA. This field must be filled with character longer than 8 and less than 64 lengths.
Show Password	Select to show the password or not.

* Please click on the **Apply Changes** button or the **Reset** button to save/reset the configurations.

4. Security Mode – WPA2-Mixed

Items	Information
Select SSID	Please choose a SSID you have set for this router by clicking “Wireless > Basic Settings” from the drop-down list. The SSID will be shown on the wireless network for your recognition.
Encryption	Select a security encryption mode for this router.
WPA / WPA2 Cipher Suite	The Cipher Suite is mixed (TKIP and AES).
Pre-Shared Key Format	To decide the format, select “Passphrase” or “Hex” in the drop list.
Pre-Shared Key	Enter the “Pre-shared Key” according to the pre-shared key format you select. This field must be filled with character longer than 8 and less than 64 lengths.
Show Password	Select to show the password or not.

* Please click on the **Apply Changes** button or the **Reset** button to save/reset the configurations.

3.4.4 Access Control

To restrict the station access authentication of the clients, you can set up the control list in this page.

Wireless Access Control

"Allow Listed", wireless clients with a MAC address listed in the access control list will be able to connect to the travel router. "Deny Listed" wireless clients will not be able to connect to the travel router.

Wireless Access Control Mode: Disable ▼

MAC Address: Comment:

Apply Changes
Reset

Current Access Control List:

MAC Address	Comment	Select

Delete Selected
Delete All
Reset


Items	Information
Wireless Access Control Mode	Click the drop list to choose the access control mode. You may select "Allow listed" to give those MAC addresses access to this device or select "Deny Listed" to ban it or select "Disable".
MAC Address & Comment	Fill in the MAC address that you wish to control, and give a definition to it.
Current Access Control list	List the MAC Access Control settings you have added before. Click on the list to change configuration. To Delete the station on the list, mark the check box in the select item and click the "Delete Selected". If you want to delete all stations on the list, click "Delete All" to remove all of them.

* Please click on the **Apply Changes** button or the **Reset** button to save/reset the configurations.


3.4.5 Wireless Site Survey (only in AP mode and Client mode)

If you are under the **Wireless Client mode**, click **Wireless > Wireless Site Survey** in the menu links to display the screen as shown below.

1. The following page which provides tool to scan the wireless network pops out.

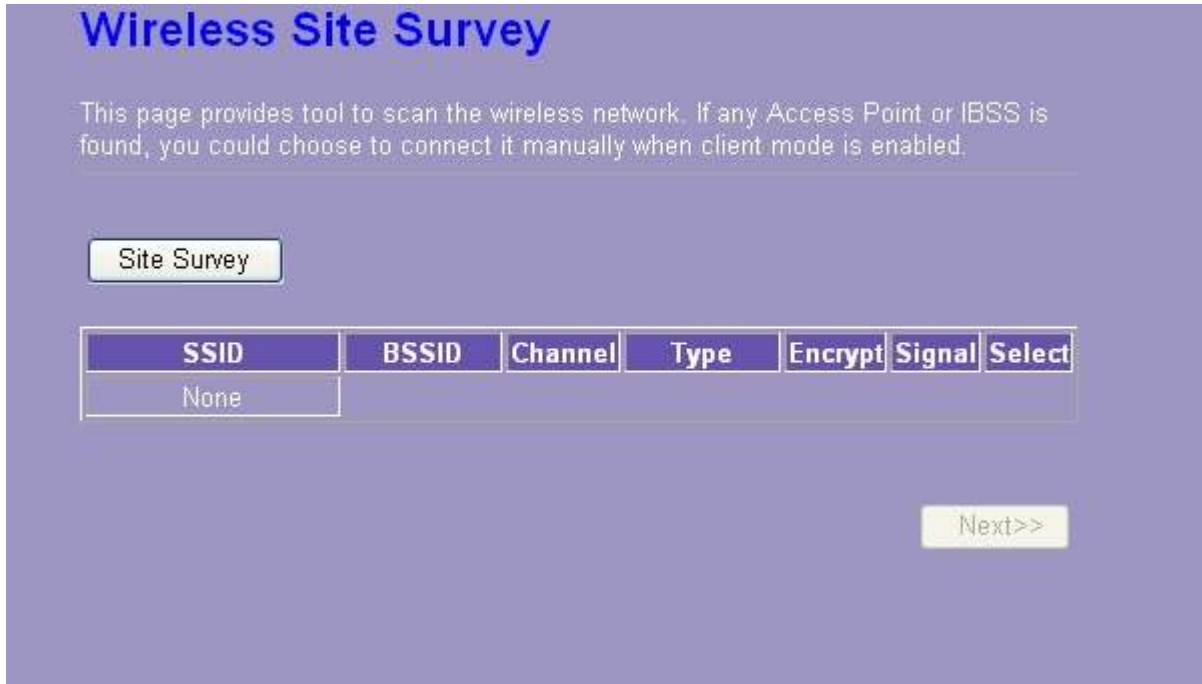

2. Click the “Site Survey” button can scan nearby Router and AP. This page shows the available wireless networks information. When you use this device as a station (STA), you may connect to other AP.

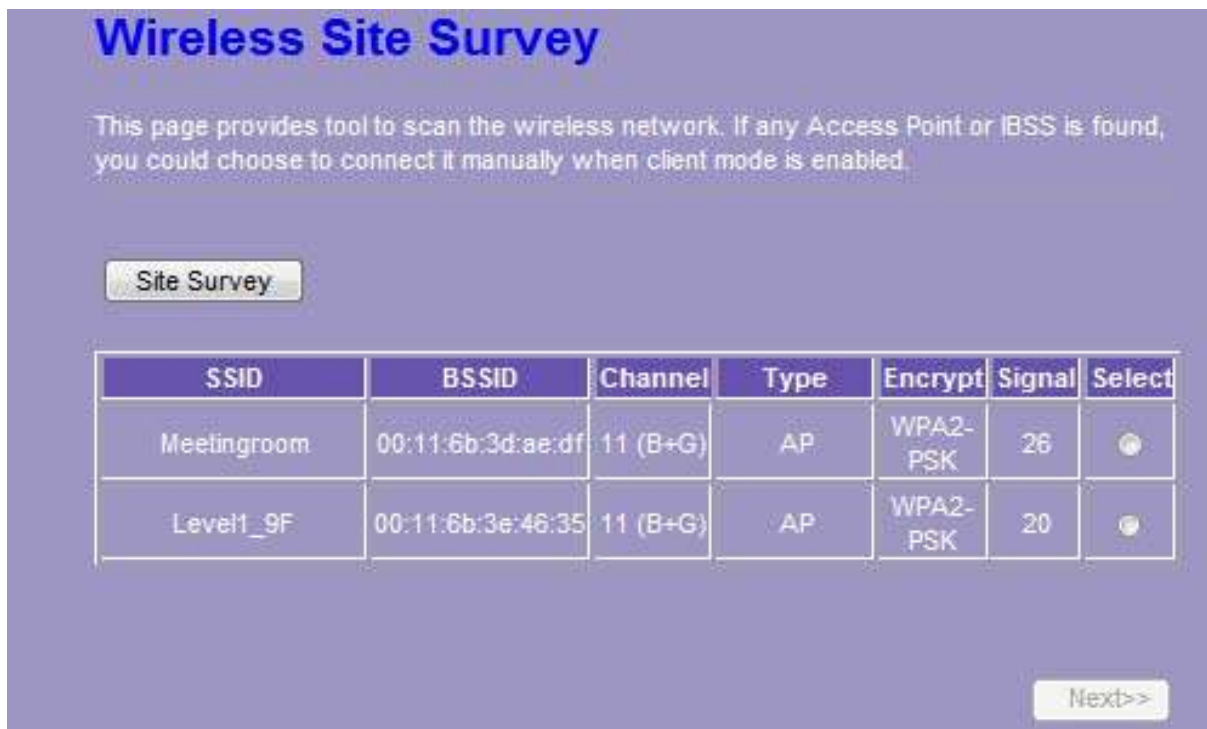

3. Select one of the networks existing in the list of the site survey table and then click “Next” button, then the following page pops out.

Wireless Site Survey

This page provides tool to scan the wireless network. If any Access Point or IBSS is found, you could choose to connect it manually when client mode is enabled.

Site Survey

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
Meetingroom	00:11:6b:3d:ae:df	11 (B+G)	AP	WPA2-PSK	26	<input checked="" type="radio"/>
Level1_9F	00:11:6b:3e:46:35	11 (B+G)	AP	WPA2-PSK	20	<input type="radio"/>

Next>>

4. In this page, you can input the selected AP’s password, then click “connect ” button to start connection with wireless network.

Wireless Site Survey

This page provides tool to scan the wireless network. If any Access Point or IBSS is found, you could choose to connect it manually when client mode is enabled.

Site Survey

Encryption: WEP ▼


Key Length: 64-bit ▼

Key Format: ASCII ▼

Key Setting:

<<Back Connect

5. In connection process, the following page pops out. Please waiting for the connection result.

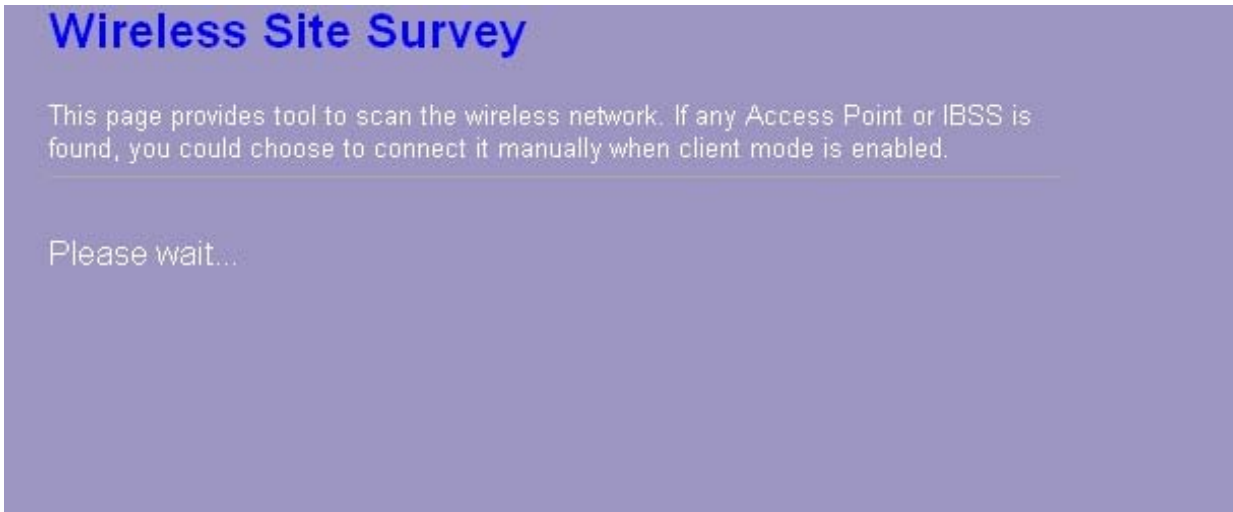

6. When connection is successful, the following page pops up.



7. You can go back to the Management > Status page and confirm the connection's states.

levelone **Client Mode**

Status

Current status and basic settings of the travel router.

System

Uptime	0day:0h:0m:19s
Firmware Version	V1.4.2
Firmware Build Time	Mon Dec 26 10:22:27 CST 2011
Operation Mode	Client

Wireless Internet Network

Network Band	2.4 GHz (B+G+N)
Internet SSID(Name)	LevelOne
Channel Number	2
Encryption	WPA2 Mixed
BSSID	00:e0:4c:81:96:c1
State	Started

Wireless Local Network

SSID(Name)	LevelOne
Encryption	Disabled
BSSID	00:00:00:00:00:00
Associated Clients	0

Local Network

Router IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP	Server
Local MAC Address	00:e0:4c:81:96:c1

Internet Connection


Connection Type	Getting IP from DHCP server...
Internet IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
Internet MAC Address	00:e0:4c:81:96:c1


Site contents:

- Wireless
- TCP/IP Settings
- Firewall
- Management
- Logout

3.4.6 WPS Settings

The primary goal of Wi-Fi Protected Setup (Wi-Fi Simple Configuration) is to simplify the security setup and management of Wi-Fi networks. This router supports the configuration setup using PIN configuration method or PBC configuration method through an internal or external registrar.

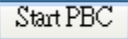Items	Information
Disable WPS	Click this checkbox to undo WPS.
WPS Status	You cannot manually select the items here. The WPS Status will change from “UnConfigured” to “Configured” after you enable WPS function and setup a wireless security key for this device.
Self-PIN Number	If you use this device as a client, you can use this code when trying to connect this device to other AP by using the PIN method.
Push Button Configuration	Push Button Communication (PBC) method uses a simple action of pushing a button on both the AP and the new STA to reach the function of easy setup WPS connection. You can simply click the  button in this GUI page or click the WPS button under

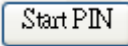	the case of the router. After click on the button, please run the client's WPS and push the PBC button within 2 minutes.
Current Key Info	This field displays the current key information you configured.
Client PIN Number	Personal Identification Number (PIN) method. Users have to fill in the PIN code of enrollee device and click the  button to make communication between the AP and the enrollee device. After click on the button, please run the client's WPS and push the PIN button within 2 minutes.




*Please click on the **Apply Changes** button or the **Reset** button at the bottom to save/reset the configurations.

If you are under the **Wireless Client mode**, the interface is different.

Click **Wireless > WPS** in the menu links to display the screen as shown below.

In this page you can connect your device to other networks by using PIN or PBC methods

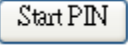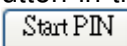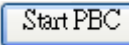

Items	Information
Disable WPS	Mark to disable the WPS, and clear to enable.
Self-PIN Number	If you use this device as a client, you can use this code when trying to connect this device to other AP by using the PIN method.
PIN Configuration	After the AP or router you share has fill in your self-pin number and click the  button in this GUI page at this moment you can click the  button in 2 minutes to establish the connection.
Push Button Configuration	You can simply click the  button (or the WPS button) together with the AP or router you want share in 2 minutes for connection.

3.5 TCP/IP Settings

3.5.1 LAN Interface Setup

To set up the configuration of LAN interface, private IP of your router LAN port and subnet mask for your LAN segment.

LAN Interface Setup

Configure the parameters for the local area network which connects to the LAN port and Wi-Fi clients of your travel router. Here you can change the settings for IP address, subnet mask, DHCP, etc.

Router IP Address:

Subnet Mask:

DHCP: ▾

DHCP Client Range: -

Items	Information
Router IP Address	The IP of your Router LAN port (default 192.168.1.1).
Subnet Mask	Subnet Mask of you LAN (default 255.255.255.0). All devices on the network must have the same subnet mask to communicate on the network.
DHCP	DHCP stands for Dynamic Host Configuration Protocol. It is a protocol for assigning dynamic IP addresses “automatically”.
DHCP Client Range	This field asks you to specify the DHCP Client IP address range (default 100~200). You can also click the “Show Client” button to list those connected DHCP clients. Note: In Router/Client mode, DHCP Server default setting is enabled, however in AP mode, DHCP Server default setting is disabled.
Auto IP Address Diversion	Click the drop list, you may select “Enabled” to divert the IP Address automatically or select “Disabled” to ban it. Besides, click “Enabled” this feature, the system will auto judge whether the WAN and LAN IP is conflict or not. If there are conflicts, the LAN IP and LAN DHCP Range will auto jump to next subnet for avoiding conflicts. Note: The feature supports in Router and Client modes

* Please click on the **Apply Changes** button or the **Reset** button at the bottom to save/reset the configurations.

Active DHCP Client List

This is the window that pops up after clicking the button. It shows the information of IP address, MAC address and expire time of the DHCP clients that have connected with this device.



Active DHCP Client Table

This table shows the assigned IP address, MAC address and time expired for each DHCP leased client.

IP Address	MAC Address	Time Expired(s)
None	----	----

3.5.2 WAN Interface Setup (Router mode and Client mode Display)

This page allows users to configure those parameters for connecting to Internet. You may select the Internet connection type from the drop list besides “WAN Access Type” and configure the parameters for each mode. There are three modes for your selection: Static, DHCP and PPPoE.

WAN Interface Setup

This page is used to configure the parameters for the Internet network which connect to the WAN port of your travel router. Here you may change the access method to a static IP address, DHCP client, or PPPoE client.

WAN Access Type:

Internet IP Address:

Subnet Mask:

Default Gateway:

MTU Size: (1400-1500 bytes)

DNS 1:

DNS 2(Optional):

Clone MAC Address:

[Clone MAC from your Computer]

History MAC Table:

The maximum of the history MAC entry is three. when the table is full, you cant save any MAC unless you delete some mac entries from the MAC table.

MAC Address	Select
000ea6030d44	<input type="checkbox"/>

Items	Information
WAN Access Type	Select the mode to access the WAN as Static, DHCP Client or PPPoE.
Internet IP Address	The IP address that provided by your Internet Service Provider (ISP).
Subnet Mask	The Subnet Mask provided by your Internet Service Provider (ISP).
Default Gateway	The Default Gateway that provided by your Internet Service Provider (ISP).

MTU Size	To Enable the Maximum Transmission Unit of router setup. Any packet over this number will be chopped up into suitable size before sending. Larger number will enhance the transmission performance. Enter the MTU number in the blank to set the limitation.
Clone MAC Address	There are two ways to clone MAC address. One way is directory input MAC address in text box. Maybe you need to save the MAC Address, you can click 'Manual Add' button and add it to "History MAC Table" for easily backup; another is click 'MAC Clone' button, then it will copy the MAC address from your network card in the computer. Note: The 'History MAC Table' can save maximum three MAC Addresses.
History MAC Table	To Delete the MAC Address you add before, mark the check box in the select item on the right hand and click the "Delete Selected". If you want to delete all the MAC Addresses, click "Delete All" to remove all of them.

* Please click on the **Apply Changes** button or the **Reset** button at the bottom to save/reset the configurations.

1. Static Mode (fixed IP)

WAN Access Type: Static IP

Internet IP Address: 192.168.1.20

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.1.3

MTU Size: 1500 (1400-1500 bytes)

DNS 1: 202.96.128.86

DNS 2(Optional):

Clone MAC Address: Manual Add 000ea6030d44 Select MAC

Mac Clone [Clone MAC from your Computer]

Items	Information
Internet IP Address, Subnet Mask and Default Gateway	Fill in the IP address, Subnet Mask and Default Gateway that provided by your Internet Service Provider (ISP).
MTU Size	To Enable the Maximum Transmission Unit of router setup. Any packet over this number will be chopped up into suitable size before sending. Larger number will enhance the transmission performance. Enter the MTU number in the blank to set the limitation (default 1500 bytes).

DNS 1~2	To specify the Domain Name System (DNS). The DNS server translates domain names into IP addresses. Enter the DNS provided by your ISP in DNS 1 and DNS 2.
----------------	---

2. DHCP (Automatic Configuration)

The screenshot shows a configuration page for DHCP. At the top, 'WAN Access Type' is set to 'DHCP Client'. Below that, 'MTU Size' is set to '1492' with a range of '(1400-1492 bytes)'. There are two radio buttons: 'Attain DNS Automatically' (unselected) and 'Set DNS Manually' (selected). Under 'Set DNS Manually', 'DNS 1' is '202.96.128.86' and 'DNS 2(Optional)' is empty. At the bottom, 'Clone MAC Address' has two options: 'Manual Add' (selected) with a text box containing '000ea6030d44' and a 'Select MAC' dropdown, and 'Mac Clone' with a tooltip that says '[Clone MAC from your Computer]'.

Items	Information
MTU Size	<p>To Enable the Maximum Transmission Unit of Router setup. Any packet over this number will be chopped up into suitable size before sending. Larger number will enhance the transmission performance.</p> <p>Enter your MTU number in the text-box to set the limitation (default 1492 bytes).</p>
Attain DNS Automatically	If your DNS provide by ISP is dynamic, choose “Attain DNS automatically.
Set DNS Manually	To specify the Domain Name System (DNS). The DNS server translates domain names into IP addresses. Enter the DNS provided by your ISP in DNS 1 and DNS 2.

3. PPPoE (ADSL)

Items	Information
User Name&Password	Fill in the User Name and password that provided by your ISP.
MTU Size	<p>To Enable the Maximum Transmission Unit of router setup. Any packet over this number will be chopped up into suitable size before sending. Larger number will enhance the transmission performance.</p> <p>Enter your MTU number in the text-box to set the limitation (default 1452 bytes).</p>
Attain DNS Automatically	If your DNS provided by ISP is dynamic, choose "Attain DNS automatically."
Set DNS Manually	To specify the Domain Name System (DNS). The DNS server translates domain names into IP addresses. Enter the DNS provided by your ISP in DNS 1 and DNS 2.

WAN Access Type:

User Name:

Password:

MTU Size: (1360-1492 bytes)

Attain DNS Automatically

Set DNS Manually

DNS 1:

DNS 2(Optional):

3.6 Firewall Settings (Router mode and Client mode Display)

MAC Filtering

The Wireless Router could filter the outgoing packets for security or management consideration.

MAC Filtering

Entries in this table are used to restrict the passage of certain types of data packets from your local network to the Internet through the travel router. Use of such filters can be helpful in securing or restricting your local network.

Enable MAC Filtering

MAC Address: Comment:

Current Filter Table:

MAC Address	Comment	Select
-------------	---------	--------

Items	Information
Enable MAC Filtering	Mark to enable the configuration, and clear to disable.
MAC Address	Fill in the MAC address of wireless stations you want to forbid to access the Internet through the Gateway.
Comment	Input any text to describe this mapping.
Current Filter Table	Lists the MAC Filter Settings you have added before. To delete the settings on the list, click the check box in the select item and click the “Delete Selected”. If you want to delete all the MAC addresses, click “Delete All” to remove all of them.

Please click on the **Apply Changes** button or the **Reset** button at the bottom to save/reset the configurations.

3.7 Management

3.7.1 Status


This information page shows the current status and basic settings of this device. You could check if the parameters match your configuration.


Status

Current status and basic settings of the travel router.
Below status shows current settings, but does not take effect.


System	
Uptime	0day:0h:48m:1s
Firmware Version	VER:A.01.4
Firmware Build Time	Fri Nov 18 16:09:26 CST 2011
Operation Mode	Router[Gateway]
Wireless Local Network	
Network Band	2.4 GHz (B+G+N)
SSID(Name)	LevelOne
Channel Number	6
Encryption	WPA2 Mixed
BSSID	00:e0:4c:81:96:c1
Associated Clients	0
Local Network	
Router IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP	Server
Local MAC Address	00:e0:4c:81:96:c1
Internet Connection	
Connection Type	Getting IP from DHCP server...
Internet IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
Internet MAC Address	00:e0:4c:81:96:c9

3.7.2 Statistics

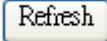This page shows users the information of data transfer, and monitors the status of this router including receiving and sending packets. To see the latest report, click  button.

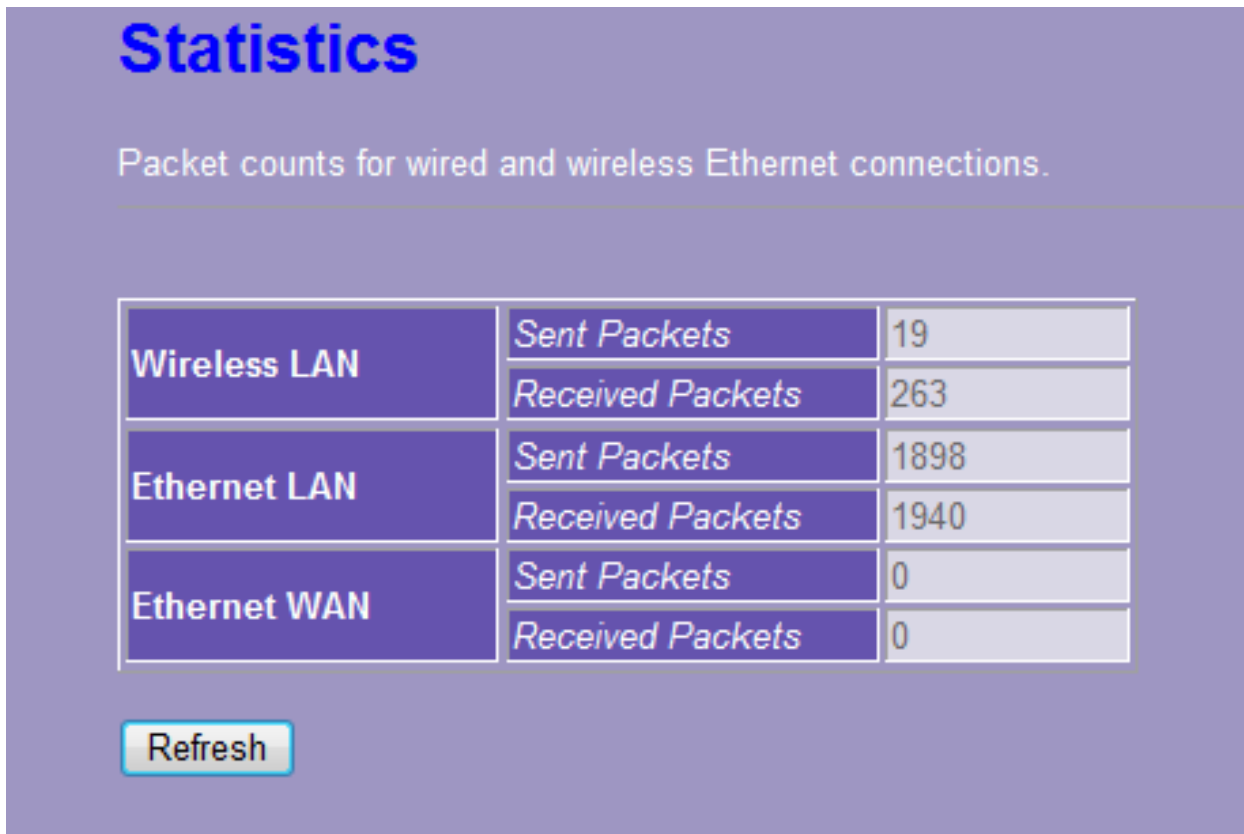




Statistics		
Packet counts for wired and wireless Ethernet connections.		
Wireless LAN	<i>Sent Packets</i>	19
	<i>Received Packets</i>	263
Ethernet LAN	<i>Sent Packets</i>	1898
	<i>Received Packets</i>	1940
Ethernet WAN	<i>Sent Packets</i>	0
	<i>Received Packets</i>	0

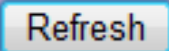

3.7.3 Log

This System Log page shows the information of the current activities on the router. To enable system log function:

1. Mark the “Enable Log” checkbox.
2. To see all information of the system, select the “system all” checkbox.
To see wireless information only, select the “wireless” checkbox.

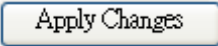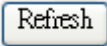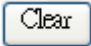3. Click the  button to activate. You could also click the  button to refresh the log information or click the  button to clean the log table.

System Log

Set remote log server parameters and view the system log.

Enable Log

system all

wireless

Apply Changes



Refresh

Clear

3.7.4 Upgrade Firmware

Sometimes a new firmware may be issued to upgrade the system of this device. You could upgrade the firmware you got in this page. To upgrade the firmware, please click the

button, locate the firmware in your computer and then click the button to execute.

Upgrade Firmware

Upgrade the travel router firmware.

PLEASE NOTE: Do not power off the device during the upgrade process, as this may cause damage to the device.

Firmware Version:

VER:A.01.4

Select File:

瀏覽...

Upload

Reset

3.7.5 Save/Reload Setting

The Save/Reload Setting page allows users to save and upload the configuration settings of the device or restore the factory default configuration.

Save/Reload Settings

Save the current settings to a backup file, or reload the setting from a previously saved file. You can also restore the travel router to the factory defaults.

Save Settings to File:

Save...

Load Settings from File:

瀏覽...

Upload


Reset Settings to Default:


Reset

Items	Information
Save Settings to File	Click the <input type="button" value="Save..."/> button to save the currently configure settings.
Load Settings from File	Click <input type="button" value="Browse..."/> to select the file that you save, and then click <input type="button" value="Upload"/> to start to update the system configuration settings. Please wait until it is complete.
Reset Settings to Default	Click <input type="button" value="Reset"/> to start to load default settings.

3.7.6 Password

To set up the Administrator Account information, enter the Username, New password, and reenter

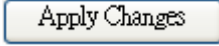the password on the text box. Don't forget to click the  to save the configuration.

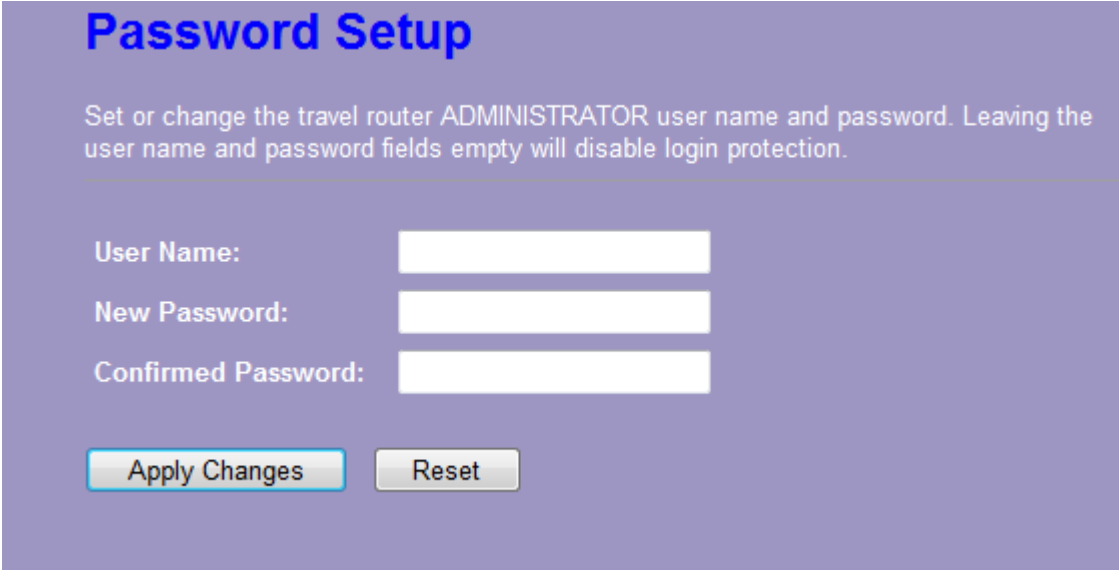


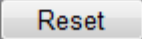
Password Setup

Set or change the travel router ADMINISTRATOR user name and password. Leaving the user name and password fields empty will disable login protection.

User Name:


New Password:

Confirmed Password:

3.7.7 Logout


Click Apply Change then you will save the settings and log off the management interface.

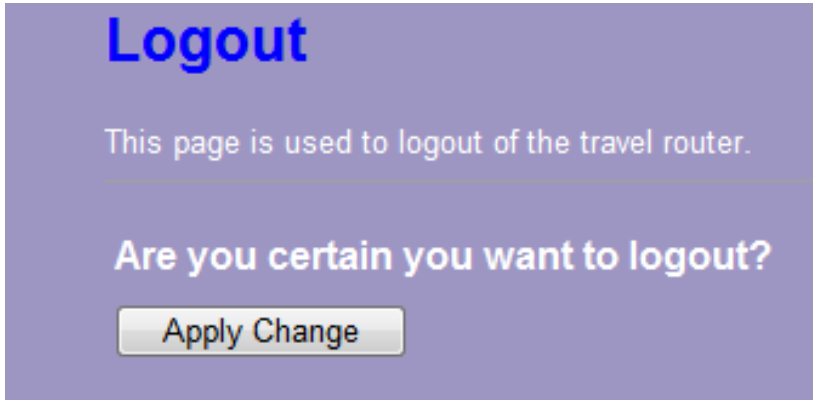

Logout

This page is used to logout of the travel router.

Are you certain you want to logout?



Appendix A: Product Specifications

Standard	IEEE 802.11n, IEEE 802.11g, IEEE 802.11b, IEEE 802.3, IEEE 802.3u
Interface	LAN: One 10/100Mbps RJ-45 port WAN: One 10/100Mbps RJ-45 port One WPS/RESET button One slide switch to control AP/Router/Client mode One USB DC JACK
Antenna	Antenna type: Dipole Antenna connector type: Fixed Antenna standard: 1.2dBi
WAN Connection	Ethernet 10/100 Mbps
Cable Connections	RJ-45 (10BASE-T): Category 3,4,5 UTP RJ-45 (100BASE-TX): Category 5 UTP
Transmission Mode	Auto-Negotiation (Full-duplex, Half-duplex)
Security	64/128-bit WEP, WPA-PSK, WPA2-PSK, WPA2-Mixed
Network Data Rate	802.11b: 1,2,5.5, and 11Mbps 802.11g: 6,9,12,18,24,36,48 and 54Mbps 802.11n: up to 300Mbps
Receiver Sensitivity	802.11n Typical -68 dBm 802.11g Typical -73 dBm 802.11b Typical -84 dBm
Transmit Power	16dBm typically @ 802.11b 14dBm typically @ 802.11g 13dBm typically @ 802.11n
LED indications	1*WAN, 1*LAN, 1*WLAN, 1*WPS, 1*PWR
Channel	USA 11, Europe 13,
Range Coverage	Indoor 35~100 meters Outdoor 100~300 meters
Temperature	Operating: 0°C ~ 40°C (32°~104°F) Storage: -20°C ~ 70°C (-4°~158°F)
Humidity	Operating: 10% ~ 90% RH, non-condensing Storage: 5%~90% RH, non-condensing
Certification	FCC, CE, VCCI Class B

Appendix B: Glossary

- **802.11b** - The 802.11b standard specifies a wireless networking at 11 Mbps using direct-sequence spread-spectrum (DSSS) technology and operating in the unlicensed radio spectrum at 2.4GHz, and WEP encryption for security. 802.11b networks are also referred to as Wi-Fi networks.
- **802.11g** - specification for wireless networking at 54 Mbps using direct-sequence spread-spectrum (DSSS) technology, using OFDM modulation and operating in the unlicensed radio spectrum at 2.4GHz, and backward compatibility with IEEE 802.11b devices, and WEP encryption for security.
- **802.11n** - 802.11n builds upon previous 802.11 standards by adding MIMO (multiple-input multiple-output). MIMO uses multiple transmitter and receiver antennas to allow for increased data throughput via spatial multiplexing and increased range by exploiting the spatial diversity, perhaps through coding schemes like Alamouti coding. The Enhanced Wireless Consortium (EWC) was formed to help accelerate the IEEE 802.11n development process and promote a technology specification for interoperability of next-generation wireless local area networking (WLAN) products.
- **DHCP (Dynamic Host Configuration Protocol)** - A protocol that automatically configure the TCP/IP parameters for the all the PC(s) that are connected to a DHCP server
- **DNS (Domain Name System)** – An Internet Service that translates the names of websites into IP addresses.
- **Domain Name** - A descriptive name for an address or group of addresses on the Internet.
- **DSL (Digital Subscriber Line)** - A technology that allows data to be sent or received over existing traditional phone lines.
- **ISP (Internet Service Provider)** - A company that provides access to the Internet.
- **MTU (Maximum Transmission Unit)** - The size in bytes of the largest packet that can be transmitted.
- **NAT (Network Address Translation)** - NAT technology translates IP addresses of a local area network to a different IP address for the Internet.
- **PPPoE (Point to Point Protocol over Ethernet)** - PPPoE is a protocol for connecting remote hosts to the Internet over an always-on connection by simulating a dial-up connection.
- **SSID** - A **S**ervice **S**et **I**dentification is a thirty-two character (maximum) alphanumeric key identifying a wireless local area network. For the wireless devices in a network to communicate with each other, all devices must be configured with the same SSID. This is typically the configuration parameter for a wireless PC card. It corresponds to the ESSID in the wireless Access Point and to the wireless network name.
- **WEP (Wired Equivalent Privacy)** - A data privacy mechanism based on a 64-bit or 128-bit or 152-bit shared key algorithm, as described in the IEEE 802.11 standard.
- **Wi-Fi** - A trade name for the 802.11b wireless networking standard, given by the Wireless Ethernet Compatibility Alliance (WECA, see <http://www.wi-fi.net>), an industry standards group

promoting interoperability among 802.11b devices.

- **WLAN** (Wireless Local Area Network) - A group of computers and associated devices communicate with each other wirelessly, which network serving users are limited in a local area.