



HQ-INV2500/12
HQ-INV2500/12F
HQ-INV2500/24
HQ-INV2500/24F

12V DC to 230V AC Soft Start Power Inverter
24V DC to 230V AC Soft Start Power Inverter

2500 WATT
CONTINUOUS OUTPUT POWER



MANUAL

ENGLISH

CE **e13** **021895**

SAFETY PRECAUTIONS:

To reduce risk of electric shock, this product should ONLY be opened by an authorized technician if service is required. Disconnect the product from mains and other equipment if a problem should occur. Do not expose the product to water or moisture.

WARRANTY:

No guarantee or liability can be accepted for any changes and modifications of the product or damage caused due to incorrect use of this product.

GENERAL:

Designs and specifications are subject to change without a notice.

1. SPECIFICATION

Spec.	DC12V	DC24V
Output power	2500W continue 5000W surge output	2500W continue 5000W surge output
Input voltage	DC10 ~ 16V	DC20 ~ 30V
Output voltage	AC 230V	AC 230V
Output waveform	Modified sine wave	Modified sine wave
Output frequency	50 or 60HZ	50 or 60HZ
Stand by current	<0.7A	<0.6A
Efficiency	85% ~ 90%	85% ~ 90%
High voltage input shutdown	DC16V+/-0.5V	DC31V+/-0.8V
Battery low alarm	DC10.5V+/-0.5V	DC21+/-0.8V
Battery low shutdown	DC10+/-0.5V	DC20+/-0.8V
Thermal protect	60+/-5°C	60+/-5°C
Cooling	Fan start when the temperature reach 40°C	Fan start when the temperature reach 40°C
Protections	<ul style="list-style-type: none"> * output short * input polarity reverse(by fuse) * high DC input voltage * battery low alarm * battery low shutdown * over load * over temperature 	
Fuse	30A * 12pcs	15A * 12pcs
AC outlet	Two	Two
Size (L*W*H)	430*210*159mm	430*210*159mm
Weight	8.7kgs	8.7kgs

2.INSTALLATION

Mount the inverter horizontally or vertically on a flat surface.


CAUTION!

Make sure to following these rules when installing the inverter:

1. Make sure the inverter stays dry
2. The inverter should be installed in a cool place, ambient temperature between 0-25°C.
3. To avoid fire hazard and overheating, do not cover or obstruct the ventilation openings of the inverter. Regularly check the ventilation openings because these especially collect dust and dirt. Also keep at least 2,5cm space around the inverter for air flow.
4. To avoid risk of fire and explosion, please do not install the inverter close to or next to flammable substances or batteries.

3. OPERATION

3.1 OUTPUT PANEL INSTRUCTIONS

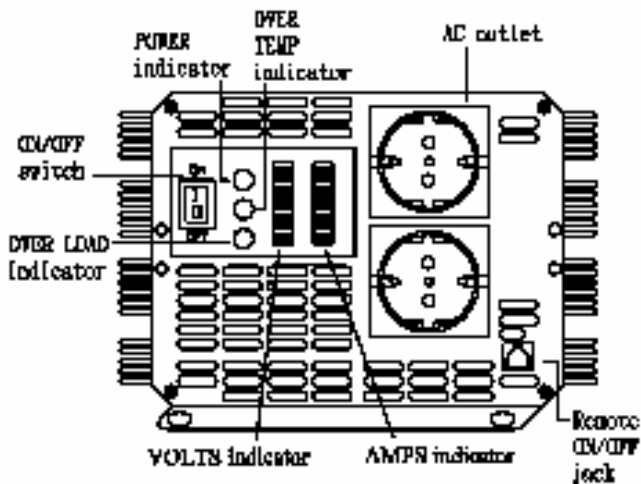

2.1.1. ON/OFF switch

For turning the inverter on/off.

2.1.2. Remote ON/OFF jack

Allows you to mount the inverter out of sight and turn ON or OFF with the included remote control

2.1.3. Battery voltage (VOLTS) indicator

The battery voltage indicator displays the voltage at the input terminal of the inverter.

2.1.4. Battery current (AMPS) indicator

The battery current indicator displays the current drawn from the battery by the inverter. Current should be in the green zone for continuous operation. In yellow zone the inverter will work for several minutes, in the red zone the inverter protection will shut down the inverter.

2.1.5. POWER indicator

When connected to a battery and switched on, the power indicator illuminates green color: ready for use.

2.1.6. OVER TEMPERATURE indicator

The over temperature indicator illuminates in yellow when the inverter is overheated. Also an alarm will sound and the inverter will shutdown.

Overheating is caused by operating the inverter with power levels above its 2500W continuous output. Also it will occur when it is installed somewhere where it cannot lose its heat properly. The inverter will automatically restart when cooled down.

2.1.7 OVERLOAD indicator


The indicator will illuminate in red when an overload occurs. Problem can be solved by switching it off and reducing the load before switching it on again.

2.1.8 AUDIBLE ALARM

Alarm will sound in case of:

- a. Over temperature
- b. Low battery (<10.5V for 12V inverter, <21V for 24V inverter)
- c. Low battery shutdown (<10V for 12V inverter, <20V for 24V inverter)

2.2 INPUT PANEL AND INSTRUCTION

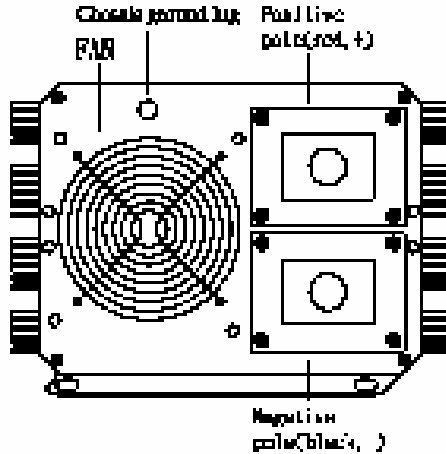

2.2.1 FAN

For cooling the inverter during operation

2.2.2 TERMINAL CONNECTOR

Use red battery cable to connect (+) of the battery to the (+) terminal of the inverter. Then use the black battery cable to connect the (-) of the battery to the (-) terminal of the inverter. Tighten the screws of the DC input cables regularly.

When connected to a battery, please make sure to turn on inverter first, before turning on the connected appliance(s). When using the inverter with several appliances at the same time, turn the appliances on separately after the inverter is already turned on. This will ensure that the inverter doesn't have to deliver all start up currents for all the loads at once .

CAUTION!

Please attend to 220V AC power is potentially lethal, don't work on AC wiring while the wiring is connected to the inverter (even if it is switched off) unless the DC power source is physically disconnected from the inverter . Also don't work on AC wiring if it is connected to another AC power source such as a generator or the utility line .

CAUTION!

Do not reverse input! Don't use "alligator-clips" and always ensure the ON/OFF switch on the output panel of the inverter is switched to the OFF position before connected the battery or other DC power source!

2.2.3. CHASSIS GROUND LUG

The inverter has a lug which is to connect the chassis of the inverter. The ground wire in the AC junction box on the output panel of the inverter is connected to the chassis .

The chassis ground lug must be connected to a grounding point, which will vary depending on where the inverter is installed. In a vehicle, connect the chassis ground lug to the chassis of the vehicle. In a boat, connect to the boat's grounding system. In a fixed location, connect to earth ground by a ground rod (a metal rod pounded into the earth), or other proper service entrance ground. Use a #12 AWG or larger copper wire (preferably with green/yellow insulation) to connect the chassis ground lug to the grounding point .

The neutral (common) conductor of the inverter's AC output circuit is connected to chassis ground .Therefore, when the chassis is connected to ground, the neutral conductor will also be grounded. This conforms to national electrical code requirements that separately derived AC sources (such as inverters and generators) have their neutral conductors tied to ground in the same way that the neutral conductor from the utility line is tied to ground at the AC breaker panel .

CAUTION!

Don't operate the 2500W inverter without connecting it to ground . Electrical shock hazard may result .

6. TROUBLESHOOTING

Problems	Possible causes	Solutions
1. Low voltage output	Using an average reading voltmeter	Use true RMS reading meter
2. Low voltage output and AMPS indicator in red zone	Overload	Reduce load
3. No voltage output and VOLTS indicator in lower red zone	Low voltage input	Recharge battery , check connections and cable
4. No voltage output and POWER indicator no light	a. Inverter switched off	Turn inverter on
	b. No power to inverter	Check wiring to inverter and battery
	c. Internal fuse open	Have qualified electrician to check and replace
	d.Reverse DC polarity	Have qualified electrician to check replace fuse , please observe correct polarity
5. No voltage output and VOLTS indicator in upper red zone	High voltage input	Make sure that inverter is connected to 12V battery (24V for 2500W/24V inverter) and check regulation of charging system

6. Low battery alarm on all the time and VOLTS indicator below 10.5V (21V for 2500W/24V inverter)	a. poor DC wiring	Use proper cable and make solid connections
	b.Poor battery condition	Change battery or use new battery
7. No voltage output , OVER TEMP indicator light and load in excess of 2500W/250 amperes current input (or 125A for 2500W / 24V inverter)	Thermal shutdown	Allow inverter cool down and reduce load if continuous operation required
8. No voltage output , OVER TEMP indicator light and load less than 2500W/250 amperes current input (or 125A for 2500W/24V inverter)	Thermal shutdown	Make sure ventilation openings in inverter are not blocked and reduce ambient temperature .
9. No voltage output and OVER LOAD indicator light	a. Short circuit or wiring error	Check AC wiring for short circuit or improper polarity
	Very high power load	Remove or reduce load
If after the above easy troubleshooting , this inverter still doesn't work , please return it to us or have a qualified electrician to check and replace. Don't open the case or cut out the cord.		

7. CAUTION:

Do not use the inverter with the following rechargeable appliances:

Two particular types of chargers for small nickel cadmium batteries can be damaged if connected to the inverter:

- Small battery operated appliances such as flashlights , razors and nightlights that can be plugged directly into the AC receptacle to recharge .
- Certain battery chargers for battery packs used in hand power tool. These chargers will have a warning label stating that dangerous voltages are present at the battery terminals.

This problem doesn't occur with the vast majority of battery operating equipment . Most of these equipments use a separate charger or transformer that is plugged into the AC receptacle and produces the lower voltage output . If the label on the AC adaptor or charger states that produces the low AC or DC voltage output (less than 30 volts), the inverter will power this adaptor or charger safely without trouble .

USE THE CORRECT SIZE AND TYPE OF BATTERY!

For most applications of 2500W inverter it is recommended to use one deep cycle battery or more in parallel. More capacity is better because there will be more reserve capacity to prevent the battery to be discharged too far.

DECLARATION OF CONFIRMITY

We,

Nedis B.V.

Declare under our responsibility that the product;

Brandname: **HQ**

Model: **HQ-INV2500/12, HQ-INV2500/12F, HQ-INV2500/24, HQ-INV2500/24F**

Description: **2500W DC to AC Power Inverter**

Is in conformity with the following standards;

E-Mark (72/245/EEC, 95/54/EC): **e13*72/245*95/94*1895*00**

EMC (98/336/EEC): **EN 61000-6-3/2001: EN 55014-1, EN 61000-3-2/-3,**

EN 61000-6-1/2001: EN 55014-2 (EN 61000-4-2/-4/-5/-6/-11)

LVD (73/23/EEC): **EN 60950-1:2001, EN 61558-1:1997 +A1:1998**

Conform this regulation it's allowed to use this product in all European Community & EFTA countries.

Nedis BV is not responsible for the use of this product outside the European Community & EFTA countries.

's-Hertogenbosch, 24-01-2006



Mrs. J. Gilad
Purchase Director



www.hqproducts.info