



## User Guide

Quality, Design and Innovation



[home.liebherr.com/fridge-manuals](http://home.liebherr.com/fridge-manuals)

# LIEBHERR

## Contents

<b>1</b>	<b>Appliance at a glance.....</b>	<b>2</b>	9.5	Model plate.....	19
1.1	Scope of delivery.....	2	<b>10</b>	<b>Shutting down.....</b>	<b>19</b>
1.2	Overview of the appliance and its equipment.....	3	<b>11</b>	<b>Disposing of the appliance.....</b>	<b>19</b>
1.3	Appliance range of use.....	3		The manufacturer works constantly on the further development of all the types and models. Therefore please understand that we have to reserve the right to make design, equipment and technical modifications.	
1.4	Conformity.....	3		To get to know all the benefits of your new appliance, please read the information contained in these instructions carefully.	
1.5	Product data.....	3		The instructions apply to several models. Differences may occur. Text relating only to specific appliances is marked with an asterisk (*).	
1.6	EPREL database.....	3		<b>Instructions for action are marked with a ►, the results of action are marked with a ▷.</b>	
<b>2</b>	<b>General safety instructions.....</b>	<b>3</b>		This User Guide applies to:	
<b>3</b>	<b>Putting into operation.....</b>	<b>4</b>		- IRCBf 5121	
3.1	Switching on appliance.....	4			
3.2	Inserting the components.....	5			
<b>4</b>	<b>Foods management.....</b>	<b>5</b>			
4.1	Storing food.....	5			
4.2	Storage times.....	6			
<b>5</b>	<b>Saving energy.....</b>	<b>6</b>			
<b>6</b>	<b>Controls.....</b>	<b>6</b>			
6.1	Controls and displays.....	6			
6.1.1	Status display.....	6			
6.1.2	Navigation.....	6			
6.1.3	Operating structure.....	7			
6.1.4	Display symbols.....	7			
6.2	Control concept.....	7			
6.2.1	Activating/deactivating the function.....	7			
6.2.2	Select the function value.....	8			
6.2.3	Activating/deactivating settings.....	8			
6.2.4	Selecting the setting value.....	8			
6.2.5	Go to the Customer menu.....	8			
6.3	Functions.....	9			
6.3.1	Setting the temperature.....	9			
	SuperCool.....	9			
	Party.....	9			
	Holiday.....	9			
	E-Saver.....	9			
6.4	Settings.....	9			
	Connecting to the WLAN.....	9			
	Entry lock.....	10			
	Display brightness.....	10			
	Door alarm.....	10			
	Info.....	10			
	SabbathMode.....	10			
	CleaningMode.....	11			
	BioFresh B-Value.....	11			
	Reminder.....	11			
	Switching the appliance off.....	11			
6.5	Warnings.....	11			
6.5.1	Message.....	11			
6.5.2	DemoMode.....	12			
<b>7</b>	<b>Features.....</b>	<b>12</b>			
7.1	4-star freezer compartment.....	12			
7.2	Door rack.....	12			
7.3	Shelves.....	12			
7.4	Dividing shelf.....	12			
7.5	Space for baking tray.....	13			
7.6	Adjustable bottle shelf.....	13			
7.7	Drawers.....	14			
7.8	Fruit & Vegetable safe cover.....	15			
7.9	Adjusting the moisture levels.....	15			
7.10	Accessories.....	15			
<b>8</b>	<b>Maintenance.....</b>	<b>16</b>			
8.1	FreshAir carbon filter.....	16			
8.2	Defrosting the appliance.....	16			
8.3	Cleaning the appliance.....	16			
<b>9</b>	<b>Customer help.....</b>	<b>17</b>			
9.1	Technical specifications.....	17			
9.2	Operating noises.....	17			
9.3	Technical fault.....	17			
9.4	Customer Services.....	19			

The manufacturer works constantly on the further development of all the types and models. Therefore please understand that we have to reserve the right to make design, equipment and technical modifications.

To get to know all the benefits of your new appliance, please read the information contained in these instructions carefully.

The instructions apply to several models. Differences may occur. Text relating only to specific appliances is marked with an asterisk (\*).

**Instructions for action are marked with a ►, the results of action are marked with a ▷.**

This User Guide applies to:

- IRCBf 5121

## 1 Appliance at a glance

### 1.1 Scope of delivery

Check all parts for damage during transport. If you have any complaints, please contact your retailer or Customer Services (see 9.4 Customer Services) .

Your new appliance comes with the following parts:

- Built-in appliance
- Features (depending on the model)
- Installation materials (depending on the model)
- "Quick Start Guide"
- "Installation Guide"
- Service Brochure

## 1.2 Overview of the appliance and its equipment

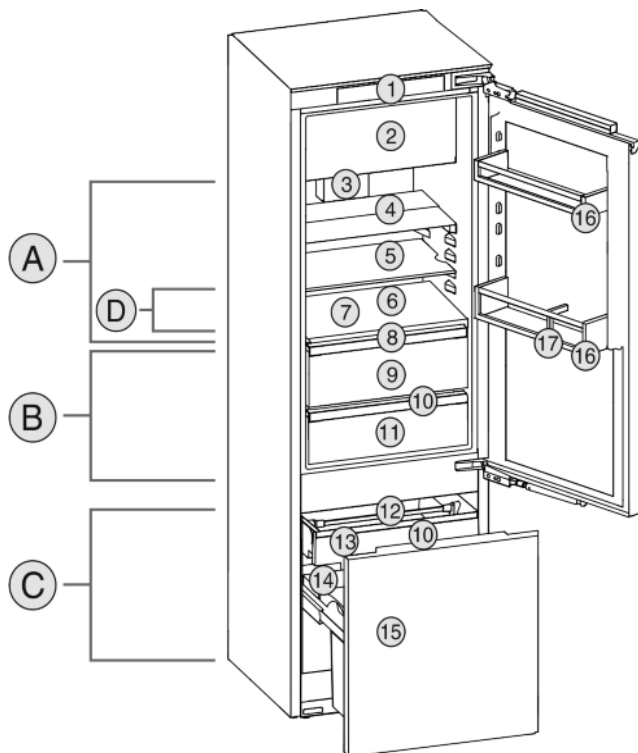


Fig. 1 Example illustration

### Temperature range

- (A) Fridge section (C) Larder compartment  
 (B) BioFresh  
 (D) Coldest zone

### Features

- (1) Controls (10) Drainage outlet  
 (2) 4-star freezer compartment (11) Meat & Dairy-Safe  
 (3) Fan with FreshAir active carbon filter (12) Drawer handle  
 (4) Split shelf (13) Drawer pull-out trolley  
 (5) Shelf (14) Nameplate  
 (6) Space for baking tray (15) Pull-out trolley  
 (7) Adjustable bottle shelf (16) Door rack  
 (8) Fruit & Vegetable-Safe cover (17) Bottle rack  
 (9) Fruit & Vegetable-Safe

### Note

- The default arrangement of the shelves, drawers and baskets is best for energy efficiency.

## 1.3 Appliance range of use

### Intended use

- in staff kitchens, bed and breakfast establishments,
- by guests in country houses, hotels, motels and other accommodation,
- for catering and similar services in the wholesale trade.

All other types of use are not permitted.

### Foreseeable misuse

The following applications are expressly forbidden:

- Storing and refrigerating medicines, blood plasma, laboratory preparations or similar substances and products based on the Medical Device Directive 2007/47/EC
- Use in areas at risk of explosions

Misusing the appliance may lead to damage to the goods stored or they may spoil.

### Climate classifications

Depending on the climate classification the appliance is designed to operate in restricted ambient temperatures. The climate classification applying to your appliance is printed on the rating plate.

### Note

- Keep to the specified ambient temperatures in order to guarantee that the appliance works properly.

## 1.4 Conformity

The refrigerant circuit has been tested for leaks. In installed condition, this appliance complies with the applicable safety stipulations and with directives 2014/35/EU, 2014/30/EU, 2009/125/EG, 2011/65/EU and 2010/30/EU.

## 1.5 Product data

Product data is included with the appliance, as per Directive (EU) 2017/1369. The complete product data sheet is available on the Liebherr website under Downloads.

## 1.6 EPREL database

Details about energy labelling and ecodesign requirements will be available on the European product database (EPREL) from 1st March 2021. You can access the product database at the following link: <https://eprel.ec.europa.eu/> You will be asked to enter the model ID. You can find the model ID on the nameplate.

# 2 General safety instructions

### Danger for the user:

- This device can be used by children and people with impaired physical, sensory or mental abilities or with a lack of experience and knowledge provided that they are supervised or have received instruction in the safe use of this device, and about the resulting hazards. Children must not play with this appliance. Cleaning and user maintenance work must not be carried out by children without adult supervision. Children aged between 3 and 8 are allowed to load and unload the appliance. Children below the age of 3 must be kept away from the appliance

## Putting into operation

unless they are under continuous adult supervision.

- When disconnecting the appliance from the supply, always take hold of the plug. Do not pull the cable.
- In the event of a fault pull out the mains plug or deactivate the fuse.
- Do not damage the mains power cable. Do not operate the appliance with a defective mains power cable.
- Only customer service or other specially trained staff may repair or perform other operations on the appliance.
- Only install, connect and dispose of the appliance according to the instructions.
- Only use the appliance when it is installed.
- Please keep these instructions in a safe place and pass them on to any subsequent owners.

### Fire hazard:

- The coolant used (information on the model plate) is eco-friendly but also flammable. Any leaking coolant may ignite.
  - Do not damage the refrigerant circuit pipes.
  - Do not handle ignition sources inside the appliance.
  - Do not use electrical appliances inside the appliance (e.g. steam cleaners, heaters, ice cream makers, etc.).
  - If the refrigerant leaks: remove any naked flames or ignition sources from the vicinity of the leakage point. Properly air the room. Inform customer services.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane, etc. in the appliance. To identify these spray cans, look for the list of contents printed on the can, or a flame symbol. Gases possibly escaping may ignite due to electrical components.
- Please be sure to store alcoholic drinks or other packaging containing alcohol in tightly closed containers. Any alcohol that leaks out may be ignited by electrical components.

### Danger of tipping and falling:

- Do not misuse the plinth, drawers, doors etc. as a step or for support. This applies particularly to children.

### Danger of food poisoning:

- Do not consume food which has been stored too long.

### Danger of frostbite, numbness and pain:

- Avoid prolonged skin contact with cold surfaces or refrigerated/frozen goods or take protective measures, e.g. wear use gloves.

### Danger of injury and damage:

- Hot steam can lead to injury. Do not use electrical heating or steam cleaning equipment, open flames or defrosting sprays to defrost.
- Do not use sharp implements to remove the ice.

### Danger of crushing:

- Do not hold the hinge when opening and closing the door. Fingers may get caught.

### Risk of damage to slate front:

- Please do not affix stickers to the front.

### Symbols on the appliance:



The symbol can be located on the compressor. It refers to the oil in the compressor and indicates the following danger: Swallowing or inhaling can be fatal. This is only relevant for recycling. There is no danger in normal operation.



This symbol is found on the compressor and indicates the danger of flammable materials. Do not remove the sticker.



A sticker to this effect may be applied to the rear of the appliance. It refers to the foam-padded panels in the door and/or the housing. This is only relevant for recycling. Do not remove the sticker.

### Please observe the specific information in the other sections:

	DANGER	identifies a situation involving direct danger which, if not obviated, may result in death or severe bodily injury.
	WARNING	identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury.
	CAUTION	identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury.
	NOTICE	identifies a dangerous situation which, if not obviated, may result in damage to property.
	Note	It contains useful instructions and tips.

## 3 Putting into operation

### 3.1 Switching on appliance

Ensure that the following conditions are met:

- Appliance is installed and connected according to installation instructions.
- All adhesive strips, adhesive and protective films as well as transport safety devices in and on the appliance are removed.
- All marketing leaflets are removed from the drawers.

- ▶ Switching on the appliance

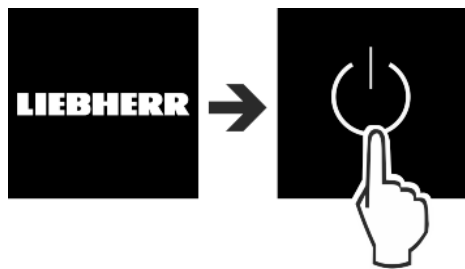


Fig. 2

- ▶ The status screen appears.
- ▶ Turn off DemoMode, if applicable. DemoMode is on if a **D** appears in the top-left corner of the screen.



Fig. 3

### Note

The manufacturer recommends:

- ▶ Storing food: wait around 2 hours for the appliance to reach the set temperatures.

## 3.2 Inserting the components

- ▶ Insert the supplied components to make the most of your appliance.
- ▶ Purchase and install the SmartDevice Box (see <https://smartdevice.liebherr.com/install>).
- ▶ Install the SmartDevice app (see <https://apps.home.liebherr.com/>).

### Note

You can purchase accessories from the [Liebherr household appliance store](http://home.liebherr.com) (home.liebherr.com).

## 4 Foods management

### 4.1 Storing food



#### WARNING

Risk of fire

- ▶ Do not use any electrical appliances in the food area of the appliance unless recommended by the manufacturer.

When storing food, always observe the following:

- Air vents on the inside rear wall are unobstructed.
- Air vents on the fan are unobstructed.
- Food is in sealed packaging.
- Foods that easily absorb or give off smell or taste are stored in sealed containers or covered.
- Raw meat and fish are in clean, sealed containers to prevent them coming into contact with or dripping onto other foods.
- Liquids are in sealed containers.
- Foods are not stored too closely together, as the air needs to circulate.

#### Note

Failure to follow these guidelines can lead to food perishing.

#### 4.1.1 Fridge section

The natural air circulation creates a range of temperatures.

##### Arrange your food as follows:

- ▶ In the top section and in the door: butter and cheese, preserves and tubes.
- ▶ In the coldest zone *Fig. 1 (D)*: easily perishable food such as prepared meals.

#### 4.1.2 BioFresh

BioFresh helps certain fresh foods stay fresh for longer compared to conventional cooling methods.

In the case of foods with a minimum shelf life, the date indicated on the packaging still applies.

If the temperature drops below 0 °C, foods can freeze.

#### Note


Store cold-sensitive fruit and vegetables such as cucumbers, aubergines, courgettes and tropical fruit in the cooling section.

#### Fruit & Vegetable-Safe

This provides a fresh storage climate with the lid closed. A moist climate is suitable for storing loose foods with a high moisture content (e.g. salad, vegetables, fruit).

The air moisture in the compartment depends on the moisture content of the items being stored and the number of times the door is opened. You can adjust the air moisture.


##### Arrange your food as follows:

- ▶ Store your loose fruit and vegetables. 
- ▶ Excessive air moisture: Regulate the air humidity (see 7.9 Adjusting the moisture levels).

#### Meat & Dairy-Safe

Here a relatively dry storage climate is set. A dry climate is great for dry or packaged foods (e.g. dairy products, meat, fish, sausage).

##### Arrange your food as follows:

- ▶ Place the dry or packaged foods inside. 

# Saving energy

## 4.1.3 Larder compartment

This compartment is great for storing cold-sensitive foods such as potatoes, onions or tropical fruits, as well as any food or drinks that should not be too cold when consumed.

The larder compartment is therefore a perfect replacement for a pantry.

Arrange your food as follows:

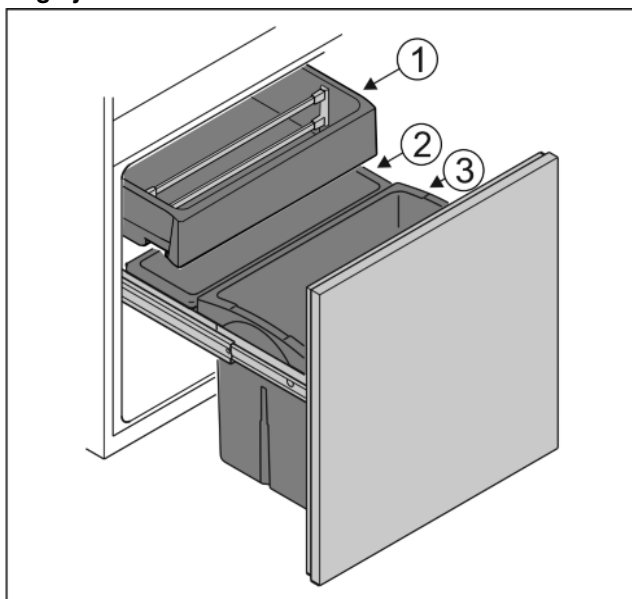


Fig. 4

- ▶ Containers Fig. 4 (1): Store loose vegetables and tropical fruit.
- ▶ Containers Fig. 4 (2): Store loose small fruit and vegetables.
- ▶ Containers Fig. 4 (3): Store individual bottles.

## 4.1.4 Freezer compartment

The air temperature can vary in the compartment when shown on a thermometer or other gauges. The temperature varies more when the compartment is half-full or empty and can rise to more than -18 °C.

### Freezing food

You can freeze as many kilograms of fresh food within 24 hours as is indicated on the model plate .

So that the food is rapidly frozen through to the core, keep to the following quantities per pack:

- Fruit, vegetables up to 1 kg
- Meat up to 2.5 kg

Arrange your food as follows:



### CAUTION

Risk of injury from glass fragments!  
Drink bottles and cans may explode if frozen. This applies particularly to carbonated drinks.

- ▶ Do not freeze bottles and cans of drink!
- ▶ Put the packaged food into the freezer compartment so that it is in contact with the floor or the side walls.

### Defrost the food

- In the fridge
- In the microwave
- In the stove/oven
- At room temperature



### WARNING

Risk of food poisoning!

▶ Do not re-freeze thawed food.

- ▶ Only take out the food you need at the time.
- ▶ Cook defrosted food as soon as possible.

## 4.2 Storage times

Refer to the specified storage times as a guide.

In the case of foods with a minimum shelf life, the date indicated on the packaging still applies.

## 5 Saving energy

- Pay attention to good ventilation. Do not cover ventilation holes or grids.
- Always keep the fan air slits clear.
- Do not install the appliance in direct sunlight, next to an oven, radiator or similar.
- Energy consumption depends on the installation conditions, e.g. the ambient temperature (see 1.3 Appliance range of use) . A warmer ambient temperature can increase the energy consumption.
- Open the appliance for as short a time as possible.
- The lower the temperature is set the higher the energy consumption.
- Inserting warm food: allow to cool down to room temperature first.
- For longer periods of absence, use HolidayMode (see Holiday) .

## 6 Controls

### 6.1 Controls and displays

The display provides a quick overview of the temperature setting and the status of functions and settings. You can control the functions and settings either by deactivating/activating them or by selecting a value.

#### 6.1.1 Status display

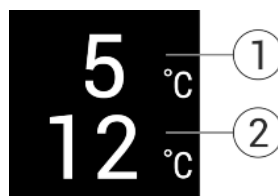


Fig. 5


(1) Temperature display of the fridge section

(2) Temperature display of the larder compartment

#### 6.1.2 Navigation

Navigate in the menu to see the individual functions. An audible signal sounds after confirming a function or setting. If no selection is made after 10 s the display switches to the Status screen.

You can manage the appliance with the following symbols:

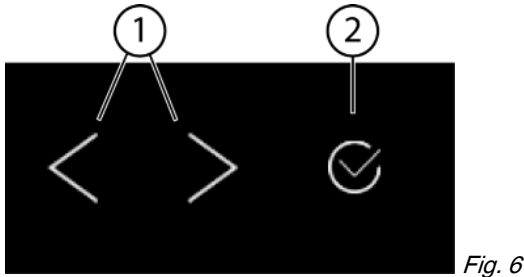

**(1)** Navigation arrow left/right  
**(2)** Confirm

### Navigation arrow left/right Fig. 6 (1):

- Navigating in the menu. After the last menu page, it goes back to the first one.
- Navigate in the submenu. After the last submenu page, it goes back to the first one.

### Confirm Fig. 6 (2):

- Activating/deactivating the function.
- Open the submenu.
- Confirm your selection. The display returns to the menu.

### Back:

- Confirm your select in the submenu. The display returns to the menu.



. The display returns to the function/setting.

### Back to Status display:

- Close and open the door.
- Wait 10 s. The display switches to the Status display.

## 6.1.3 Operating structure

The controls are explained by a template. The display changes depending on the function or settings.

### Menu without a submenu

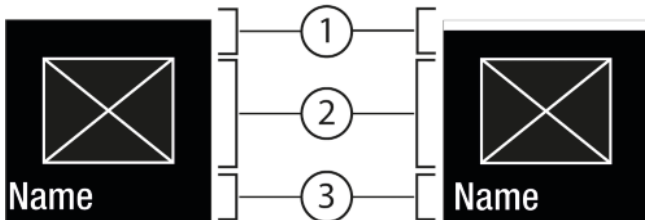


Fig. 7

**(1)** Status  
**(1)** off / on  
**(2)** Symbol or activated value  
**(3)** Menu: Function name or menu: Setting name

You can navigation as follows:

- Press the left/right Fig. 6 (1) arrow to navigate.
- Press Confirm Fig. 6 (2) to activate Fig. 7 (1) / deactivate Fig. 7 (1) the function.

### Menu with a submenu

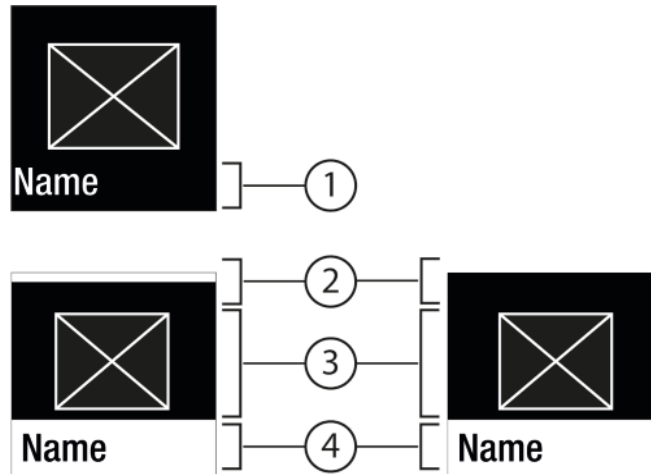


Fig. 8

**(1)** Menu: Function name or menu: Setting name  
**(2)** Status  
**(3)** Symbol or activated value  
**(4)** Submenu: function name or submenu: Setting name

You can navigation as follows:

- Press the left/right Fig. 6 (1) arrow to navigate.
- Press Confirm Fig. 6 (2) to open the submenu Fig. 8 (4).
  - Press the left/right Fig. 6 (1) arrow to navigate.
  - Set a new value: Press Confirm Fig. 6 (2) to select an active value Fig. 7 (1).
  - Back to the menu: Press Confirm Fig. 6 (2) to select the active value Fig. 7 (2).

## 6.1.4 Display symbols

Display symbols provide information on the current appliance status:

Symbol	Appliance status
	<b>Standby</b> The appliance or temperature zone is switched off.
	<b>Flashing number</b> Appliance is working. Temperature flashes until the set temperature is reached.
	<b>Flashing symbol</b> Appliance is working. Setting is made.


## 6.2 Control concept

### 6.2.1 Activating/deactivating the function

You can activate/deactivate the following functions:

Symbol	Function
	SuperCool*
	Party*
	Holiday

# Controls


Symbol	Function
	E-Saver

\* When a function is on, the appliance works harder. This means the appliance could make louder noises and consume more energy.

- ▶ Press the navigation arrows *Fig. 6 (1)* until the appears.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▷ You hear the confirmation tone.
- ▷ Status appears in the menu.
- ▷ Function is on/off.

## 6.2.2 Select the function value

With the following functions you can set a value in the submenu:

Symbol	Function
	<b>Cool:</b> Setting the temperature Turn on/off the temperature zone

- ▶ Press the navigation arrows *Fig. 6 (1)* until the function appears.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▶ Press the navigation arrows *Fig. 6 (1)* to select the setting value.

### Setting the temperature








- ▶ Press Confirm *Fig. 6 (2)*.
- ▷ You hear the confirmation tone.
- ▷ Status: On *Fig. 7 (1)* appears briefly in the submenu *Fig. 8 (4)*.
- ▷ Display switches back to the menu.


### Switching the temperature zone on/off

- ▶ To Confirm, press for 3 seconds.
- ▷ You hear the confirmation tone.
- ▷ Display returns to the Status screen.

## 6.2.3 Activating/deactivating settings

You can activate/deactivate the following settings:

Symbol	Setting
	WiFi <sup>1</sup>
	Entry lock <sup>2</sup>
	SabbathMode <sup>2</sup>
	Cleaning Mode <sup>2</sup>
	Reminders <sup>1</sup>
	Reset <sup>2</sup>
	Off <sup>2</sup>

- ▶ Press the navigation arrows *Fig. 6 (1)* until Settings  appears.
- ▶ Press Confirm *Fig. 6 (2)*.

- ▶ Press the navigation arrows *Fig. 6 (1)* until you see the setting you want.

### <sup>1</sup> Activate setting (shortpress)

- ▶ Press Confirm *Fig. 6 (2)*.
- ▷ You hear the confirmation tone.
- ▷ Status appears in the menu.
- ▷ Setting is activated/deactivated.


### <sup>2</sup> Activate setting (longpress)

- ▶ To Confirm *Fig. 6 (2)*, press for 3 seconds.
- ▷ You hear the confirmation tone.
- ▷ Status appears in the menu.
- ▷ Display changes.

## 6.2.4 Selecting the setting value


With the following settings you can set a value in the submenu:



Symbol	Settings
	Brightness
	Door alarm

- ▶ Press the navigation arrows *Fig. 6 (1)* until Settings  appears.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▶ Press the navigation arrows *Fig. 6 (1)* until you see the setting you want.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▶ Press the navigation arrows *Fig. 6 (1)* to select the setting value.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▷ You hear the confirmation tone.
- ▷ Status appears briefly in the submenu.
- ▷ Display switches back to the menu.

## 6.2.5 Go to the Customer menu

You can see the following settings in the Customer menu:

Symbol	Function
	BioFresh B-Value <sup>1</sup>

- ▶ Press the navigation arrows *Fig. 6 (1)* until Settings  appears.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▶ Press the navigation arrows *Fig. 6 (1)* until About  appears in the display.
- ▶ Press Confirm *Fig. 6 (2)*.
- ▶ Go to the Customer menu: Enter the code 151.
- ▶ In the customer menu, press the navigation arrows *Fig. 6 (1)* until you see the setting you want.

### <sup>1</sup> Select the value

- ▶ Press Confirm *Fig. 6 (2)*.
- ▷ You hear the confirmation tone.
- ▷ Status appears briefly in the display.
- ▷ Display switches back to the menu.

### <sup>2</sup> Activate the setting

- ▶ To Confirm *Fig. 6 (2)*, press for 3 seconds.
- ▷ You hear the confirmation tone.
- ▷ Status appears on the display.
- ▷ The symbol flashes as long as the appliance is working.






## 6.3 Functions

### 6.3.1 Setting the temperature

The temperature depends on the following factors:

- The amount of times the door is opened
- How long the door is open for
- The room temperature of the installation site
- The type, temperature and amount of food

Temperature zone	Recommended setting
 5 °C Fridge section	5 °C
 B5 BioFresh	B5
 12 °C Larder compartment	12 °C

#### Setting the temperature

- ▶ Set the level (see 6.2 Control concept) .
- ▷ Set temperature is shown at the bottom right of the display.
- ▷ The current temperature flashes on the display.

#### Switching off a temperature zone

You can switch the fridge compartment off separately.

Switching off the larder section turns off all the temperature zones.

- ▶ Set the level (see 6.2 Control concept) .

▷  appears.

#### SuperCool

This function selects the lowest cooling temperature. This gives you colder storage temperatures.

This function is relevant to the fridge section *Fig. 1 (A)*

You can also reach lower temperatures in the 4-star freezer.

Use:

- Cool large amounts of food quickly.
- Freeze food.

#### Activating/deactivating the function

- ▶ Using the 4-star freezer: activate the function when you add the goods.
- ▶ Using the fridge section: activate the function when you add the goods.
- ▶ Activating/deactivating (see 6.2 Control concept) .

The function automatically turns off. The appliance goes back to normal mode. The temperature adjusts itself to the set level.

#### Party

This option offers an assortment of special functions and settings that are useful if you are having a party.

The following functions are on:

- *SuperCool*
- *IceMaker* and *MaxIce*
- *InfinitySpring*

All the functions can be adjusted flexibly and separately. Changes are discarded when the function turns off.

#### Activating/deactivating the function

- ▶ Activating/deactivating (see 6.2 Control concept) .
- ▷ On: All functions are activated at the same time.
- ▷ Off: Preset temperatures are restored.

After 24 hours the function turns off automatically.



#### Holiday

This function minimises the energy consumption during an extended absence. The temperature is increased to 15 °C.

The set freezer temperature remains unchanged.

This function refers to the fridge section *Fig. 1 (A)*.

Use:

- Save energy if you plan to be away for a while.
- Avoid coming home to bad smells and mould.

#### Activating/deactivating the function

- ▶ Empty everything from the fridge section.
- ▶ Activate/deactivate (see 6.2 Control concept) .
- ▷ On: Fridge temperature is raised.
- ▷ Off: preset temperature is restored.



#### E-Saver

This function is designed to reduce energy consumption. Higher temperatures are preset for all temperature zones, which means the appliance has to cool less frequently.

Temperature of the fridge section: 7 °C

Temperature of the freezer section: -16 °C

Use:

- Save energy.

#### Activating/deactivating the function

- ▶ Activating/deactivating (see 6.2 Control concept) .
- ▷ On: Higher temperatures are preset for all temperature areas.
- ▷ Off: Preset temperatures are restored.

## 6.4 Settings



#### Connecting to the WLAN

This setting connects the appliance to the internet. The connection is managed in the SmartDevice Box. The appliance can then be integrated via the SmartDevice-App into a SmartHome-System. The SmartDevice-App and other compatible EcoSystems also allow you to use advanced options and settings.

#### Note

The SmartDevice Box is available from the [Liebherr home appliance store \(home.liebherr.com\)](http://home.liebherr.com).

More information about availability, requirements and the individual options, can be found online at [smartdevice.liebherr.com](http://smartdevice.liebherr.com).

Use:

- Use the appliance via the SmartDevice-App or compatible EcoSystems.
- Use advanced options and settings.
- Check the current status of the appliance in the SmartDevice-App.

# Controls

- ❑ The SmartDevice Box is purchased and installed (see <https://smartdevice.liebherr.com/install>).
- ❑ The SmartDevice app is installed (see <https://apps.home.liebherr.com/>).

## Setting up the connection

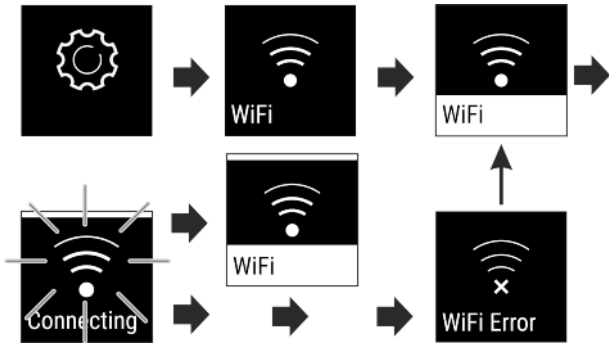


Fig. 9

- ▶ Activating the setting (see 6.2 Control concept) .
- ▷ The connection is set up: Status: on Fig. 7 (1) and WiFi connecting appears. The symbol flashes.
- ▷ The connection is set up: Status: on Fig. 7 (1) appears.
- ▷ The connection is set up: WiFi appears, the display turns blue.
- ▷ The connection failed: Status and Connect appears. The symbol appears permanently.

## Disconnecting the appliance

- ▶ Deactivate the setting (see 6.2 Control concept) .

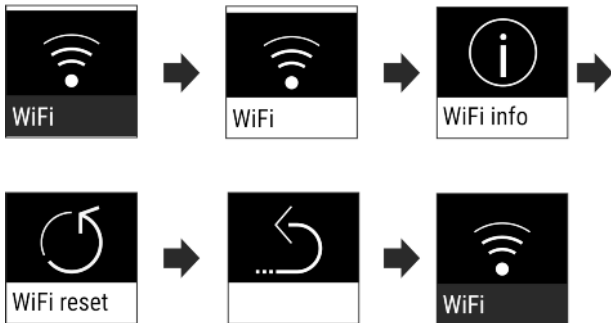



Fig. 10

- ▷ There is no connection: The symbol  appears permanently.

## Restoring the connection

- ▶ Restore settings (see 6.2 Control concept)

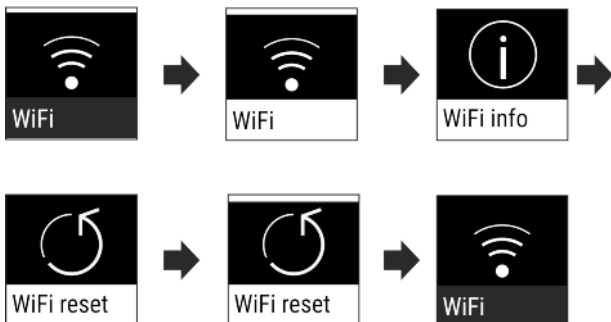


Fig. 11

- ▷ Connection and other settings are restored to factory settings.



## Entry lock

This setting prevents unintentional use of the appliance, e.g. by children.

Use:

- Avoid settings being changed unintentionally.
- Avoid the appliance being switched off unintentionally.
- Avoid the temperature being changed unintentionally.

## Activating/deactivating settings

- ▶ Activate/deactivate (see 6.2 Control concept) .



## Display brightness

Set the brightness level of the display.

You can set the following brightness levels:

- 40%
- 60%
- 80%
- 100%

## Choose the setting

- ▶ Set the level (see 6.2 Control concept) .



## Door alarm

Set the time before the door alarm (see Close door) sounds.

The options are as follows:

- 1 min
- 2 min
- 3 min
- Off

## Choose the setting

- ▶ Set the time (see 6.5 Warnings) .




## Info

This setting gives you appliance data and access to the customer menu.

It provides the following information:

- Model name
- Index
- Serial number
- Service number

## Show appliance data

- ▶ Press the navigation arrows Fig. 6 (1) until Settings  appears.
- ▶ Press Confirm Fig. 6 (2).
- ▶ Press the navigation arrows Fig. 6 (1) until the info appears.
- ▶ Read the appliance info.



## SabbathMode

This setting meets the religious requirements on the Sabbath and Jewish festivals. Turn on SabbathMode to switch off certain controls. This means you can use the appliance without anyone changing the settings.

You can find a list of Star-K-certified appliances at [www.star-k.org/appliances](http://www.star-k.org/appliances).



## WARNING

Danger of food poisoning.

If there is a power cut while the appliance is in SabbathMode, this message is not saved. Once power is restored, the appliance continues in SabbathMode. When this mode is over no message about the power cut is displayed on the temperature display.

If there was a power cut during SabbathMode:

- ▶ Check the food for quality. Do not eat the food if it has thawed.

What happens on the appliance when in SabbathMode:

- The Status display permanently shows SabbathMode.
- The display is locked for all functions apart from turning off SabbathMode.
- Any functions/settings that are already on, remain active.
- The display stays bright when the door is closed.
- The reminder timings are kept.
- Reminders and warnings are not shown. There is no acoustic signal.
- The internal light is off.
- The defrost cycle only works for the specified time without taking account of fridge use.
- After a power cut the appliance automatically returns to SabbathMode.

### Activating/deactivating settings

- ▶ Activating/deactivating (see 6.2 Control concept) .



## CleaningMode

Use this setting to easily clean the appliance.

This setting refers to the fridge section *Fig. 1 (A)*.

Use:

- Clean the fridge section by hand.

What happens on the appliance when this setting is on:

- The fridge section is switched off.
- The internal light is on.
- Reminders and warnings are not shown. There is no acoustic signal.

### Activating/deactivating settings

- ▶ Activating/deactivating the setting (see 6.2 Control concept) .
- ▷ On: fridge section is off. Light stays on.
- ▷ Off: preset temperature is restored.

After 60 min the setting turns off automatically. The appliance then continues in normal mode.



## BioFresh B-Value

The temperature can be set slightly lower or higher in the BioFresh zone. The temperature can be adjusted from **B1** (lowest temperature) to **B9** (highest temperature). The default setting is **B5**. If you select a setting between **B1** and **B4**, the temperature may fall below 0 °C, causing food to become slightly frozen.

### Choose the setting

- ▶ Set the size in the Customer menu (see 6.2 Control concept) .



## Reminder

Reminders are displayed acoustically by a beep and visually by a symbol in the display. The signal gets louder until the alert stops.



## Replace FreshAir active carbon filter

This message appears when the air filter needs replacing.

- ▶ Change the air filter every six months.
- ▶ Confirm the message to reset the maintenance interval.
- ▷ The air filter provides the best air quality in the fridge section.

### Activating the setting

- ▶ Activating/deactivating (see 6.2 Control concept) .



## Switching the appliance off

This setting turns off the whole appliance. The display goes dark.

### Switching off the entire appliance

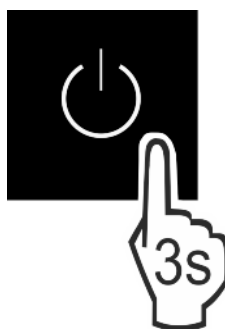


Fig. 12

- ▶ Activating/deactivating (see 6.2 Control concept) .

## 6.5 Warnings

Warnings are issued with an acoustic signal and visually with a symbol on the display. The signal gets louder until the alert stops.

### 6.5.1 Message



#### Close door

This message appears if the door is open for too long.

You can set how long it takes for this message to appear .

- ▶ Stop alarm: Confirm the message.

-or-

- ▶ Close the door.



#### Error

This message appears if there is a fault with the appliance. An appliance component indicates a fault.

- ▶ Open the door.
- ▶ Note down the fault code.
- ▶ Confirm the message.
- ▷ The audible signal stops.
- ▷ The display switches to the Status screen.
- ▶ Close the door.
- ▶ Contact Customer Services (see 9.4 Customer Services) .

# Features

## 6.5.2 DemoMode

If "D" appears on the display, demo mode is on. This option is designed for retailers, as it turns off all the cooling functions.

### Stopping DemoMode

If you see the following running in the display:

- ▶ Confirm the display within the countdown.
- ▷ DemoMode is off.
- If the timer is not running:
- ▶ Unplug the appliance.
- ▶ Plug the appliance in again.
- ▷ DemoMode is off.

## 7 Features

### 7.1 4-star freezer compartment

#### 7.1.1 Opening/closing the freezer compartment

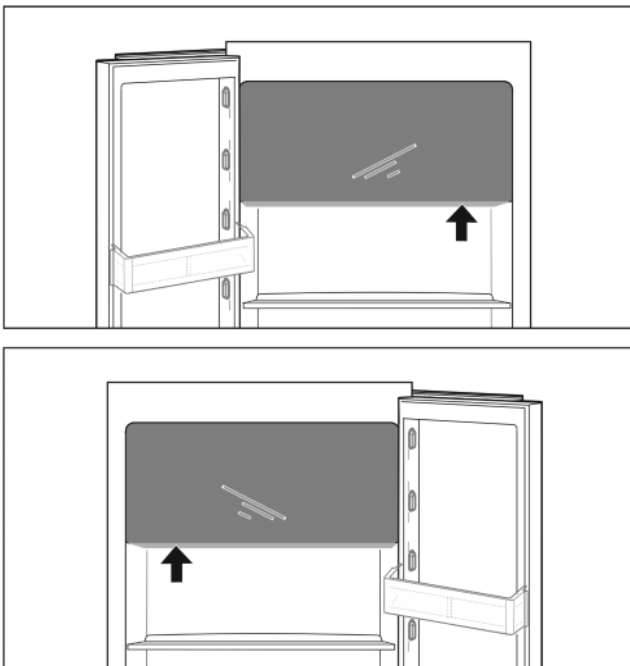


Fig. 13

Opening the freezer compartment:

- ▶ Grab the handle.
- ▶ Push the handle plate while pulling the door towards you.

Closing the freezer compartment:

- ▶ Close the door while pushing from the front.
- ▷ Door is engaged.

### 7.2 Door rack

#### 7.2.1 Move/remove the door rack

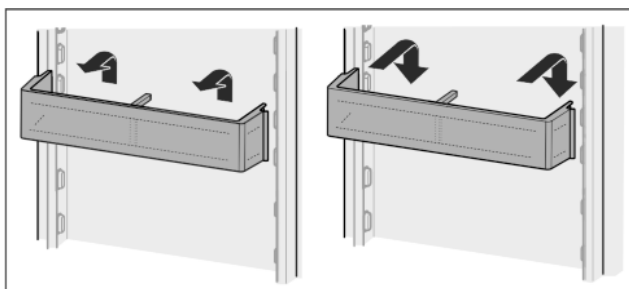


Fig. 14

- ▶ Remove the rack as per the illustration.

### 7.2.2 Disassembling the door rack

The door rack can be taken apart for cleaning.

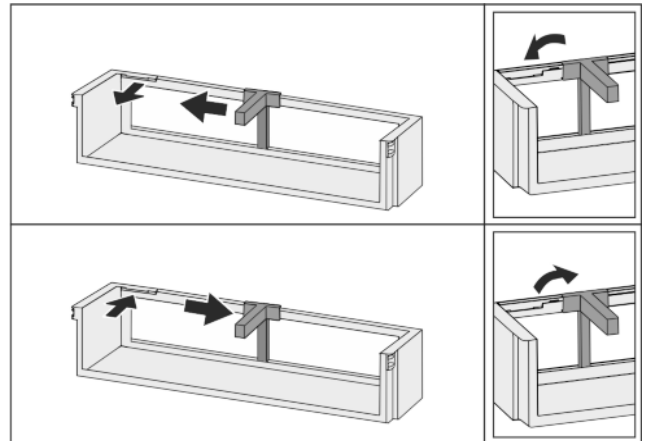


Fig. 15

- ▶ Disassemble the door rack.

### 7.3 Shelves

#### 7.3.1 Adjusting/removing the shelves

The shelves are prevented from being pulled out accidentally by pull out stops.

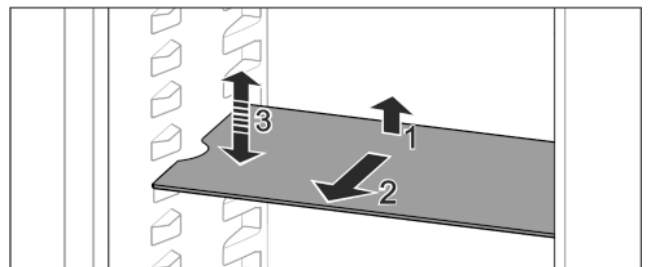


Fig. 16

- ▶ Lift the shelf and pull forward.
- ▷ Line up the side runner.
- ▶ To move a shelf: set to the position you want and slide into place.

-or-

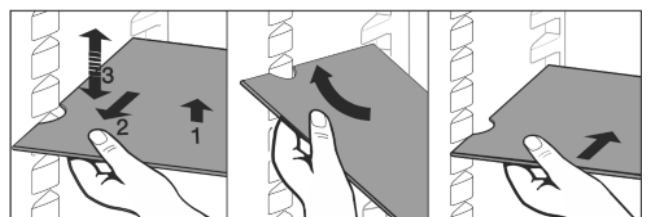


Fig. 17

- ▶ To remove the shelf completely: pull out towards you.
- ▶ Easier removal: Set the shelf at an angle.
- ▶ To replace the shelf: push in all the way.
- ▷ The pull-out stoppers point downwards.
- ▷ The pull-out stoppers are behind the front support.

### 7.4 Dividing shelf

#### 7.4.1 Using the dividing shelf

The shelves are prevented from being pulled out accidentally by pull out stops.

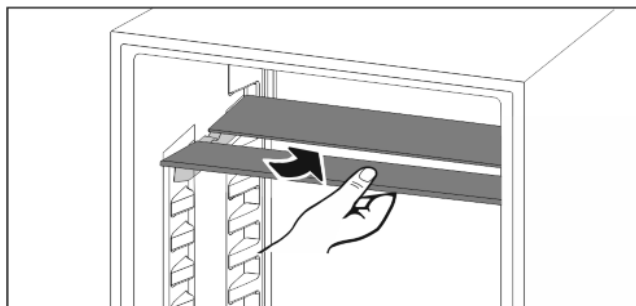


Fig. 18

- ▶ Push the dividing shelf underneath as shown.

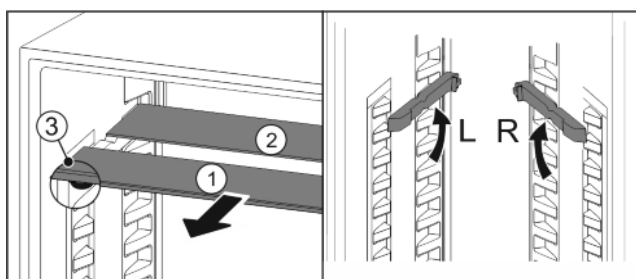


Fig. 19

### Adjusting the height:

- ▶ Pull the glass panels out Fig. 19 (1) from the front, one at a time.
- ▶ Release the support rails and click in at the height you want.
- ▶ Slide in the glass panels one at a time.
- ▷ Flat pull-out stoppers at the front, right behind the support rails.
- ▷ High pull-out stoppers at the back.

### Using both shelves:

- ▶ Lift the top glass plate and pull the bottom glass plate forwards.
  - ▷ Glass panel Fig. 19 (1) with pull-out stoppers is at the front.
  - ▷ Stoppers are pointing down Fig. 19 (3).
- Appliances with freezer compartment:
- ▶ Do not place the support rails and dividing shelf in front of the fan.

## 7.5 Space for baking tray

There is space for a baking tray Fig. 1 (6) above the drawers.

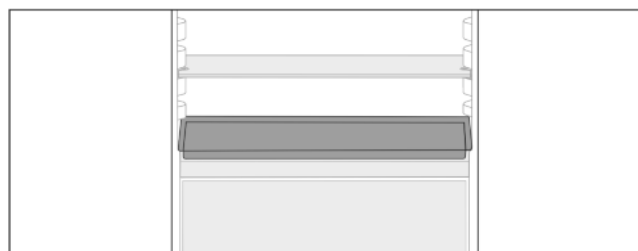


Fig. 20

Ensure that the following conditions are met:

- Max. baking tray dimensions are adhered to (see 9.1 Technical specifications) .
- Baking tray is cooled to room temperature.
- The lowest door rack is set at least one position higher.

With the door open to 90°:

- ▶ Slide the baking tray onto the lower side runners.

-or-

If baking tray is uneven:

- ▶ Use the supplied support rails.

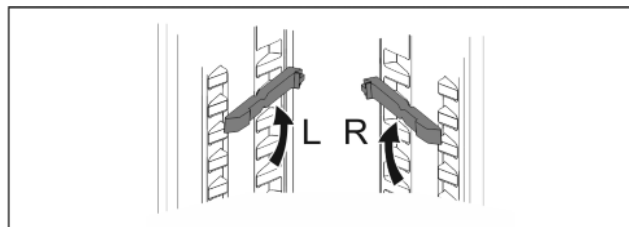


Fig. 21

- ▶ Snap support rails into the lowest runners. With the door open to 90°:
- ▶ Slide the baking tray in on the support rails.

## 7.6 Adjustable bottle shelf

### 7.6.1 Using the bottle shelf

In the bottom of the fridge section you can either use the variable bottle shelf or the glass panel.

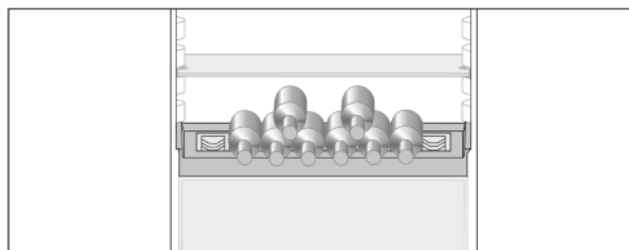


Fig. 22

- ▶ Remove the glass panel and store in a safe place.
- ▶ Lay bottles with their base towards the rear wall.

### Note

If the bottles are protruding over the front of the bottle shelf:

- ▶ Move the lower door rack up a place.

### 7.6.2 Removing the bottle shelf

You can remove the bottle shelf for cleaning.

- ▶ Remove the glass panel above the bottle shelf.

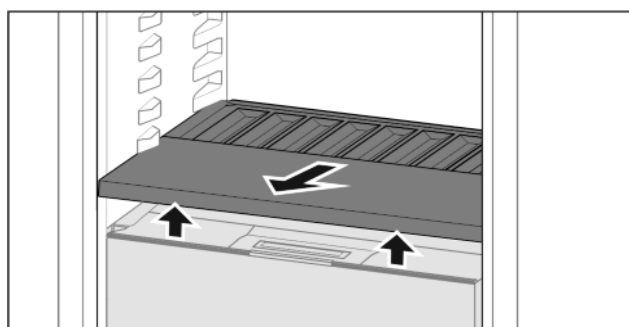


Fig. 23

- ▶ Lift the bottle shelf at the front and pull out.

### Note

Liebherr recommends the following:

Do not place any goods on the drawer cover below.

# Features

## 7.6.3 Inserting the bottle shelf

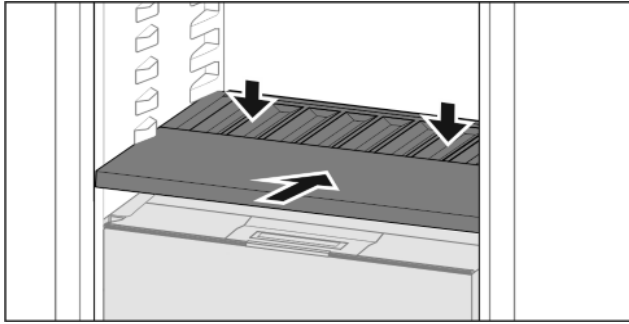


Fig. 24

- ▶ Slide in the bottle shelf until it engages and push down.

## 7.7 Drawers

Drawers can be removed for cleaning.

The way to remove/insert the drawers varies depending on the pull-out system. Your appliance can include various pull-out systems.

### 7.7.1 Removing the drawer

#### Drawer on retractable rails

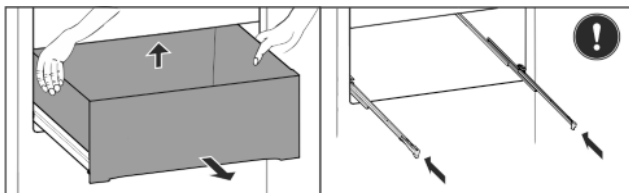


Fig. 25

- ▶ Pull out the drawer.
- ▶ Lift at the back and pull it out towards you.
- ▶ Slide the rails in.

#### Drawer pull-out trolley

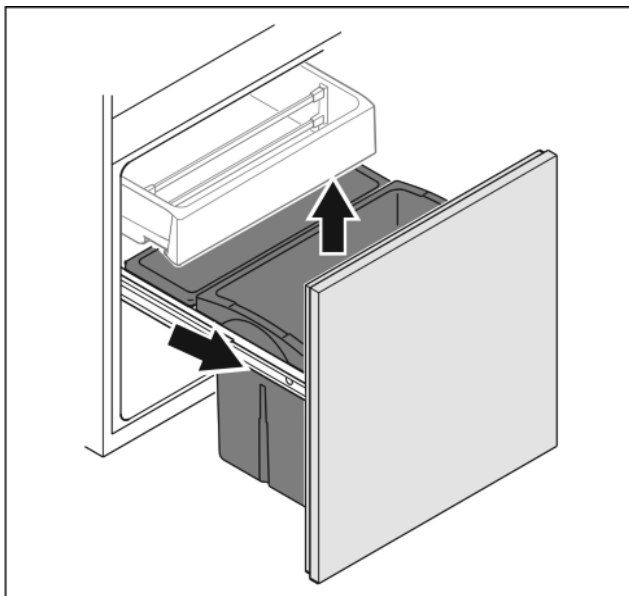


Fig. 26

- ▶ Pull out the trolley all the way.
- ▶ Both drawers: Lift the drawer up and out.

The retaining parts can be removed for cleaning.

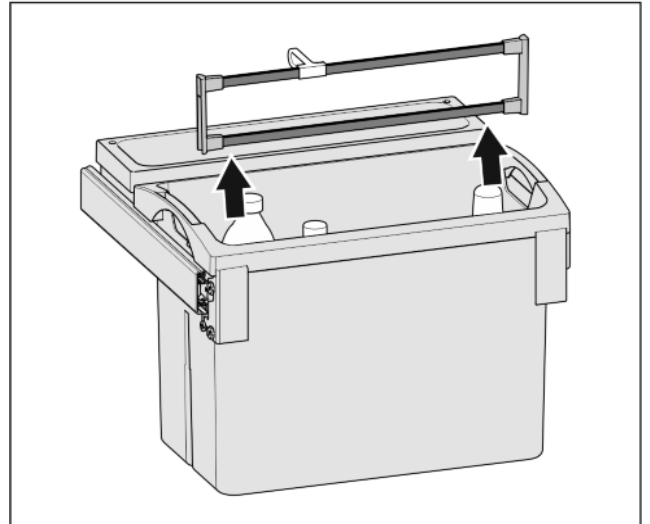
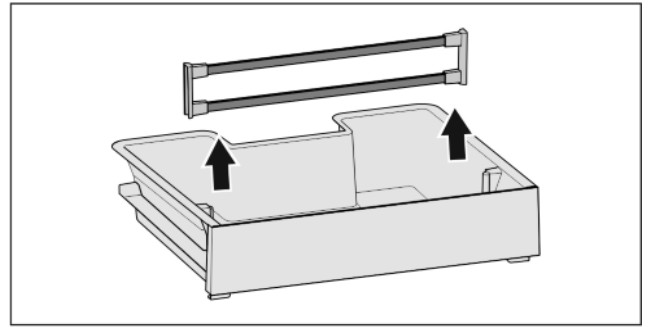


Fig. 27

- ▶ Remove retaining parts.
- ▶ After cleaning: Replace the retaining parts in reverse order.

### 7.7.2 Inserting the drawer

#### Drawer on retractable rails

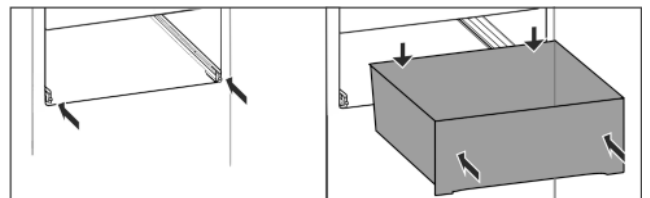


Fig. 28

The rails are inserted.:

- ▶ Slide the drawer on the rails all the way to the back.
- ▷ Clicks in at the back.

#### Drawer pull-out trolley

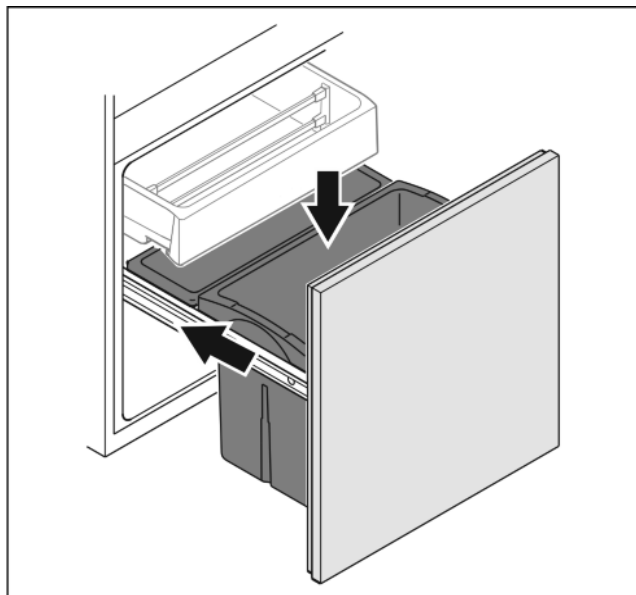


Fig. 29

- ▶ Pull out the trolley all the way.
- ▶ Both drawers: Insert the drawer compartment from above.

## 7.8 Fruit & Vegetable safe cover

You can remove the compartment cover for cleaning.

### 7.8.1 Removing the compartment cover

Ensure that the following conditions are met:

- Bottle shelf is removed (see 7.6 Adjustable bottle shelf).

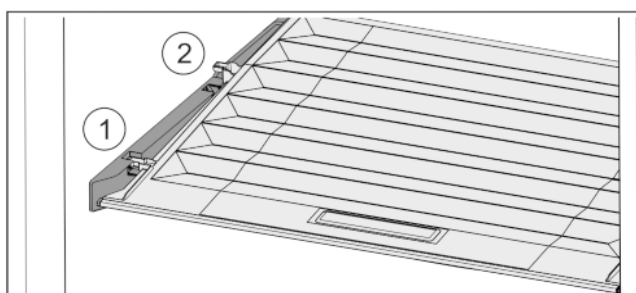


Fig. 30

When the drawers are removed:

- ▶ Pull the lid up at the front to the opening in the retaining parts Fig. 30 (1).
- ▶ Lift from the back and pull it up and out Fig. 30 (2).

### 7.8.2 Inserting the compartment cover

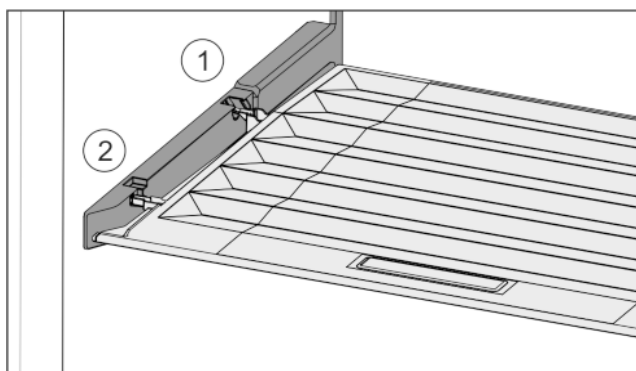


Fig. 31

- ▶ Insert the lip of the cover over the opening of the rear bracket Fig. 31 (1) and click into place Fig. 31 (2).

- ▶ Position the cover where you want it (see 7.9 Adjusting the moisture levels).

## 7.9 Adjusting the moisture levels

You can adjust the moisture in the drawer yourself by adjusting the compartment cover.

The compartment lid is attached to the drawer and can be hidden by a shelf or additional drawers.

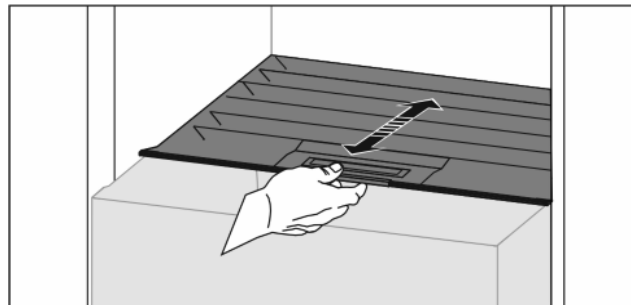


Fig. 32

### Low air humidity

- ▶ Open the drawer.
- ▶ Slide the compartment cover forwards.
- ▷ With the drawer closed: Gap between the cover and the compartment.
- ▷ The air moisture in the Safe decreases.

### High air moisture

- ▶ Open the drawer.
  - ▶ Slide the cover back.
  - ▷ With the drawer closed: The cover seals the compartment.
  - ▷ The air moisture in the Safe increases.
- If there is too much moisture in the compartment:
- ▶ Choose the setting "low air moisture".

-or-

- ▶ Remove any excess moisture with a cloth.

### Note

You can apply the "low air moisture" setting to the Fruit & Vegetable-Safe and the Meat & Dairy-Safe.

- ▶ Set the "low air moisture" option.

## 7.10 Accessories

### 7.10.1 Bottle holder

Using the bottle holder

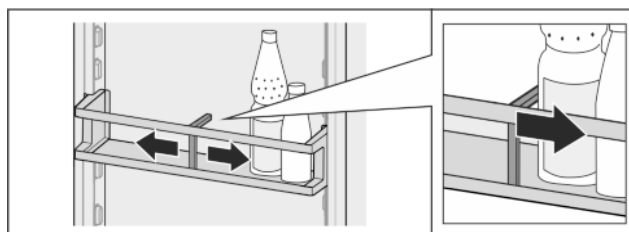


Fig. 33

- ▶ Push the bottle holder onto the bottles.
- ▷ The bottles are prevented from falling over.

# Maintenance

## Removing the bottle holder

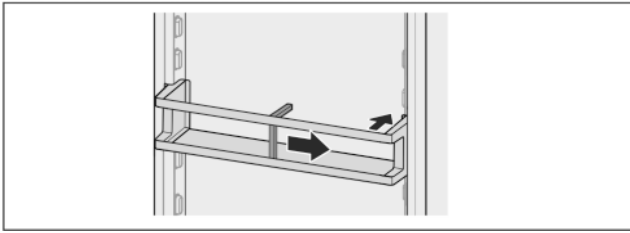


Fig. 34

- ▶ Move the bottle holder all the way to the right.
- ▶ Push the bottle holder to the back to remove.

## 8 Maintenance

### 8.1 FreshAir carbon filter

The FreshAir carbon filter is in the compartment above the fan. It guarantees the best air quality.

- Replace the carbon filter every 6 months.  
With the *Reminder* setting on, a message on the display prompts you to replace it.
- The carbon filter can be disposed of with the regular household waste.

#### Note

You can purchase the FreshAir carbon filter from the [Liebherr household appliance store](http://home.liebherr.com) (home.liebherr.com).

#### 8.1.1 Removing the FreshAir carbon filter

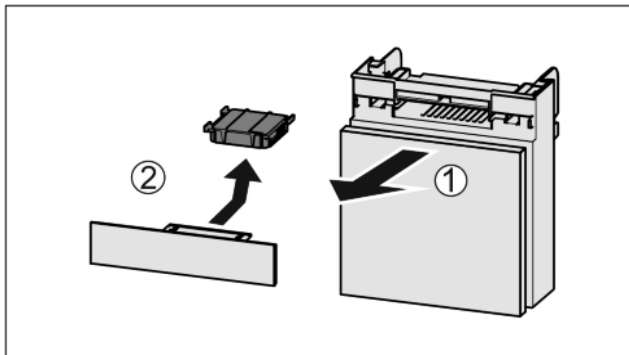


Fig. 35

- ▶ Pull out the compartment Fig. 35 (1).
- ▶ Remove the carbon filter Fig. 35 (2).

#### 8.1.2 Inserting the FreshAir carbon filter

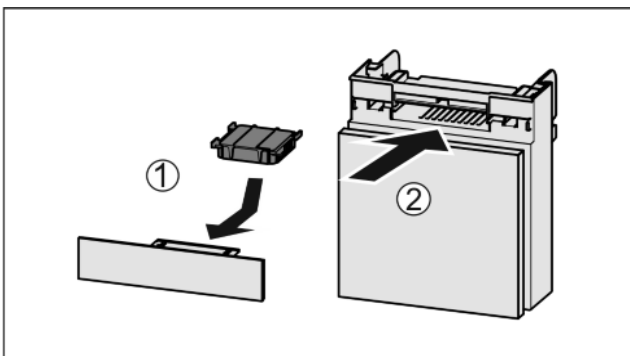


Fig. 36

- ▶ Insert the carbon filter as shown in the diagram Fig. 36 (1).
- ▷ The carbon filter clicks into place.  
If the carbon filter is pointing downwards:
  - ▶ Push the compartment in Fig. 36 (2).

- ▷ The carbon filter is now ready for use.

### 8.2 Defrosting the appliance



#### WARNING

Improper defrosting of the appliance!  
Injuries and damage.

- ▶ Never use mechanical aids or other means that have not been recommended by the manufacturer, to speed up the defrosting process.
- ▶ Do not use electrical heating or steam-cleaning appliances, naked flames or defroster sprays to defrost.
- ▶ Do not use sharp objects to remove ice.
- ▶ Do not damage the pipework in the cooling circuit.

Defrosting is automatic. The thawing water drains through the outlet and evaporates.

Water drops on the back wall are an essential part of the appliance's function and are completely normal.

- ▶ Clean the outflow opening regularly (see 8.3 Cleaning the appliance).

### 8.3 Cleaning the appliance

#### 8.3.1 Ready



#### WARNING

Danger of electric shock!

- ▶ Remove the refrigerator connector or interrupt the power supply.



#### WARNING

Risk of fire

- ▶ Do not damage the refrigeration circuit.

- ▶ Empty the appliance.

#### 8.3.2 Cleaning the interior

#### NOTICE

Improper cleaning!  
Damage to the appliance.

- ▶ Only use soft cleaning cloths and ph-neutral all-purpose cleaners.

Plastic surfaces:

- ▶ Clean by hand with a soft, clean cloth, lukewarm water and a little detergent.

Metal surfaces:

- ▶ Clean by hand with a soft, clean cloth, lukewarm water and a little detergent.

To clean the outlet Fig. 1 (10):

- ▶ Remove any deposits with a thin item such as a cotton bud.

#### 8.3.3 Clean the components

#### NOTICE

Improper cleaning!  
Damage to the appliance.

- ▶ Only use soft cleaning cloths and ph-neutral all-purpose cleaners.

**Clean with a soft, clean cloth, lukewarm water and some detergent:**

- Water tray
- Door rack
- Shelf



- Dividing shelf
- Fruit & Vegetable safe cover
- Drawer
- Adjustable bottle shelf

### Clean with a damp cloth:

- Retractable rails  
Please note: The grease in the tracks is used for lubrication and must not be removed!

### Wash in the dishwasher up to 60 °C:

- Bottle rack
- Holder of the dividing shelf
- ▶ To disassemble components: see the relevant section.
- ▶ Clean the components.

### 8.3.4 After cleaning

- ▶ Wipe the appliance and the components dry.
- ▶ Connect and switch on the appliance.
- ▶ Repeat cleaning regularly.

## 9 Customer help

### 9.1 Technical specifications

Temperature range	
Cooling	3 °C to 9 °C
Larder compartment	6 °C to 14 °C

Maximum freezer quantity / 24 hrs	
Freezer compartment	See the type plate under "Freezer goods ... /24 hours"

Maximum size baking tray	
Width	466 mm
Depth	386 mm
Height	50 mm

Lighting	
Class <sup>1</sup>	Light source
This product contains a light source that meets energy efficiency rating F	LED

<sup>1</sup> The appliance may contain light sources with different energy efficiency classes. The lowest class is given here.

### 9.2 Operating noises

The appliance makes different noises when it is on.

- At **higher temperatures** the appliance uses less energy but works for longer. It is **quieter**.
- At **lower temperatures** the food is cooled faster. It is **louder**.

Defect	Cause	Remedy
The appliance is not working.	→ The appliance is not switched on.	▶ Switch the appliance on.
	→ The power plug is not properly plugged into the socket.	▶ Check the power plug.
	→ There is something wrong with the power outlet fuse.	▶ Check the fuse.

Examples:

- Functions on (see 6.3 Functions)
- Fan running
- Food recently added
- High ambient temperature
- Door open for a while

Noise	Possible cause	Type of noise
Bubbling splashing and	Coolant flowing into the cooling circuit.	Normal operating noise
Hissing	Coolant sprays into the cooling circuit.	Normal operating noise
Humming	The appliance is cooling. The volume depends on the cooling output.	Normal operating noise
Suction noises	Soft-closing door is being opened and closed.	Normal operating noise
Humming rustling and	The fan is running.	Normal operating noise
Clicking	Components turning on and off	Normal switching noise
Rattling humming or	Valves or flaps are working.	Normal switching noise

Noise	Possible cause	Type of noise	Lifting
Vibration	Improper installation.	Defective noise	Check the installation. Level the appliance.
Rattling	Components, items inside the appliance	Defective noise	Secure components. Leave enough space between the items.

### 9.3 Technical fault

Your appliance is designed and built to ensure it works reliably and has a long service life. In the unlikely event that a fault occurs during operation, please check whether it is due to an operating error. If so, you will be charged for the callout and repair costs even if it falls within the warranty period.


You can fix the following faults yourself.


#### 9.3.1 Appliance function

# Customer help

Defect	Cause	Remedy
	→ Power cut	<ul style="list-style-type: none"> <li>▶ Keep the appliance closed.</li> <li>▶ Protecting food: Lay freezer packs on top of the food or use another freezer if the power is off for a prolonged period.</li> <li>▶ Do not re-freeze defrosted food,</li> </ul>
	→ The appliance plug does not fit the appliance properly.	▶ Check the appliance plug.
<b>Temperature is not cold enough.</b>	→ The appliance door is not closed properly.	▶ Close the appliance door.
	→ Not enough ventilation.	▶ Keep ventilation grille clear, and clean it.
	→ The ambient temperature is too high.	▶ Solution: (see 1.3 Appliance range of use) .
	→ The appliance was opened too many times or for too long.	▶ Wait to see if the required temperature corrects itself. If not, contact Customer Service (see 9.4 Customer Services) .
	→ The appliance is too close to a heat source (oven, radiator, etc).	▶ Move the appliance or the heat source.
	→ The appliance was not correctly installed in the recess.	▶ Check if the appliance was installed correctly and that the door closes properly.
<b>The door seal is defective or needs to be replaced for another reason.</b>	→ The door seal can be replaced. It can be replaced without the need for special tools.	▶ Contact Customer Services (see 9.4 Customer Services) .
<b>The appliance builds up too much ice or condensation.</b>	→ The door seal may have slipped out of its groove.	▶ Check that the door seal is well fitted in the groove.
<b>If the ambient temperature is lower than 18 °C the appliance can become hot in parts on the right of the inside wall of the fridge section.</b>	→ This is necessary for the appliance to work.	▶ This is normal.

## 9.3.2 Features

Defect	Cause	Remedy
<b>The internal light does not come on.</b>	→ The appliance is not switched on.	▶ Switch the appliance on.
	→ The door was open for longer than 15 minutes.	▶ Interior lighting turns off automatically after approx. 15 min. with the door open.
	→ The LED light is faulty or the cover is damaged:	<div style="border: 1px solid red; padding: 5px;">  <p><b>WARNING</b> Risk of injury due to electric shock! There are live electrical parts under the cover.</p> <ul style="list-style-type: none"> <li>▶ Only ever have the inside LED light replaced or repaired by customer service or trained personnel.</li> </ul> </div>

Defect	Cause	Remedy
		 <b>WARNING</b> Risk of injury from LED bulb! The light intensity of the LED light corresponds to hazard group RG 2. If the cover is defective: ► Do not look directly into the light from close range. It cause injury to the eyes.
<b>The freezer compartment cannot be closed.</b>	→ The lock is on when the door is open.	► Use the handle again.

## 9.4 Customer Services

First check if you can fix the error yourself (see 9 Customer help) . If you can't, contact Customer Services.

Please refer to the enclosed "Liebherr-Service" brochure for the address.



### WARNING

Risk of injury if repair work is not carried out professionally!

- Have any repairs and action - not expressly specified - on the appliance and mains cable carried out by service personnel only. (see 8 Maintenance)

### 9.4.1 Contact Customer Services

Make sure you have the following appliance data at the ready:

- Appliance name (model and index)
- Service no. (Service)
- Serial no. (S no.)
- Look up the appliance information on the display (see Info) .
- or-
- Referring to appliance info on the nameplate (see 9.5 Model plate) .
- Note down the appliance information.
- Notify Customer Services of the following: Give us the appliance data.
- ▷ This will help us to provide you with a faster, more accurate service.
- Follow any further instructions given by Customer Services.

## 9.5 Model plate

The model plate is behind the drawers on the inside of the appliance.

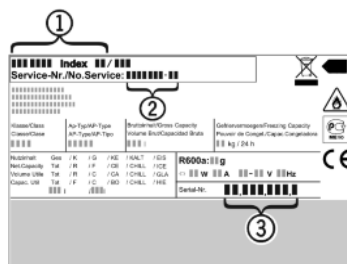


Fig. 37

- (1) Appliance description
  - (2) Service no.
  - (3) Serial no.
- Note the data on the model plate.

## 10 Shutting down

- Empty the appliance.
- Turn off the appliance (see 6.4 Settings) .
- Remove mains connector.
- Remove appliance connector if required: Remove and move from left to right at the same time.
- Clean the appliance (see 8.3 Cleaning the appliance) .
- Leave the door open to avoid bad smells building up.

## 11 Disposing of the appliance

The appliance contains some reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



Do not damage the disused appliance while removing it from the cooling circuit, in case the coolant (information on the model plate) ) or oil inside leaks out.

### For Germany:

The appliance can be disposed of free of charge in Class 1 collection containers at your local recycling centre. When purchasing a new fridge/freezer and if your sales area is > 400 m<sup>2</sup>, the retailer will also take back the old appliance free of charge.

### Decommission the appliance:

- Pull out the plug.
- Remove the connection cable from the appliance.



[home.liebherr.com/fridge-manuals](https://home.liebherr.com/fridge-manuals)

**EN** integrated fridge with pull-out drawer

Issue date: 20201211  
Part number index: 7088254-00