

HEART RATE MONITOR

  
**SIGMA**<sup>®</sup>  
GERMANY



**HEART  
RATE**



*PC 10.11*

DEUTSCH  
ENGLISH  
FRANÇAIS

DE

US/GB

FR

## CONTENTS

1	<b>Foreword</b>	32
2	<b>Packaging contents</b>	32
3	<b>Safety guidelines</b>	33
4	<b>Overview</b>	33
4.1	Activating the heart rate monitor	33
4.2	Attaching the chest belt	34
4.3	Before training	35
4.4	Pressing and holding down buttons	36
4.5	Overview of modes and functions	37
4.5.1	Sleep mode	38
4.5.2	Training mode	38
4.5.3	Setting mode	39
5	<b>Setting mode</b>	40
5.1	Activating the setting mode	40
5.2	Display setup	40
5.3	Button assignment in the setting mode	40
5.4	Brief guide to device settings	41
5.5	Establishing device settings	41
5.5.1	Setting the language	41
5.5.2	Setting the date	42
5.5.3	Setting the time	43
5.5.4	Setting the gender	44
5.5.5	Setting the date of birth	44
5.5.6	Setting the weight	44
5.5.7	Setting the max. HR	44
5.5.8	Setting the training zone	45
5.5.9	Training with training zones	46
5.5.10	Setting up an individual training zone	46
5.5.11	Setting the total running time	48
5.5.12	Setting the total calories	49
5.5.13	Setting the contrast	49
5.5.14	Setting the button tones	49
5.5.15	Turning the zone alarm on and off	49

## CONTENTS

6	<b>Training mode</b>	50
6.1	Activating the training mode	50
6.2	Display setup	50
6.3	Button assignment in the training mode	51
6.4	Functions while training	51
6.5	Starting a training session	52
6.6	Interrupting a training session	53
6.7	Ending a training session	53
6.8	Training values after training	54
6.9	Resetting the training values	54
7	<b>FAQ (frequently asked questions and servicing)</b>	55
8	<b>Maintenance and cleaning</b>	56
8.1	Changing the battery	56
8.2	Disposal	56
9	<b>Technical data</b>	57
10	<b>Warranty</b>	57

## 1 FOREWORD

Thank you for purchasing SIGMA SPORT® PC 10.11 heart rate monitor. Your new heart rate monitor will be a faithful training partner for many years to come. You can use your heart rate monitor for many different activities, including:

- Running
- Walking and Nordic Walking
- Hiking
- Swimming (HR measurement only)

The PC 10.11 heart rate monitor is a technically advanced instrument that measures your precise heart rate.

Please read these instructions carefully to familiarize yourself with the many functions of your new heart rate monitor and prepare for their use.

SIGMA SPORT® wishes you the best of fun with your heart rate monitor.

## 2 PACKAGING CONTENTS



PC 10.11 heart rate monitor  
incl. battery



Elastic belt



Transmitter

### 3 SAFETY GUIDELINES

- Consult your doctor before starting training in order to avoid health risks. This particularly applies if you suffer from any cardiovascular diseases or have not done any sport for a long time.
- Please do not use the heart rate monitor for diving; it is only suitable for swimming.
- Do not press any buttons while under water.

## 4 OVERVIEW

### 4.1 ACTIVATING THE HEART RATE MONITOR

Before you can train with your new PC 10.11, you need to activate it.


To do this, hold down the START/STOP button for 5 seconds. Your PC 10.11 will automatically change to setting mode. Use the TOGGLE (-) and TOGGLE (+) buttons to scroll through the basic settings. Press the START/STOP button to confirm your entry. Set the basic settings such as the language, date and time. Hold down the TOGGLE (+) button to exit the setting mode.

For further information, please see section 5 "Setting mode".



## 4 OVERVIEW

### 4.2 ATTACHING THE CHEST BELT




Attach the transmitter to the elastic belt.




The locking mechanism can be used to individually adjust the belt length.

Ensure that you set the belt length so that the belt is securely but not too tightly attached.

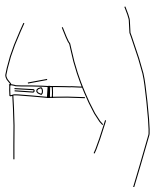


For men, attach the belt just below the pectoral muscles.

**It must be possible to read the SIGMA logo at the front.**

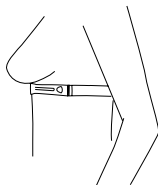

For women, attach the belt just below the breast.

**It must be possible to read the SIGMA logo at the front.**




Lift the belt slightly from the skin and wet the rear surface of the conductive ribbed rubber pads with water or moisten the pads with saliva.

## 4 OVERVIEW

### 4.3 BEFORE TRAINING

Before you can start training, you need to prepare the heart rate monitor in the following manner:

1. Put on the chest belt and the PC 10.11.

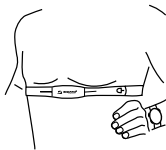

2. Activate the PC 10.11 by pressing any button.



3. The heart rate monitor automatically switches to training mode. Wait until your heart rate is displayed before you start training.



4. Start training. Press the START/STOP button to start training.



## 4 OVERVIEW

### 4.3 BEFORE TRAINING



5. To finish training, simply press the START/STOP button. The stopwatch stops. To reset the values to zero, press and hold the START/STOP button. To exit the training mode, press and hold the TOGGLE (-) button.

### 4.4 PRESSING AND HOLDING DOWN BUTTONS

The buttons on the heart rate monitor perform different actions depending on how long you press them:

- **Press button briefly** Activate or scroll through functions.
- **Press and hold** Switch to another mode, reset training values.

**Example:** You have finished training and want to activate the sleep mode.



Hold down the TOGGLE (-) button.



Keep the TOGGLE (-) button held down. The display will flash twice, indicating that the training mode is deactivated.



## 4 OVERVIEW


### 4.4 PRESSING AND HOLDING DOWN BUTTONS

The sleep mode will be displayed. Release the TOGGLE (-) button.



### 4.5 OVERVIEW OF MODES AND FUNCTIONS

The heart rate monitor has three main modes (training mode, setting mode and sleep mode). You can switch between these modes by pressing and holding a button.

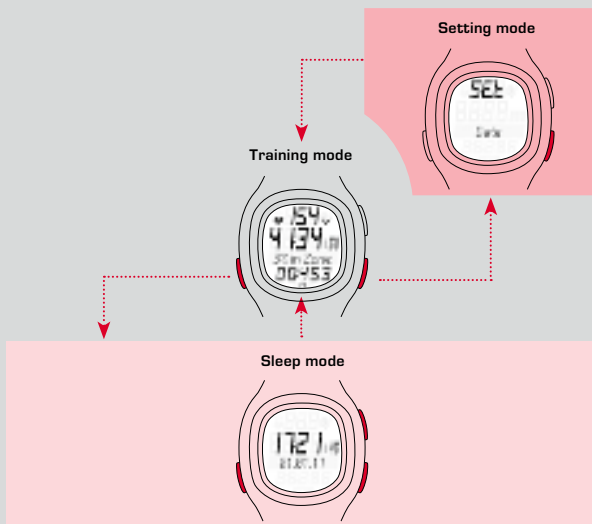


## 4 OVERVIEW

### 4.5.1 SLEEP MODE

In sleep mode, only the time and date are displayed. To switch from sleep mode to training mode, press and hold down any button.

### 4.5.2 TRAINING MODE

You will train in this mode.

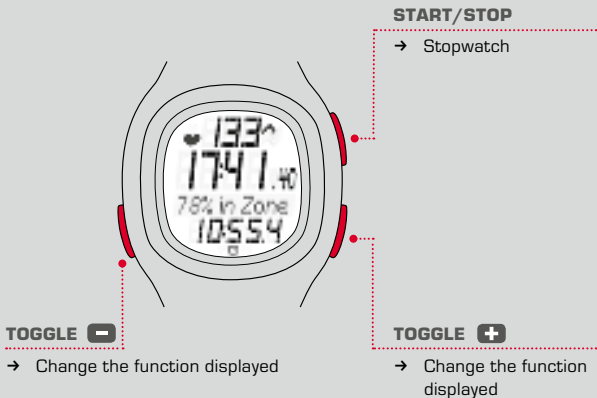


**\*Note:** To provide you with a clearer overview while training, the total values are only displayed if the stopwatch is not running.

## 4 OVERVIEW

### 4.5.3 SETTING MODE

This mode enables you to adjust the device settings.

- Use the TOGGLE (+) button to scroll forward from the language to the zone alarm.
- Use the TOGGLE (-) button to scroll backward from the zone alarm to the language.

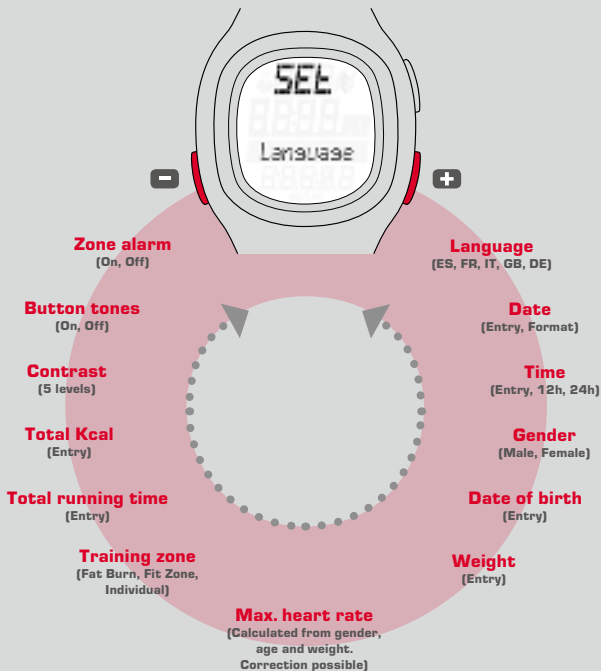

## 5 SETTING MODE

### 5.1 ACTIVATING THE SETTING MODE



**Prerequisite:** Your heart rate monitor must be in training mode (see section 4.5 'Overview of modes and functions').

Hold down the TOGGLE (+) button. The display will flash twice to indicate that the setting mode is now active.

### 5.2 DISPLAY SETUP



**1st line** SET indicates that the setting mode is active.

**3rd line/  
4th line** Submenu or the setting to be changed.

### 5.3 BUTTON ASSIGNMENT IN THE SETTING MODE

**TOGGLE** 

**Press:**

Reduce values

**Press and hold:**

Quickly reduce values



**START/STOP**

**Press:**

Select and confirm

**Press and hold:**

No function

**TOGGLE** 

**Press:**

Increase values

**Press and hold:**

Quickly increase values/Exit setting mode

## 5 SETTING MODE

### 5.4 BRIEF GUIDE TO DEVICE SETTINGS

Device settings such as language, gender, date of birth, weight, max. HR, contrast, button tones and zone alarm are all set in the same manner: Select the device setting, change the value and save the modified setting.

**Prerequisite:** Your heart rate monitor must be in setting mode (section 5.1).

- 1 Press the TOGGLE (-) or TOGGLE (+) button repeatedly until you reach the desired device setting.
- 2 Press the START/STOP button. The device setting value flashes.
- 3 Press the TOGGLE (-) or TOGGLE (+) button repeatedly until the desired value is displayed.
- 4 Press the START/STOP button. The new device setting is saved. You can now scroll to a different device setting.

### 5.5 MAKING DEVICE SETTINGS

#### 5.5.1 SETTING THE LANGUAGE

Follow the steps described in section 5.4 "Brief guide to device settings".

## 5 SETTING MODE

### 5.5.2 SETTING THE DATE

**Prerequisite:** Your heart rate monitor must be in setting mode.



Press the TOGGLE (+) button repeatedly until "Date" appears on the display.



Press the START/STOP button. "Year" is displayed and below it the preset year flashes. Press the TOGGLE (-) or TOGGLE (+) button repeatedly to set the year.



Press the START/STOP button. "Month" is displayed. Press the TOGGLE (-) or TOGGLE (+) button repeatedly to set the month.



Press the START/STOP button. "Day" is displayed. Press the TOGGLE (-) or TOGGLE (+) button repeatedly to set the day.



Press the START/STOP button. A date format is displayed. Select the desired date format by pressing the TOGGLE (-) or TOGGLE (+) button.



Press the START/STOP button. The data setting is saved.

## 5 SETTING MODE

### 5.5.3 SETTING THE TIME

**Example:** Winter time has changed to summer time and you want to adjust the time on your heart rate monitor.

**Prerequisite:** Your heart rate monitor must be in setting mode.

Press the TOGGLE (+) button repeatedly until "Time" appears on the display.



Press the START/STOP button. "24H" is displayed and flashes. Use the TOGGLE (-) or TOGGLE (+) buttons to choose between 12-hour and 24-hour format.



Press the START/STOP button. The time is displayed. The hours entry flashes.



Press the TOGGLE (+) button. The hour increases by one. Press the TOGGLE (-) button to decrease the displayed hour by one.



Press the START/STOP button. The minute entry flashes.



Press the START/STOP button. The new time is saved.



## 5 SETTING MODE

### 5.5.4 SETTING THE GENDER

Follow the steps described in section 5.4 “Brief guide to device settings”. This device setting is taken into account when calculating the maximum heart rate and calories. You should therefore ensure that you set this value correctly.

### 5.5.5 SETTING THE DATE OF BIRTH

Follow the steps described in section 5.4 “Brief guide to device settings”. This device setting is taken into account when calculating the maximum heart rate and calories. You should therefore ensure that you set this value correctly.

### 5.5.6 SETTING THE WEIGHT

Follow the steps described in section 5.4 “Brief guide to device settings”. This device setting is taken into account when calculating the maximum heart rate and calories. You should therefore ensure that you set this value correctly.

### 5.5.7 SETTING THE MAX. HR

The maximum heart rate (max. HR) is determined by the heart rate monitor on the basis of your gender, weight and date of birth.

**Caution:** On changing this value, you also change the training zones. Only change the max. HR value if it has been determined by a reliable test, such as performance diagnostics, max. HR test, etc.

Follow the steps described in section 5.4 “Brief guide to device settings”.



## 5 SETTING MODE

### 5.5.8 SETTING THE TRAINING ZONE

You can choose from three training zones. The upper and lower limits for the zone alarm are determined by the zone that you select.

**Example:** If you want to lose weight, select the “Fat Burn”.

**Prerequisite:** Your heart rate monitor must be in setting mode.

Press the TOGGLE (-) button repeatedly until “Train. Zone” appears on the display.



Press the START/STOP button. The set training zone is displayed.



Use the TOGGLE (+) button to scroll to “Fat Burn”.



Press the START/STOP button. The training zone is set for all future training sessions.



**Tip:** To return to the training mode, press and hold the TOGGLE (+) button.

## 5 SETTING MODE

### 5.5.9 TRAINING WITH TRAINING ZONES

Your heart rate monitor has three training zones. The preset training zones “Fat Burn” and “Fit Zone” are calculated from the maximum heart rate. Each training zone has an upper and a lower heart rate limit.

→ **Fat Burn**

This training is for the aerobic energy metabolism. Thanks to the long duration and low intensity, more fat than carbohydrates is burned or converted into energy. Training in this zone will help you lose weight.

→ **Fit Zone**

Your training is considerably more intensive in the Fitness Zone. Training in this zone enhances your basic endurance level.

→ **Individual Training Zone**

This zone is set up by you.

The procedure for selecting the training zone is described in section 5.5.8 “Setting the training zone”.

### 5.5.10 SETTING UP AN INDIVIDUAL TRAINING ZONE

**Example:** You would like to train in an individual training zone for a run with a change of pace. The pulse range should lie between 120 and 160.

**Prerequisite:** Your heart rate monitor must be in setting mode.



Press the TOGGLE (+) button repeatedly to scroll until “Train. Zone” appears on the display.

## 5 SETTING MODE

Press the START/STOP button. The set training zone is displayed.



Use the TOGGLE (+) button to scroll to "Individual".



Press the START/STOP button. "Lower limit" is displayed. The registered value flashes.



Press the TOGGLE (-) button repeatedly until the value is set to 120.



Press the START/STOP button. "Upper limit" is displayed. The registered value flashes.



Press the TOGGLE (+) button repeatedly until the value is set to 160.



Press the START/STOP button. The upper and lower limits are set.



## 5 SETTING MODE

### 5.5.11 SETTING THE TOTAL RUNNING TIME

**Example:** You have bought a heart rate monitor and want to take the total running time of 5 hours and 36 minutes from your training diary.

**Prerequisite:** Your heart rate monitor must be in setting mode.



Press the TOGGLE (+) button repeatedly to scroll until "Total time" appears on the display.



Press the START/STOP button. You will see zeros below the total time. The first three digits for the hours flash.



Press the TOGGLE (+) button five times until 5 is displayed.



Press the START/STOP button. The last two digits for the minutes flash.



Press the TOGGLE (+) button repeatedly until the value is set to 36.

**Tip:** Hold down the TOGGLE (+) button to increase the value quickly.

## 5 SETTING MODE

### 5.5.11 SETTING THE TOTAL RUNNING TIME

Press the START/STOP button. The setting is saved.



### 5.5.12 SETTING THE TOTAL CALORIES

Follow the steps described in section 5.5.11 "Setting the total running time".

### 5.5.13 SETTING THE CONTRAST

Follow the steps described in section 5.4 "Brief guide to device settings".

**Note:** The contrast changes directly.

### 5.5.14 SETTING THE BUTTON TONES

Follow the steps described in section 5.4 "Brief guide to device settings".

### 5.5.15 TURNING THE ZONE ALARM ON AND OFF

Follow the steps described in section 5.4 "Brief guide to device settings".

## 6 TRAINING MODE

### 6.1 ACTIVATING THE TRAINING MODE

To go to the training mode:


→ **From sleep mode**

Press and hold any button.

→ **From setting mode**

Press and hold the TOGGLE (+) button.

### 6.2 DISPLAY SETUP

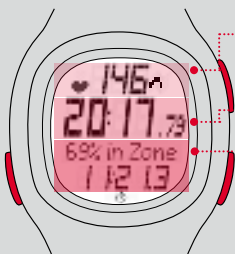

→ Current heart rate and zone indicator (when using a training zone)

→ This line displays the training time

→ Shows functions of TOGGLE (-) or TOGGLE (+) - e.g. the average heart rate frequency, time in zone or calories

→ **Arrow next to the HR value ▲**

In the example, the heart rate is below the selected training zone and should be increased. If the heart rate is too high, the arrow points down.

→ **Stopwatch icon ⌚**

The training session has started and the stopwatch is running.


## 6 TRAINING MODE

### → Stopwatch stopped

The stopwatch icon disappears. The function has a gray background and the stopwatch has stopped.



### 6.3 BUTTON ASSIGNMENT IN THE TRAINING MODE

**TOGGLE **


**Press:**  
Scroll backwards through the function

**Press and hold:**  
Exit training mode

**START/STOP**

**Press:**  
Start and stop the stopwatch

**Press and hold:**  
Reset training data

**TOGGLE **

**Press:**  
Scroll forwards through the function

**Press and hold:**  
Activate setting mode

### 6.4 FUNCTIONS WHILE TRAINING

The heart rate monitor measures many different training statistics but cannot display them all at once. You can therefore view other functions at the press of a button.

## 6 TRAINING MODE

### 6.4 FUNCTIONS WHILE TRAINING



Use the TOGGLE (-) or TOGGLE (+) buttons to select which function you want to see in the lower display area.

**Note:** Calories, average heart rate and time in zone are only calculated when the stopwatch is running.

### 6.5 STARTING A TRAINING SESSION

**Prerequisite:** Your heart rate monitor must be in training mode.



Press the START/STOP button. The running time begins. A stopwatch icon appears at the bottom of the display and the name of the measured value has a light background.





## 6 TRAINING MODE

### 6.6 INTERRUPTING A TRAINING SESSION

You can pause and restart your training any time.

Press the START/STOP button. The stopwatch icon disappears. The stopwatch stops.




Press the START/STOP button again. The stopwatch icon reappears. The stopwatch restarts.



### 6.7 ENDING A TRAINING SESSION

You have finished your training run and also want to end your training session on your heart rate monitor.

Press START/STOP button as soon as you want to end your training. This prevents your average heart rate or training time from being distorted.



Hold down the TOGGLE [-] button. You switch to sleep mode. Only the time and date are displayed so as to save the battery. The current training values remain saved.



**Note:** If you have stopped training, your heart rate monitor goes into sleep mode after five minutes.

## 6 TRAINING MODE

### 6.8 TRAINING VALUES AFTER TRAINING

**Prerequisite:** You must be in training mode.

After training, you can view the measured values in the training mode at your leisure. Use the START/STOP, TOGGLE (-) and TOGGLE (+) buttons to scroll through the individual values. In addition to the current training values, the heart rate monitor also shows summed values such as:


- Total time
- Total calories

**Note:** Total values are available only when the stopwatch is stopped.

### 6.9 RESETTING THE TRAINING VALUES

Before you begin a new training session, you should set the training values to zero as the heart rate monitor will otherwise continue to count the values. The summed total values for time and calories remain saved.

**Prerequisite:** You must be in training mode.



Press and hold the START/STOP button. The display flashes twice and all values are reset. You will then see the training mode again.

### **What happens if I remove the chest belt during training?**

The watch will no longer receive a signal. The screen will indicate "0" and after a short period of time the PC 10.11 will go into sleep mode.

### **Does the SIGMA heart rate monitor completely switch off?**

No – only the time and date are displayed in sleep mode, so that you can also use the heart rate monitor as a normal watch. The PC 10.11 uses very little power in this state.

### **The display responds sluggishly or shows a black coloration, what is the reason for this?**

The operating temperature may have been exceeded or fallen below. Your heart rate monitor is designed for a temperature of 0°C to 55°C.

### **What should I do if the display is faint?**

A faint display may be the result of a weak battery. The battery should be replaced as soon as possible – battery type CR 2032 (ref. no. 00342).

### **Are SIGMA heart rate monitors waterproof and can they be used for swimming?**

Yes – the PC 10.11 is watertight up to 3 ATM (corresponds to a test pressure of 3 bar). The PC 10.11 is suitable for swimming. Please note: Do not press the buttons underwater as water can enter the housing. Avoid using in sea water as malfunctions can occur.

## 8 MAINTENANCE AND CLEANING

### 8.1 CHANGING THE BATTERY

A CR 2032 battery (ref. no. 00342) is used in the heart rate monitor and chest belt. The SIGMA heart rate monitor is a state-of-the-art measuring instrument. To ensure proper functioning and water tightness, the batteries should only be changed by an authorized dealer.

Incorrect battery changes can damage the heart rate monitor and make void any warranty claims.

After a battery change, all personal details have to be reset.

**Important:** Dispose of old batteries properly (see section 8.2).

### 8.2 DISPOSAL



Batteries must not be disposed of with the household waste (Battery Law)! Please give the batteries to a designated delivery station for their disposal.



Electronic devices must not be disposed of with household waste. Please give the device to a designated disposal agency.

## 9 TECHNICAL DATA

### 9 TECHNICAL DATA

#### PC 10.11

- Battery type: CR2032
- Battery life: Average of 1 year
- Accuracy of the clock: Higher than  $\pm 1$  second/day at an ambient temperature of 20°C.
- Heart rate range: 40-240

#### Chest belt

- Battery type: CR2032
- Battery life: Average of 2 years

## 10 WARRANTY

### Warranty

We are liable for damages in accordance with the statutory regulations in respect to our contractual partners. Batteries are excluded from the warranty. For warranty claims, please contact the retailer from whom you purchased your heart rate monitor or send your heart rate monitor together with receipt of purchase and all accessory parts, with sufficient postage paid, to:

#### **SIGMA-ELEKTRO GmbH**

Dr.- Julius -Leber-Straße 15  
D-67433 Neustadt/Weinstraße, Germany

Tel. + 49 (0) 63 21-9120-118  
E-mail: [service@sigmasport.com](mailto:service@sigmasport.com)

If your warranty claim is valid, you will receive a replacement device. A claim only exists for the current model at this time. The manufacturer reserves the right to make technical changes.

# HEART RATE MONITOR

## PC 10.11

### **SIGMA-ELEKTRO GmbH**

Dr.-Julius-Leber-Straße 15  
D-67433 Neustadt/Weinstraße  
Tel. + 49 (0) 63 21-9120-0  
Fax. + 49 (0) 63 21-9120-34  
E-mail: [info@sigmasport.com](mailto:info@sigmasport.com)

### **SIGMA SPORT ASIA**

Asia, Australia, South America, Africa  
10F, No.192, Zhonggong 2<sup>nd</sup> Rd.,  
Xitun Dist., Taichung City 407, Taiwan  
Tel. +886-4-2358 3070  
Fax. +886-4-2358 7830

### **SIGMA SPORT USA**

North America  
3487 Swenson Avenue  
St. Charles, IL 60174, U.S.A.  
Tel. +1 630-761-1106  
Fax. +1 630-761-1107  
Service-Tel. 888-744-6277

[www.sigmasport.com](http://www.sigmasport.com)