


# Instruction


Ultrasonic Dog Training Device

**TZ-U50**

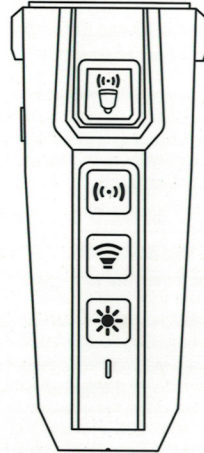

Please Read This Manual Carefully Before Use


## Accessories

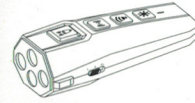


Ultrasonic Dog Training Device x1



Wrist Strap x1

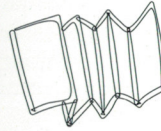


Manual x1

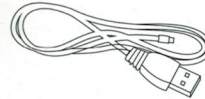

Type-C Charging Cable x1

-1-

## Product Overview

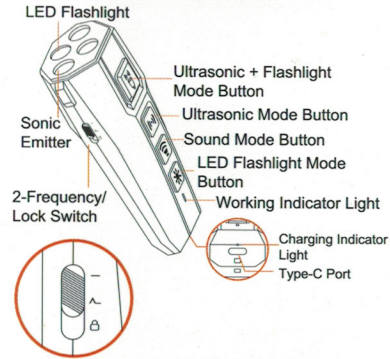

- : Switch to fixed-frequency (25kHz) ultrasonic mode
- ^ : Switch to variable-frequency (25kHz-30kHz) ultrasonic mode
- ⊞ : Enter button lock mode

-2-

## Product Characteristics

- Ultrasonic Emission Range: 16.4 -23 feet
- Charging Method: Type-C\_5V
- Charging Time: 2.5 Hours
- Working Mode: Sound Mode, Ultrasonic Mode, Ultrasonic+Flashlight Mode, LED Flashlight Mode
- 2 Ultrasonic Frequencies: Fixed Frequency (25kHz), Variable frequency (25kHz-30kHz)
- Sonic Emitter: 3Pcs
- LED Flashlight: 1Pcs
- Sound Mode Duration: 15 Hours
- Ultrasonic Mode Duration (at fixed frequency): 1.5 Hours
- Ultrasonic Mode Duration (at variable frequency): 1.7 Hours
- Ultrasonic+Flashlight Mode Duration (at fixed frequency): 1.3 Hours
- Ultrasonic+Flashlight Mode Duration (at variable frequency): 1.5 Hours
- LED Flashlight Mode Duration: 6-7 Hours

-3-

## Product Features

### Two Ultrasonic Modes

A human can receive sound from 20 Hz to 20 kHz, while this training device can emit 25kHz fixed-frequency and 25-30 kHz variable-frequency sound waves that only dogs can hear. 2 optional ultrasonic training modes can make daily dog training more effective and deter vicious dogs better.

### Three Emitters & Wider Range

The device comes with 3 sonic emitters. 3 sonic emitters are more effective than the single one, extending control range from 16.4ft to 23ft.

### Extra-bright LED Flashlight

The device is equipped with an extra-bright LED Flashlight, which has a long-bright mode to illuminate your front in the dark.

### Auto-off Safety Function

The device has an automatic shut-off feature, after emitting ultrasonic for 8 seconds, it will automatically stop working to protect our dogs.

-4-

## Basic Concepts

This ultrasonic dog training device has 4 working modes, including Sound Mode, Ultrasonic Mode, Ultrasonic + Flashlight Mode and LED Flashlight Mode. And each of them has a corresponding button to control. Our dog training device has 2 ultrasonic modes, adjustable by 2-frequency switch.

### Sound Mode:

The device will beep for 1 second with one press of the sound mode button. And it will beep continuously if you hold down the button.

### Ultrasonic Mode:

The device will emit ultrasonic for 1 second with one press of the ultrasonic mode button. And it will keep emitting ultrasound if you press and hold the button. You can select the ultrasonic mode by adjusting the 2-frequency switch on the side of the device.

### Ultrasonic + Flashlight Mode:

The device will emit ultrasound and flash the LED Flashlight when you press the button. And this mode will keep working if you press and hold the button. You can select the ultrasonic mode by adjusting the 2-frequency switch on the side of the device.

-5-

## LED Flashlight Mode:

More than a dog bark training or deterrent device, our unit can also be used as a Flashlight to illuminate in the dark. The Flashlight will turn on when you press and hold the LED Flashlight button for 1.5s, then short press to change from steady on to flashing, then press again to turn it off.

### Vibration Feedback:

Every time you press the Sound/Ultrasonic/Ultrasonic+Flashlight mode button, the device will vibrate in response. Press these buttons once to vibrate once, hold them down to vibrate continuously.

### Working Indicator Light:

- Short press Sound/Ultrasonic/Ultrasonic +Flashlight Mode button, and the green indicator light will flash. Hold these buttons, and the green indicator light will be on continuously.
- Short press LED Flashlight mode button, the green indicator does not flash. Only press and hold the button for 1.5s to turn on the LED Flashlight, then short press the button and the green indicator light will flash.
- When the battery is low, the device will automatically turn off after the red indicator light flashes.

-6-

## Charging Indicator Light:

- When charging, the red indicator light will be on continuously. When fully charged, the green indicator light will be on continuously.

## Operation Guide

### Step1. Test the Device

Please check the device before using it. You could go outside and check if this device will work within 16.4-23 feet.





-7-



### Flashlight + Ultrasonic Mode:


Hold the device in your hand. The device will emit ultrasound and flash the LED light when you press the button. And this mode will keep working if you press and hold the button. After sending an ultrasound and flashing the LED light for 8 seconds, this device will automatically stop working to protect our dogs. You can change the ultrasonic frequency by adjusting the 2-frequency switch.

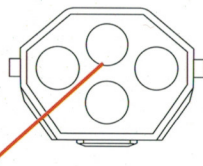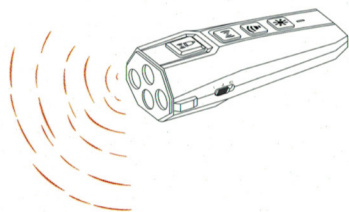

### Extra-bright LED Flashlight

Provides maximum illumination, making night walks safer


-12-

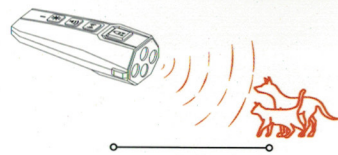

Please make sure that the distance between you and the dog should be within 23 feet. And there is no obstacles between you. Once the dog stops barking or behaving badly, please immediately stop to press the button.

### LED Flashlight Mode:

To turn on the LED Flashlight, you need to press and hold the button for 1.5s, short press the button, the device does not respond. After turning on the LED Flashlight, short press the button to change from steady on to flashing, and then short press to turn it off.

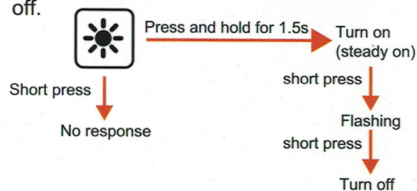

-13-

### Precautions

- This ultrasonic dog training device isn't a toy. Please keep it away from your children.
- Do not immerse this device in water or other liquids.
- Do not use this device on dogs who are under six months. As their auditory system is still developing, using this device on them may affect badly on them.
- Improper application of this device will be dangerous. Please use this product under our instruction and be careful and patient while training your dog.

-14-

### Frequently Asked Questions

#### Q1: Dose Ultrasonic Affect Other Animals?

A1: It depends on the hearing sensitivity of other animals. For example, this device may have little effect on cats or birds.

#### Q2: I have two dogs. One barks a lot, and the other doesn't. If I use the device on one of my dogs, will it hurt another?

A2: We will advise you to separate your two dogs before using this device on one of them. If more than one dog is barking in the house, the sound and ultrasound from this device will mislead them. So please do not use it on several dogs at the same time.



#### Q3: Why this device could only be used on dogs from 6 months to 8 years?

A3: Dogs over eight years old may not hear the ultrasound due to age-related hearing impairment. And dogs under six months are so small that their auditory system is still under development. So this device is not suitable for all dogs. Statistics have shown that this ultrasonic device only can be effective on 85%-90% of dogs. And some dogs, unfortunately, remain immune to ultrasound.

-15-

### Flashlight + Ultrasonic Mode:


Hold the device in your hand. The device will emit ultrasound and flash the LED light when you press the button. And this mode will keep working if you press and hold the button. After sending an ultrasound and flashing the LED light for 8 seconds, this device will automatically stop working to protect our dogs. You can change the ultrasonic frequency by adjusting the 2-frequency switch.

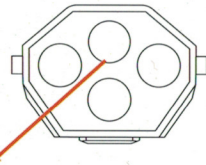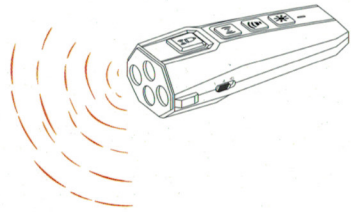

### Extra-bright LED Flashlight

Provides maximum illumination, making night walks safer


-12-

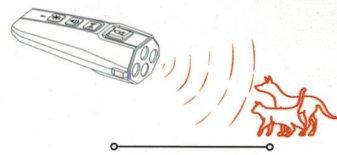

Please make sure that the distance between you and the dog should be within 23 feet. And there is no obstacles between you. Once the dog stops barking or behaving badly, please immediately stop to press the button.

### LED Flashlight Mode:

To turn on the LED Flashlight, you need to press and hold the button for 1.5s, short press the button, the device does not respond. After turning on the LED Flashlight, short press the button to change from steady on to flashing, and then short press to turn it off.

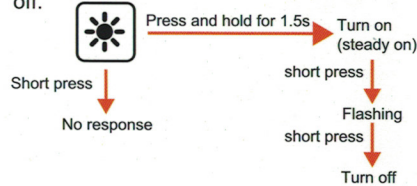

-13-

### Precautions

- This ultrasonic dog training device isn't a toy. Please keep it away from your children.
- Do not immerse this device in water or other liquids.
- Do not use this device on dogs who are under six months. As their auditory system is still developing, using this device on them may affect badly on them.
- Improper application of this device will be dangerous. Please use this product under our instruction and be careful and patient while training your dog.

-14-

### Frequently Asked Questions

#### Q1: Dose Ultrasonic Affect Other Animals?

A1: It depends on the hearing sensitivity of other animals. For example, this device may have little effect on cats or birds.

#### Q2: I have two dogs. One barks a lot, and the other doesn't. If I use the device on one of my dogs, will it hurt another?

A2: We will advise you to separate your two dogs before using this device on one of them. If more than one dog is barking in the house, the sound and ultrasound from this device will mislead them. So please do not use it on several dogs at the same time.

#### Q3: Why this device could only be used on dogs from 6 months to 8 years?

A3: Dogs over eight years old may not hear the ultrasound due to age-related hearing impairment. And dogs under six months are so small that their auditory system is still under development. So this device is not suitable for all dogs. Statistics have shown that this ultrasonic device only can be effective on 85%-90% of dogs. And some dogs, unfortunately, remain immune to ultrasound.

-15-