



Getting Started with the TI-84 Plus CE Graphing Calculator



This guidebook applies to software version 5.2. To obtain the latest version of the documentation, go to education.ti.com/go/download.

Important Information

Except as otherwise expressly stated in the License that accompanies a program, Texas Instruments makes no warranty, either express or implied, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, regarding any programs or book materials and makes such materials available solely on an "as-is" basis. In no event shall Texas Instruments be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials, and the sole and exclusive liability of Texas Instruments, regardless of the form of action, shall not exceed the amount set forth in the license for the program. Moreover, Texas Instruments shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

EasyData is a trademark of Vernier Software and Technology.

© 2016 Texas Instruments Incorporated

Contents

| | |
|---|-----------|
| Important Information | ii |
| What's New | 1 |
| What's New in TI-84 Plus CE Version 5.2 | 1 |
| Sequence Graphing | 1 |
| Distributions | 1 |
| TI-Basic Program Editor Update | 1 |
| Assessment Updates | 2 |
| CE Apps Version 5.2 | 2 |
| Using Your TI-84 Plus CE Graphing Calculator | 3 |
| Key Features | 3 |
| Using the Keyboard | 4 |
| Turning the TI-84 Plus CE On and Off | 4 |
| Using the TI-84 Plus CE Keyboard | 5 |
| Setting the Display Brightness | 8 |
| Using the Home Screen | 9 |
| Working with Menus | 15 |
| Setting Up the Calculator Modes | 19 |
| Setting Modes | 19 |
| MATHPRINT™ CLASSIC | 21 |
| NORMAL SCI ENG | 21 |
| FLOAT 0 1 2 3 4 5 6 7 8 9 | 22 |
| RADIAN DEGREE | 22 |
| FUNCTION PARAMETRIC POLAR SEQ | 23 |
| THICK DOT-THICK THIN DOT-THIN | 23 |
| SEQUENTIAL SIMUL | 24 |
| REAL $a+bi$ $re^{(qi)}$ | 24 |
| FULL HORIZONTAL GRAPH-TABLE | 24 |
| FRACTION TYPE: n/d Un/d | 25 |
| ANSWERS: AUTO DEC | 25 |
| STAT DIAGNOSTICS: OFF ON | 25 |
| STAT WIZARDS: ON OFF | 26 |
| SET CLOCK | 26 |
| LANGUAGE | 27 |
| Evaluating Expressions | 29 |
| Order of Operations | 29 |
| Entering Expressions and Instructions | 31 |

| | |
|---|-----------|
| Working with Graphs | 35 |
| Using Color on the TI-84 Plus CE | 35 |
| Using QuickPlot and Fit Equation | 37 |
| Working With Images | 37 |
| Working with Matrices | 38 |
| Using the Matrix Editor | 38 |
| Performing a Calculation with a Matrix | 38 |
| Working with Probability and Statistics | 40 |
| Working with Probability | 40 |
| Working with Statistics | 41 |
| Working with Variables | 45 |
| Storing Variable Values | 47 |
| Recalling Variable Values | 48 |
| Managing Calculator Files | 49 |
| Transferring the OS from calculator to calculator | 49 |
| Compatibility with Graphing Calculators | 49 |
| Using Applications (Apps) | 51 |
| Cabri™ Jr. App | 51 |
| CellSheet™ App | 51 |
| Conic Graphing App | 51 |
| Inequality Graphing App | 52 |
| Periodic Table App | 52 |
| Polynomial Root Finder and Simultaneous Equation Editor App | 52 |
| Probability Simulation App | 52 |
| Science Tools App | 53 |
| SmartPad™ CE App | 53 |
| TI-Innovator™ Hub App | 54 |
| Transformation Graphing App | 54 |
| Vernier EasyData™ App | 54 |
| Using Accessories | 55 |
| Using TI Desktop Software | 55 |
| Using the TI Charging Station CE | 55 |
| Using, Replacing, and Charging Batteries | 59 |
| Using Press-to-Test | 62 |
| Setting Up Test Mode | 62 |

| | |
|---|-----------|
| Bringing a Calculator Out of Test Mode | 64 |
| Diagnosing and Correcting Error Conditions | 65 |
| Diagnosing an Error | 65 |
| Correcting an Error | 65 |
| General Information | 66 |
| Texas Instruments Support and Service | 66 |
| Service and Warranty Information | 66 |
| Precautions for Rechargeable Batteries | 66 |
| Korean Class A warning statement | 67 |
| Index | 68 |

What's New

What's New in TI-84 Plus CE Version 5.2

To report issues and help us improve our applications, please email us at ti-cares@ti.com.


Sequence Graphing

Additional Seq graphing mode

Adds additional sequence types:

seq(n+1)

seq(n+2)

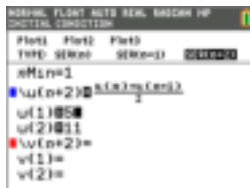


Adds easy sequence function entry from shortcut menu.



Distributions


Inverse Binomial Cumulative Distribution

Calculate the inverse binomial cumulative distribution. If needed, also calculate the binomial CDF for the resulting values for a full analysis.

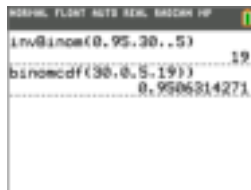

Inverse Normal Distribution Update

Updated to include an optional argument "tail" to calculate LEFT, $(-\infty, -a)$, CENTER $[-a, a]$ or RIGHT (a, ∞) for Real a . LEFT is default.

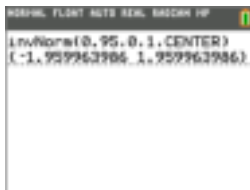

TI-Basic Program Editor Update

- Additional or Enhanced TI-Basic Commands
 - Wait
 - eval(
 - Send(Supports TI-Innovator™ commands

- Get(Enhanced with timeout argument
- DelVar
- to String(

TI-Basic Program Editor Line Number

If an error occurs when running a program, select Goto. The cursor is now near the error, and the command line number displays in the status bar.



MathPrint Icons on Shortcut menus

Shortcut menus enhanced with MathPrint template icons.



Assessment Updates

Always use the latest TestGuard™ CE App version with the latest CE OS for exam setups.

CE Apps Version 5.2

[Language Localization Apps](#)

- Up to date with the latest localizations.

[SmartPad CE App](#)

- Remote keypad support updated for TI-SmartView™ CE v 5.2.

[TestGuard™ CE App](#)

- Always use the latest version of app and OS for exam setups.

[TI-Innovator™ Hub App](#)

For CE version 5.2 only, a HUB submenu is added to the TI-Basic program editor with command support for TI-Innovator™ Hub. This app title will not display in the [apps](#) menu and runs automatically when loaded on the CE OS version 5.2.

[Vernier EasyData™ App version 5.2](#)

- Enhanced for TI-SmartView™ CE.
- Pre-loaded on the CE emulator in TI-SmartView™ CE version 5.2. Single sensor data collection is now available using the CE emulator only running Vernier EasyData™ App version 5.2.

Using Your TI-84 Plus CE Graphing Calculator

The TI-84 Plus CE graphing calculator comes with a USB cable, plenty of storage and operating memory. It also comes pre-loaded with software applications (Apps) to help you perform pre-algebra, calculus, biology, chemistry, and physics calculations.

Key Features

- **High resolution, full-color backlit display**
 - Distinguish between multiple graphs and plots with color-coded equations, plots, and objects
 - Make graphs easier to read by adding grid lines
- **TI Rechargeable Battery**
 - Recharges using a USB cable, wall charger, or TI Charging Station CE
- **Familiar TI-84 Plus functionality**
 - Similar menu structure and navigation as the TI-84 Plus family with enhanced features
 - Built-in MathPrint™ functionality to input and view math symbols, formulas and stacked fractions
- **Import and use images**
 - Use TI Connect™ CE Software to send images (.gif, .jpg, .png, .tif, .bmp) from a computer to a calculator
 - Graph on top of images to connect concepts to the real world

The built-in applications extend the functionality of your calculator, allowing you to perform specific math and science functions and to deepen your understanding of concepts. Some pre-loaded applications include:

- Cabri™ Jr. Geometry App
- Inequality Graphing
- CellSheet App
- Periodic Table
- Conic Graphing

Use this guide to learn more about these features and other essential tools of your TI-84 Plus CE graphing calculator.

Using the Keyboard

This section covers basic graphing calculator settings and explains how to navigate the home screen and menus.

Turning the TI-84 Plus CE On and Off

This section covers basic on and off features for your graphing calculator.

Turning the Graphing Calculator On

Press **on**.

An information screen displays:



- Press **1** to continue to the home screen but not see this information screen the next time you press **on**.

-or-

- Press **2** to continue to the home screen.

Note: Any entry from this information screen will take you to the home screen (a blank screen).

The information screen shows the following for information purposes only. You must go to the home screen before you can complete the following.

- Press **[alpha]** **[f1]** - **[f4]** to locate shortcut menus.
- Press **[+]** on most menu items for Catalog Help.

Note: This message also displays when you reset RAM.

You may see a shortcut menu located at **[alpha]** **[F5]** for interactive features used in the graph area.

Turning the Graphing Calculator Off

Press **[2nd]** **[off]**.

- The Constant Memory™ function retains settings and memory, and clears any error condition.
- If you turn off the TI-84 Plus CE and connect it to another graphing calculator or personal computer, any communication will “wake” it up.

Automatic Power Down™ (APD™)

- To prolong battery-life, APD™ automatically turns the TI-84 Plus CE off after about three to four minutes of inactivity.
- If APD™ turns the graphing calculator off, it will return as you left it, including the display, cursor, and any error.

Using the TI-84 Plus CE Keyboard

This section describes the functions of specific keys on the graphing calculator keyboard.

TI-84 Plus CE Keyboard

1 **Graph/Plot Setup Keys** allow access to interactive graphing features. When some graph screen features are active, you may see a shortcut menu in the **[alpha]** **[f5]** location for feature options.


2 **Editing Keys** allow you to edit expressions and values.

3 **Math and Statistics Keys** display menus that access math, statistics, and other basic functions.

4 **Scientific Keys** allow access to the capabilities of a standard scientific calculator—including trigonometric functions.


5 **Number Keys** allow you to enter numbers.

6 **Common Math Functions** allow you to divide, multiply, subtract, and add.

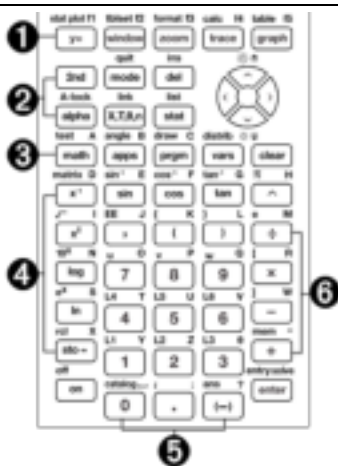

Function Keys

- 1** $\boxed{2\text{nd}}$ Access the second function printed to the left above each key.
- 2** $\boxed{\text{alpha}}$ Access the third function printed to the right above each key.
- 3** $\boxed{\text{alpha}}$ - $\boxed{[f1]}$ - $\boxed{[f4]}$ Access shortcut menus for fraction templates, n/d, quick matrix entry, select **MATH** menus, and **VARS** menu functions.
- 4** $\boxed{\text{alpha}}$ - $\boxed{[f5]}$ Access options for the **DRAW** command when used in **GRAPH**.

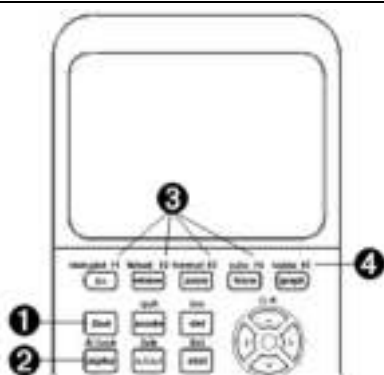


Using the Function Keys

Primary Function

- The function appears on the key.
Ex: to display the **MATH** menu, press $\boxed{\text{math}}$.


Secondary Function

- The function appears above the key in the same color as the $\boxed{2\text{nd}}$ key.
- When you press the $\boxed{2\text{nd}}$ key, the key name printed above the other key becomes active for the next keystroke.
Ex: to display the **TEST** menu, press $\boxed{2\text{nd}}$ and then $\boxed{\text{math}}$.
- The flashing cursor becomes $\boxed{\text{f}}$ when you press $\boxed{2\text{nd}}$. $\boxed{\text{f}}$ may also appear in the status bar.



Tertiary (Alpha Key) Function

- The function appears above the key in the same color as the $\boxed{\text{alpha}}$ key.
- The third function allows you to enter alphabetic characters and special symbols, and to access SOLVE and shortcut menus.
Ex: to display the letter **A**, press $\boxed{\text{alpha}}$ and then $\boxed{\text{math}}$.
- To enter several alphabetic characters in a row, press $\boxed{2\text{nd}}$ [A-lock]. This locks the alpha key in the ON position so that you avoid having to repeatedly press $\boxed{\text{alpha}}$. Press $\boxed{\text{alpha}}$ again to unlock it.
- The flashing cursor becomes $\boxed{\text{a}}$ when you press $\boxed{\text{alpha}}$. $\boxed{\text{a}}$ may also appear in the status bar.



Setting the Display Brightness

This section covers how to set the display brightness and explains automatic dimming.

Adjusting the Display Brightness

You can adjust the display brightness to suit your viewing angle and lighting conditions.

To adjust the brightness, follow these steps.

- ▶ Press **2nd** **▼** to darken the screen one level at a time.
- ▶ Press **2nd** **▲** to lighten the screen one level at a time.


The TI-84 Plus CE retains the brightness setting in memory when it is turned off.

Automatic Dimming

The TI-84 Plus CE automatically dims the screen brightness after 90 seconds of inactivity.

- ▶ Press **on** to return the screen to the preset brightness.
- ▶ Pressing **on** to adjust the brightness will not affect any of the current state of your calculator work.

Using the Home Screen



The image shows the TI-84 Plus CE Home Screen with a list of expressions and their corresponding answers. The screen is divided into two columns. The left column contains expressions, and the right column contains answers. The expressions are $x^2 + 4^2$, $|x|$, and $(-25 - 9)$. The answers are 5, 11, and 34. The screen is labeled with '1' and '2' at the bottom, corresponding to the legend on the right.

① Expressions
② Answers

Use the home screen to enter instructions and evaluate expressions. Answers appear on the same screen. Most calculations are stored in home screen history. Press \uparrow and \downarrow to scroll through the entry history and paste the entries or answers to the current entry line.

1. Enter a calculation.
2. Press 2nd [quit] from any screen until you get back to the home screen.
3. Press 2nd $\sqrt{}$ 3 x^2 + 4 x^2 \rightarrow + 6 enter .



Note: When you are in a MathPrint™ template, the cursor turns into a right arrow \rightarrow to indicate that you must press \rightarrow to get out of the template before you continue entering the calculation.



Displaying Entries and Answers

Mode settings control how the TI-84 Plus CE interprets expressions and displays answers. Press mode to switch between classic entries and MathPrint™ mode. This guide focuses on MathPrint™ Mode, but may reference some classic entries.

MathPrint™ Mode

- If an expression exceeds one line, it may scroll off the screen (on the home screen or the Y=screen). Press \rightarrow to see the entire expression.

Tip: Press the cursor without pressing 2nd to move the cursor along the line.

- An arrow appears to the left of an answer if it scrolls off the screen. Press \rightarrow and \leftarrow before you enter another expression to display the entire answer.

| Classic Entries | MathPrint™ |
|---|------------------------------|
| $1/2$ | $\frac{1}{2}$ |
| $\sqrt{5}$ | $\sqrt{5}$ |
| $nDerive(x^2, x, 1)$ | $\frac{d}{dx}(x^2) \mid x=1$ |
| Some input areas in MathPrint™ mode only support classic entries. Ex: [2nd] [tblset] | |

MathPrint™ (default)

| | |
|--|---------------------------|
| | Entry Answer (Scrolls) |
| | Entry Answer |

Scrolling Through the Home Screen History


If all lines of the display are full, text scrolls off the top of the display.

You can scroll up through previous entries and answers on the home screen, even if you have cleared the screen. When you find an entry or answer that you want to use, you can select it and paste it (press **enter**) on the current entry line.

Note: List and matrix answers cannot be copied and pasted to the new entry line. However, you can copy the list or matrix command to the new entry line and execute the command again to display the answer.

- ▶ Press **▲** or **▼** to move the cursor to the entry or answer you want to copy and then press **enter**.

The TI-84 Plus CE highlights the entry the cursor is on to help you select your desired choice.

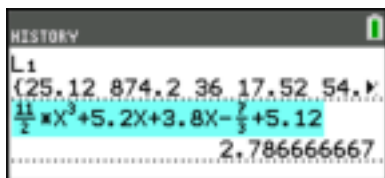

The entry or answer that you copied is automatically pasted on the current input line at the cursor location.

Note: If the cursor is in a MathPrint™ expression, such as the denominator of a fraction, press **alpha** **▲** to move the cursor out of the expression and then move the cursor to the entry or answer you want to copy to that location in the MathPrint™ template.

- ▶ Press **clear** or **del** to delete an entry/answer pair. After an entry/answer pair has been deleted, it cannot be displayed or recalled again.

Returning to the Home Screen

To return to the home screen from any other screen, press **2nd** **[quit]** until you get back to home screen.

Status Bar

The status bar displays on all screens and gives information about the selected calculator mode settings, any context help available for the item you currently have selected, and battery status.

The status bar may also show a busy indicator if the calculator is performing an operation, **■** to indicate the calculator is in alpha status, and **■** to indicate the secondary function is active.

Selected mode settings are displayed on the top line of the status bar when the cursor is in the active entry area. Mode settings do not display when the cursor is in the home screen history, since the mode may have been different for previous calculations.

Tip:

Context help, if available, is displayed on the second line. The battery status icon, busy indicator, alpha indicator, and second key indicator are on the right. When you scroll into the home screen history, the context help on the status bar displays HISTORY.


In the example below, the cursor is on the GridColor option. The context help for how to change the GridColor using the spinner menu is displayed on the second line of the status bar.



-
- 1 Selected MODE settings.
 - 2 Context help for current cursor position.
-

Battery icon.

- 3 This area of the status bar also displays the busy indicator, alpha indicator, and second key indicator, depending on the state of the graphing calculator.
-

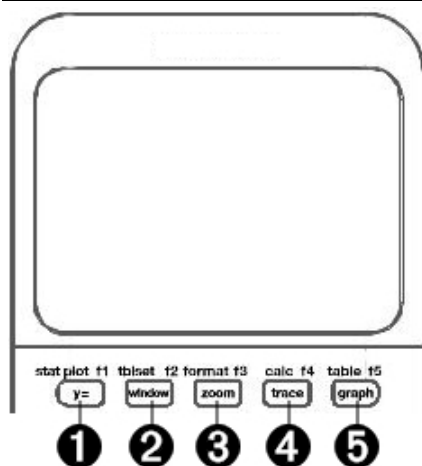Using Shortcut Menus

- 1 α [f1]
Opens FRAC menu.
 - 2 α [f2]
Opens FUNC menu.
 - 3 α [f3]
Opens MTRX menu.
 - 4 α [f4]
Opens YVAR menu.
 - 5 α [f5]
Opens special menus.
-

Shortcut menus allow quick access to the following:

- [f1] Templates to enter fractions, and to toggle between whole and mixed fractions, and fractions and decimals.
- [f2] Selected functions from the MATH MATH and MATH NUM menus as you would see them in a textbook, when in MathPrint™ mode. Functions include absolute value, numeric differentiation, numeric integration, summation, log base n, square root, permutations, combinations, and factorials.
- [f3] Quick MathPrint™ matrix entry, when available.
- [f4] Names of function variables from the VARS Y-VARS menu.

To open a shortcut menu, press α plus the corresponding F-key: [f1] for FRAC, [f2] for FUNC, [f3] for MTRX, [f4] for YVAR, or [f5] for special menus within interactive graph activities such as DRAW or QuickPlot and Fit Equation.

To select a menu item:

-either-

- ▶ Press the number corresponding to the item.

-or-

- ▶ Use the arrow keys to move the cursor to the appropriate line and then press enter .

You can select all shortcut menu items except matrix templates using standard menus. For example, you can choose the summation template from several places:

FUNC shortcut menu

α [f2]



2nd catalog










The shortcut menus are available to use where input is allowed. If the calculator is in Classic mode, or if a screen is displayed that does not support MathPrint™ display, entries will be displayed in Classic mode. The MTRX menu is only available in MathPrint™ mode on the home screen and in the Y= editor.

Note: Shortcut menus may not be available if α plus F-key combinations are used while an application is running.

Display Cursors

The cursor may change to indicate what will happen when you press the next key or when you select the next menu item to be pasted as a character.

Note: The second cursor  and alpha cursor  may appear on the status bar, depending on the context.

| Cursor | Appearance | Effect of Next Keystroke |
|------------|---|--|
| Entry | Solid rectangle  | This is the default cursor. Enter characters at this cursor; this overrides any existing character. |
| Insert | Underline — | Press $\overline{[2nd][ins]}$ for this cursor. Enter characters in front of the cursor location. |
| Second | Reverse arrow  | This allows you to enter a 2nd character or complete a 2nd operation. |
| Alpha | Reverse A  | An alpha character is entered, SOLVE is executed, or shortcut menus are displayed. |
| Full | Checkerboard rectangle  | No entry; the maximum characters are entered at a prompt or memory is full. Also indicates the limit of the allowed MathPrint™ mode levels. |
| MathPrint™ | Right arrow  | The cursor moves to either the next part of the template or out of the template. Press the right arrow to move out of all MathPrint™ templates before entering the remaining terms in an expression. |

If you press $\overline{[alpha]}$ during an insertion, the cursor becomes an underlined **A** (**A**). If you press $\overline{[2nd]}$ during an insertion, the underlined cursor becomes an underlined \uparrow (\uparrow).

Note: If you highlight a small character such as a colon or a comma and then press $\overline{[alpha]}$ or $\overline{[2nd]}$, the cursor does not change because the cursor width is too narrow.

Working with Menus

You can access TI-84 Plus CE commands using menus.

Displaying a Menu

- When you press a key to display a menu, that menu temporarily replaces the screen where you are working.
- **Ex:** press $\boxed{\text{math}}$ to display the **MATH** menu.
- After you select an item from a menu, the screen where you are working usually displays again.

Note: If a context help message is in the status bar when you press a menu that temporarily replaces the screen, that context help will remain in the status bar as a reminder that you are working within a context.

Moving from One Menu to Another

Some keys access more than one menu. When you press such a key, the names of all accessible menus are displayed on the top line. When you highlight a menu name, the items in that menu are displayed. Press $\boxed{\rightarrow}$ and $\boxed{\leftarrow}$ to highlight each menu name.

Note: FRAC shortcut menu items are found in the FRAC menu, and are also found on the MATH NUM menu. FUNC shortcut menu items are also found on the MATH MATH menu.



Scrolling a Menu

To scroll down the menu items, press $\boxed{\downarrow}$. To scroll up the menu items, press $\boxed{\uparrow}$.

To page down 9 menu items at a time, press $\boxed{\alpha} \boxed{\downarrow}$. To page up 9 menu items at a time, press $\boxed{\alpha} \boxed{\uparrow}$.

To go to the last menu item directly from the first menu item, press $\boxed{\uparrow}$. To go to the first menu item directly from the last menu item, press $\boxed{\downarrow}$.

Selecting an Item from a Menu

You can select an item from a menu in three ways.

- ▶ Press the number or letter of the item you want to select. The cursor can be anywhere on the menu, and the item you select does not need to be displayed on the screen.



-or-

- ▶ Press \downarrow or \uparrow to move the cursor to the item you want, and then press enter .

-or-

- ▶ Within the Catalog listing of functionality, move the cursor to the item you want, and then press + . For most commands, the Catalog Help syntax editor displays the correct syntax. Enter the syntax using the displayed help, and then press alpha [f4] to paste. The Catalog Help pastes the complete command.
- ▶ Press alpha [f5] to escape without pasting the command.



Notes:

- After you select an item from a menu, the TI-84 Plus CE typically displays the previous screen.
- If you do not see PASTE on the Catalog Help screen, press **[2nd][quit]** until you return to the home screen, then repeat your actions. If this happens, it may mean the screens were layered and the previous screen did not have an active cursor on an input line to accept the pasting of the function or command.

Leaving a Menu without Making a Selection

You can leave a menu without making a selection in these two ways.

- Press **[2nd][quit]** to return to the home screen.
- or-
- Press **[clear]** to return to the previous screen.



Using Menus

When you press a key or key combination to display a menu, one or more menu names appear on the top line of the screen.




- The menu name on the left side of the top line is highlighted. Up to nine items in that menu are displayed, beginning with item 1.
- A number or letter identifies each item's place in the menu. The order is 1 through 9, then 0, then A, B, C. Once number and letter options are exhausted, the item number or letter area will be blank. Select these items using the arrow keys.
- When the menu continues beyond the displayed items, a down arrow (↓) replaces the colon next to the last displayed item.
- When a menu item ends in an ellipsis (...), the item displays a secondary menu, editor, or wizard when you select it.
- When an asterisk (*) appears to the left of a menu item, that item is stored in user data archive. Pic and Image Vars are always stored in archive memory. You must move other files (displayed with an asterisk) from archive to RAM in the MEM menu.

Working with MATH Menus

The following are the MATH shortcut menus.

| | |
|---|---|
|  <p>MATH NUM CHPLX PROB FRAC 1: *frac 2: *Dec 3: ! 4: *f! 5: *f! 6: *fMin! 7: *fMax! 8: *Deriv! 9: *fInt! 0: summation ∫ R: logBASE(B: Numeric Solver...</p> |  <p>MATH CHPLX CHPLX PROB FRAC 1: *abs! 2: *round! 3: *Part! 4: *Part! 5: *int! 6: *int! 7: *max! 8: *let! 9: *odf! 0: *remainder! R: *r*d**U*d B: *F**D C: *U*d D: *d</p> |
|---|---|

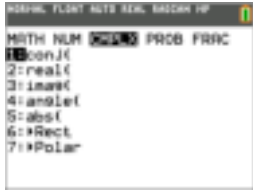Scroll down when you see the (↓) to see the whole menu.

| | |
|--|--|
|  <p>MATH NUM CHPLX PROB FRAC 1: *conj! 2: *real! 3: *imag! 4: *angle! 5: *abs! 6: *Rect! 7: *Polar</p> |  <p>MATH NUM CHPLX PROB FRAC 1: *and 2: *nPr 3: *nCr 4: ! 5: *randInt! 6: *randNorm! 7: *randBin! 8: *randIntNoRepl</p> |
|  <p>MATH NUM CHPLX PROB FRAC 1: *U*d 2: *U*d 3: *F**D 4: *r*d**U*d</p> | |

Setting Up the Calculator Modes

Mode settings control how the calculator displays and interprets:

- Answers
- Elements of lists and matrices
- Graphs
- Language settings
- Numbers

Setting Modes

To set calculator modes, press $\boxed{\text{mode}}$.

The following menu appears on your screen:



Note: When you press $\boxed{\text{mode}}$, the cursor is on **NORMAL** by default. Press $\boxed{\blacktriangle}$ to switch between MathPrint™ and Classic modes.

Note: The Constant Memory™ feature retains mode settings when the unit is turned off.

| Mode | Description |
|--|--|
| MATHPRINT CLASSIC | Change how inputs and outputs are displayed. |
| NORMAL SCI ENG | Change how decimals are displayed. |
| FLOAT 0 1 2 3 4 5 6 7 8 9 | Set the number of digits displayed. |
| RADIAN DEGREE | Set how the calculator interprets angle values. |
| FUNCTION PARAMETRIC POLAR SEQ | Set how functions, relations, and sequences are displayed. |
| THICK DOT-THICK | Change the graph line style. |

| Mode | Description |
|--------------------------------------|---|
| THIN DOT-THIN | |
| SEQUENTIAL SIMUL | Change the order in which functions are plotted. |
| REAL a+bi re^(0i) | Change the way complex numbers are displayed. |
| FULL HORIZONTAL GRAPH-TABLE | Change the way a graph is displayed. |
| FRACTION TYPE: N/D | Change the way a fraction is displayed. |
| ANSWERS: AUTO DEC | Change the format in which you see your results. |
| STAT DIAGNOSTICS: OFF ON | Controls whether a statistical regression displays with or without the correlation coefficient. |
| STAT WIZARDS: ON OFF | Turn the stat wizard on or off. |
| SET CLOCK 00/00/00 00:00 PM | Set the clock. |
| LANGUAGE: ENGLISH | Change the graphing calculator's display language. |

Changing Mode Settings

To change mode settings, follow these steps:

1. Press \downarrow or \uparrow to move the cursor to the line of the setting that you want to change.
2. Press \rightarrow or \leftarrow to move the cursor across the line to the desired setting.
3. Press enter to select a setting.

Exception: LANGUAGE Press \rightarrow or \leftarrow to select a loaded language. Press \downarrow or \uparrow to set the selected language.

Note: The second line of the status bar displays context help with a description of line modes.

MATHPRINT™ CLASSIC

MATHPRINT™ mode displays most inputs and outputs the way they are shown in

textbooks, such as $\frac{1}{2} + \frac{3}{4}$ and $\int_1^2 x^2 dx$.

CLASSIC mode displays expressions and answers as if written on one line, such as $1/2 + 3/4$. (Fraction bars appear as thick lines. A division operation will appear as a thin slash mark.)

Note:

- Some areas in MATHPRINT™ mode display in classic (one line) formats.
- If you switch between these modes, most entries (except matrix calculations) will be preserved.

NORMAL SCI ENG

Answers are displayed in standard formats when the calculation or setting forces a decimal result on the calculator.

| Notation for 12345.67 | Decimal answer displays as: |
|--|-----------------------------|
| NORMAL 12345.67 Retains the decimal notation up to limits of the calculator display and memory. | 12345.67 |
| SCI (Scientific) 1.234567×10^4 One digit to the left of the decimal with the appropriate power of 10 to the right of *E. | 1.234567E4 |
| ENG (Engineering) 12.34567×10^3 | 12.34567E3 |

Up to three digits before the decimal and the power of 10 (to the right of E) is a multiple of three.

Note:

The keypad contains $\boxed{2nd}$ [EE], which displays as E on the calculator. *This E in the display stands for "x10" and the number entered after E becomes the power of 10. The calculator notation, E, designates the "x10" part of the number without using extra parentheses. The calculator then follows the order of operations as expected when using SCI or ENG notation. This notation, E, is not typically accepted on homework and exams, and written results should use the standard notation, for example, the 1.234567×10^4 . If you select **NORMAL** notation, but the answer cannot display in 10 digits (or the absolute value is less than .001), the TI-84 Plus CE expresses the answer in scientific notation.

FLOAT 0 1 2 3 4 5 6 7 8 9

FLOAT (floating) decimal mode displays up to 10 digits, plus the sign and decimal. **FLOAT** will display in the status bar.

Selecting **0123456789** specifies the number of digits (0 through 9) to display to the right of the decimal for decimal answers. **FIX#** will display in the status bar.

The decimal setting applies to **NORMAL, SCI, and ENG** notation modes.

The decimal setting applies to these numbers, with respect to the **ANSWER** mode setting:

- An answer displayed on the home screen
 - Coordinates on a graph
 - The **Tangent**(DRAW instruction equation of the line, x, and **dy/dx** values
 - Results of calculated operations
 - The regression equation stored after the execution of a regression model
-

RADIAN DEGREE

Angle modes control how the calculator interprets angle values in trigonometric functions and polar/rectangular conversions. The **RADIAN** or **DEGREE** setting will display in the status bar.

RADIAN mode interprets angle values as radians. Answers display in radians.

DEGREE mode interprets angle values as degrees. Answers display in degrees. Polar complex number arguments are always interpreted in radians.

FUNCTION PARAMETRIC POLAR SEQ

Graphing modes define the graphing parameters.

FUNCTION graphing mode plots functions, where Y is a function of X.

PARAMETRIC graphing mode plots relations, where X and Y are functions of T.

POLAR graphing mode plots functions, where r is a function of θ .

SEQUENCE graphing mode plots sequences. Three sequences are available: u, v, and w, with an option of the independent variables of n, n+1, and n+2.



THICK DOT-THICK THIN DOT-THIN

| Line Style: | Graphs as: |
|------------------|--|
| THICK | Thick line style (default). More pixels displayed around a plotted point (pixel). |
| DOT-THICK | Large dot plotting. (3x3 pixels) Equivalent to DOT on earlier TI-84 Plus family calculators. |
| THIN | Thin line style (graphing per pixel). |
| DOT-THIN | DOT display is 1 pixel per dot graphed. |

Note: You can change individual line styles in the Y=editor.

THICK plotting mode resets all Y= line styles to a thick line connecting each point calculated for the selected functions.

Note: The **THICK** plotting mode on the TI-84 Plus CE is equivalent to the **CONNECTED** plotting mode on the TI-84 Plus family of graphing calculators.

DOT-THICK plotting mode resets all Y= line styles to a large dot and plots only the calculated points of the selected functions.

Note: The **DOT-THICK** plotting mode on the TI-84 Plus CE is equivalent to the **DOT** plotting mode on the TI-84 Plus family of graphing calculators.

THIN plotting mode resets all Y= line styles to a thin line connecting each point calculated for the selected functions.

Note: Use **THIN** plotting mode for function graphing when looking at any functions which asymptote to an axis.

DOT-THIN plotting mode resets all Y= line styles to a small dot and plots only the calculated points of the selected functions.

SEQUENTIAL SIMUL

SEQUENTIAL graphing-order mode evaluates and plots one function completely before the next function is evaluated and plotted.

SIMUL (simultaneous) graphing-order mode evaluates and plots all selected functions for a single value of X and then evaluates and plots them for the next value of X.


Note: Regardless of which graphing mode is selected, the calculator will sequentially graph all stat plots before it graphs any functions.

REAL $a+bi$ $re^{i\theta}$

REAL mode does not display complex results unless complex numbers are entered as input.

Two complex modes display complex results.

- **$a+bi$** (rectangular complex mode) displays complex numbers in the form $a+bi$. The TI-84 Plus CE supports the n/d fraction template.
- **$re^{i\theta}$** (polar complex mode) displays complex numbers in the form $re^{i\theta}$.

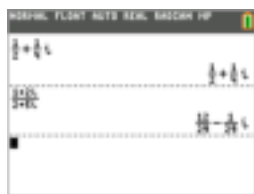


FULL HORIZONTAL GRAPH-TABLE


FULL screen mode uses the entire screen to display a graph or edit screen.

Each split-screen mode displays two screens simultaneously.

- **HORIZONTAL** mode displays the current graph on the top half of the screen; it displays the home screen or an editor on the bottom half.
 - **GRAPH-TABLE** mode displays the current graph on the left half of the screen; it displays the table screen on the right half.
-

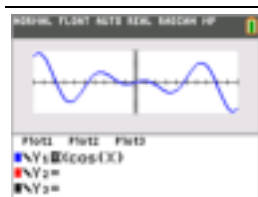

Horizontal

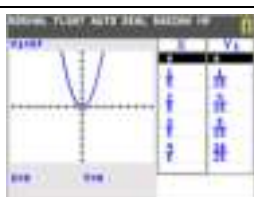

Graph-Table

FRACTION TYPE: n/d $U n/d$

n/d displays results as a simple fraction. Fractions may contain a maximum of six digits in the numerator; the value of the denominator may not exceed 9999.

$U n/d$ displays results as a mixed number, if applicable. **U**, **n**, and **d** must be all be integers. If **U** is a non-integer, the result may be converted **U n/d**. If **n** or **d** is a non-integer, a syntax error is displayed. The whole number, numerator, and denominator may each contain a maximum of three digits.

ANSWERS: AUTO DEC

AUTO displays answers in a similar format as the input. For example, if a fraction is entered in an expression, the answer will be in fraction form, if possible. If a decimal appears in the expression, the output will be a decimal number.

DEC displays answers as integers or decimal numbers.

Note: The **ANSWERS** mode setting also affects how values in sequences, lists, and tables are displayed. You can also convert values from decimal to fraction or fraction to decimal using **▶FRAC**, **▶DEC**, and **▶F◀▶D** located in the **FRAC** shortcut menu or the **MATH** submenu.

OFF: The function or command will paste to the cursor location with no syntax help (wizard).

STAT DIAGNOSTICS: OFF ON

OFF displays a statistical regression calculation *without* the correlation coefficient (r) or the coefficient of determination (r^2).

ON displays a statistical regression calculation *with* the correlation coefficient (r), and the coefficient of determination (r^2), as appropriate.

mark to select it. The ALPHA uppercase mode is automatically turned on. To change to lowercase, press $\boxed{\text{ALPHA}}$.

- f) Press the key associated with the alpha character that you want to accent, for example, [A] (above $\boxed{\text{math}}$). The accented character is displayed in the edit line.
 - g) Press $\boxed{\leftarrow}$, $\boxed{\rightarrow}$, $\boxed{\downarrow}$, or $\boxed{\uparrow}$ to move the box to **Done**.
 - h) Press $\boxed{\text{ENTER}}$ to paste the contents of the edit line to the previous screen.
-

Evaluating Expressions

An expression is a group of

- numbers,
 - variables,
 - functions and their arguments,
- or-
- a combination of these elements.

An expression evaluates to a single answer.

On the TI-84 Plus CE, you enter an expression in the same order as you would write it on paper. For example: πR^2 is an expression.

Order of Operations

The TI-84 Plus CE uses an order of operations system called Equation Operating System (EOS™), which

- defines the order in which functions in expressions are entered and evaluated
- and-
- allows you to enter numbers and functions in a simple, straightforward sequence.

EOS™ evaluates the functions in an expression in this order:

| Order | Function |
|-------|--|
| 1 | Functions that precede the argument, such as sin(or log(|
| 2 | Functions that are entered after the argument, such as 2, -1, !, °, r, and conversions |
| 3 | Powers and roots, such as 2^5 or $5^x\sqrt{32}$ |
| 4 | Permutations (nPr) and combinations (nCr) |
| 5 | Multiplication, implied multiplication, and division |
| 6 | Addition and subtraction |
| 7 | Relational functions, such as > or < |
| 8 | Logic operator and |
| 9 | Logic operators or and xor |

Note: Within a priority level, EOS™ evaluates functions from left to right. Calculations within parentheses are evaluated first. A number in scientific or engineering notation, $2.34E6$, is interpreted as (2.3×10^6) with parentheses so the number remains the correct value during the EOS™ calculation.

Implied Multiplication

The TI-84 Plus CE recognizes implied multiplication, so you do not need to press \times to express multiplication in all cases. For example, the TI-84 Plus CE interprets 2π , $4\sin(46)$, $5(1+2)$, and $(2 * 5)7$ as implied multiplication.

Note: TI-84 Plus CE implied multiplication rules differ from those of some other graphing calculators. For example, the TI-84 Plus CE evaluates $1/2X$ as $(1/2)X$, while some graphing calculators may evaluate $1/2X$ as $1/(2X)$.

Parentheses

The TI-84 Plus CE completes all calculations inside a pair of parentheses first. For example, in the expression $4(1+2)$, EOS™ first evaluates the portion inside the parentheses, $1+2$, and then multiplies the answer, 3, by 4.



Negation

To enter a negative number, use the negation key. Press \ominus and then enter the number. On the TI-84 Plus CE, negation is in the third level in the EOS™ hierarchy. Functions in the first level, such as squaring, are evaluated before negation.

Example: $-X^2$, evaluates to a negative number (or 0). Use parentheses to square a negative number.



Note: Use the \ominus key for subtraction and the \ominus key for negation. If you press \ominus to enter a negative number, as in $9 \times \ominus 7$, or if you press \ominus to indicate subtraction, as in $9 \ominus 7$, an error occurs. If you press α A \ominus α B, it is interpreted as implied multiplication $(A)(-B)$.

Entering Expressions and Instructions

You can use an expression on the home screen to calculate an answer. In most places where a value is required, you can use an expression to enter a value.



Entering an Expression

To create an expression, you enter numbers, variables, and functions using the keyboard and menus. An expression is evaluated when you press **enter**, regardless of the cursor location. The entire expression is evaluated according to EOS™ rules, and the answer is displayed according to the mode setting for Answer.


Note: Most TI-84 Plus CE functions and operations are symbols comprising several characters. You must enter the symbol from the keyboard or a menu; do not spell it out. For example, to calculate the log of 45, you must press **log** 45. Do not enter the letters **L**, **O**, and **G**. If you enter **LOG**, the TI-84 Plus CE interprets the entry as implied multiplication of the variables **L**, **O**, and **G**.

To enter a matrix name:

1. Press **2nd** [matrix].

The Matrix Names menu appears.

2. Press the number on the keypad that corresponds with the desired Matrix Name.
Ex: Press 1 for [A] as shown.

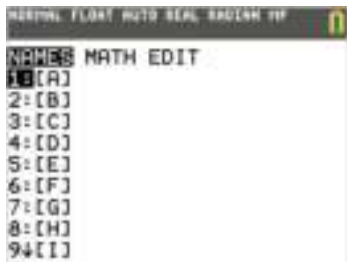

Note: In MathPrint™ mode, press **▸** to get out of the MathPrint™ template and continue entering the expression.

Calculate $3.76 \div (-7.9 + \sqrt{5}) + 2 \log 45$.

| MathPrint™ | Classic |
|--|---|
| $3 \cdot 76 \div (-7.9 + \sqrt{5}) + 2 \log 45$ Note: The \blacktriangleright is a notable keystroke difference as compared to Classic. | $3 \cdot 76 \div (-7.9 + \sqrt{5}) + 2 \log 45$ |
| | |

Multiple Entries on a Line

To enter two or more expressions or instructions on a line, separate them with colons (α [:]). All instructions are stored together in last entry (ENTRY).



Entering a Number in Scientific Notation

1. Enter the part of the number that precedes the exponent. This value can be an expression.
2. Press 2nd [EE]. E is pasted to the cursor location.
3. Enter the exponent, which can be one or two digits.

Notes:

- If the exponent is negative, press $(-)$, and then enter the exponent.
- E stands for "x10" and the calculator interprets the entire number as $(1.23.45 \times 10^{-2})$ as if it was entered with parentheses.



When you enter a number in scientific notation, the TI-84 Plus CE does not automatically display answers in scientific or engineering notation. The mode settings and the size of the number determine the display format.

Functions

A function returns a value. For example, \log and \sin are functions. In general, the first letter of each function is lowercase. Most functions take at least one argument, as indicated by an open parenthesis following the name. For example, \sin requires one argument, $\sin(\text{value})$.

Note: To see the arguments of a function or command in the calculator, find the item in a menu or 2nd [catalog] and press +. For most menu items, a Catalog Help screen will display and the syntax of the arguments will be displayed.

Instructions

An instruction (command) initiates an action on the calculator. For example, **ClrDraw** is an instruction to the calculator to clear drawn elements from a graph. Instructions cannot be used in expressions. In general, the first letter of each instruction name is uppercase. Some instructions take more than one argument, as indicated by an open parenthesis at the end of the name. For example, on the TI-84 Plus CE, **Circle**(requires three arguments, and has two optional arguments: **Circle**($X,Y,radius[,color,linestyle]$).

Interrupting a Calculation

To interrupt a calculation or graph in progress, which is indicated by the busy indicator in the status bar, press **[on]**.

When you interrupt a calculation, a menu is displayed.

- To return to the home screen, select **1:Quit**.
- To go to the location of the interruption, select **2:Goto**.

When you interrupt a graph, a partial graph is displayed.

- To return to the home screen, press **[clear]** or any non-graphing key.
- To restart graphing, press a graphing key or select a graphing instruction.

TI-84 Plus CE Edit Keys

| Keystrokes | Result |
|---------------------------------|---|
| [right] or [left] | <ul style="list-style-type: none">• Moves the cursor within an expression; these keys repeat if held down on the keypad. |
| [up] or [down] | <ul style="list-style-type: none">• Moves the cursor from line to line within an expression that occupies more than one line; these keys repeat if held down on the keypad.• Moves the cursor from term to term within an expression in MathPrint™ mode; these keys repeat if held down on the keypad.• On the home screen, scrolls through the history of entries and answers. |
| [2nd] [left] | <ul style="list-style-type: none">• Moves the cursor to the beginning of an expression. |
| [2nd] [right] | <ul style="list-style-type: none">• Moves the cursor to the end of an expression. |
| [alpha] [up] | <ul style="list-style-type: none">• Moves the cursor out of a MathPrint™ expression and up into history on the home screen.• Moves the cursor from a MathPrint™ expression to the previous Y-var in the Y=editor. |
| [alpha] [down] | <ul style="list-style-type: none">• Moves the cursor from a MathPrint™ expression to the next Y-var in the Y=editor. |
| [enter] | <ul style="list-style-type: none">• Evaluates an expression or executes an instruction. |

| Keystrokes | Result |
|---|--|
| <code>clear</code> | <ul style="list-style-type: none"> • Clears the current line on a line with text on the home screen. • Clears everything on the home screen on a blank line on the home screen. This does not clear the history of your entries and answers. • Press <code>▲</code> to see the history. • Use Clear Entries* followed by <code>clear</code> if you wish to delete all home screen entries. *Clear Entries is found in [catalog]. • Clears the expression or value where the cursor is located in an editor; it does not store a zero. |
| <code>del</code> | <ul style="list-style-type: none"> • Deletes a character at the cursor; this key repeats if held down on the keypad. |
| <code>2nd del</code> | <ul style="list-style-type: none"> • Changes the cursor to an underline (<u> </u>); inserts characters in front of the underline cursor; to end insertion, press <code>2nd [ins]</code> or press <code>◀</code>, <code>▲</code>, <code>▶</code>, or <code>▼</code>. |
| <code>2nd</code> | <ul style="list-style-type: none"> • Changes the cursor or status bar indicator to 1; the next keystroke performs a 2nd function (displayed above a key and to the left); to cancel 2nd, press <code>2nd</code> again. |
| <code>alpha</code> | <ul style="list-style-type: none"> • Changes the cursor or status bar indicator to α; the next keystroke performs a third function of that key (displayed above a key and to the right) or accesses a shortcut menu. To cancel <code>alpha</code>, press <code>alpha</code> or press <code>◀</code>, <code>▲</code>, <code>▶</code>, or <code>▼</code>. |
| <code>2nd</code> <code>[A-lock]</code> | <ul style="list-style-type: none"> • Changes the cursor to α; sets alpha-lock; subsequent keystrokes access the third functions of the keys pressed; to cancel alpha-lock, press <code>alpha</code>. If you are prompted to enter a name such as for a group or a program, alpha-lock is set automatically. • Note: The TI-84 Plus CE does not automatically set alpha-lock for entries that require list names. |
| <code>X,T,θ,n</code> | <ul style="list-style-type: none"> • Pastes an X in Function mode, a T in Parametric mode, a θ in Polar mode, or an n in Seq mode with one keystroke. |

Working with Graphs

This section covers how to change color options on a graph, how to draw points on a graph, and how to insert an image as a background on a a graph.

Using Color on the TI-84 Plus CE

The TI-84 Plus CE graphing calculator has many color options and a high resolution display that allows more information to be shown on the screen. The TI-84 Plus CE uses color in the following ways:

- Y= editor for line color.
- DRAW commands for line color, such as vertical lines, circles, and text on the graph screen.
- The graph format screen for grid, axes, or border color, and applying a background image or color.
- Statistical Plots.

The color options are selected using a spinner, which can contain various options depending on the feature. Press \leftarrow and \rightarrow to scroll through the color options to set a color.

Note: Take care to choose appropriate color combinations for the graph areas so that all features are visible.


- ▶ You can reset the calculator to its default settings, including color settings, by pressing $\left[2\text{nd}\right] \left[\text{mem}\right] \mathbf{7} \mathbf{2} \mathbf{2}$.

Using Color on the Graph Screen

The examples below show how to set up the graph of a function. Here, the mode is set to FUNCTION and the default settings are assumed.

Enter an equation in the Y= editor.

1. Press $\left[\text{Y}=\right]$.
2. Press $\left[(-)\right] \left[\text{x},\text{T},\theta,\text{n}\right] \left[\text{x}^2\right] \left[+\right] \mathbf{6}$.

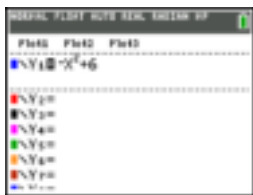

To set the line color in the Y= editor:

1. Press $\boxed{4}$ to highlight the colored box.
2. Press $\boxed{\text{enter}}$.
3. Press $\boxed{2\text{nd}} \boxed{\rightarrow} \boxed{\rightarrow} \boxed{\rightarrow}$ to place the cursor box on the color and line style at the left of the screen and press $\boxed{\text{enter}}$.

The spinner box displays. Notice the second line in the status bar, which displays hints.



4. Press $\boxed{\rightarrow} \boxed{\rightarrow} \boxed{\rightarrow}$ to select magenta.
5. Press $\boxed{\downarrow}$.

Note: The thick line style is the default. It can be changed by pressing $\boxed{\leftarrow}$ or $\boxed{\rightarrow}$.

6. Press $\boxed{\rightarrow}$ to highlight OK and then press $\boxed{\text{enter}}$.

To set a Background Image:

1. Press $\boxed{2\text{nd}} \boxed{\text{format}}$.

Set grid color, axes, and border color as desired.

2. Press $\boxed{\uparrow}$ or $\boxed{\downarrow}$ as necessary to highlight Background.



The spinner dialog box becomes active.

3. Press $\boxed{\rightarrow}$ as necessary to select the desired Background Image or color.

Note: Your pre-loaded Image Var may be different than the one displayed.

Note: To create Background Image Vars, use the free TI Connect™ CE software to convert and send images to your TI-84 Plus CE graphing calculator.

4. Press $\boxed{\text{trace}}$ to see the graph and trace points.

Note: You can manipulate the graph to “fit” an object in the Background Image Var. You can also use QuickPlot and Fit Equation to fit an equation to a shape. (See *QuickPlot* .)



Using QuickPlot and Fit Equation

QuickPlot and Fit Equation allows you to drop points on a graph screen and model a curve to those points using regression functions. You can select color and line style, draw points on a graph, and choose an equation to fit the drawn points. You can then store the results of the plot and equation.

QuickPlot and Fit Equation is an option in the $\boxed{\text{stat}}$ [calc] menu.

Prior to starting the QuickPlot and Fit Equation interactive feature on the graph area, be sure to set your Background Image Var and other graph settings from the FORMAT screen. Also set your WINDOW or ZOOM settings.

Drop points on the screen. Points can be saved to lists.



Calculate the regression equation, draw the curve, and store the function.

Working With Images

The TI-84 Plus CE uses both pictures and background images. They are both stored in Flash archive, but they are used in different ways.

Using Pictures and Backgrounds

- Image Vars (Image1 - Image9, and Image0) are variables stored in archive memory. An Image Var is used as a Background Image in the graph area. Several images are pre-loaded on the TI-84 Plus CE. You can also convert images to TI-84 Plus CE Image Vars in the TI Connect™ CE software and load them to the calculator. You cannot create images on the calculator.

Note: TI Connect™ CE software is available as a free download from education.ti.com/go/download.

- Pic Vars (Pic1 - Pic 9, and Pic0) are also variables stored in archive memory. Pic Vars can be created by drawing in the graphing area, and the changes saved and recalled to the graphing area. Saving a Pic Var will not include the Background Image behind your graphing area.
- Both Image Vars and Pic Vars are stored and run in Flash archive, not in RAM. They are both accessible in the VARS menu.
- Image Vars and Pic Vars can only be shared with another TI-84 Plus CE or TI-84 C graphing calculator.
- TI-84 Plus Pic Vars cannot be shared between the TI-84 Plus and the TI-84 Plus CE graphing calculators.
- If you perform a RAM reset on the TI-84 Plus CE, the Image Vars and Pic Vars remain in Archive memory for use.

Working with Matrices

You can enter matrices using the matrix editor on your graphing calculator. For example, you can perform the following operations on matrices:

- Addition
- Inverses
- Division
- Multiplication
- Elementary Row Operations
- Subtraction


Using the Matrix Editor

1. Press $\boxed{2nd}$ [matrix].
2. Press $\boxed{\downarrow}$ to navigate to the EDIT submenu.
3. Select from one of 10 allowed matrix variable names [A] – [J].
4. Enter the dimension of the matrix, then enter values in each matrix cell.

Note: Once in the editor, use the arrow keys to navigate between cells.

Example:

Matrix [C] as a 3x3 matrix is now in memory.

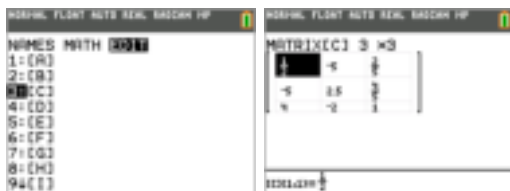

Performing a Calculation with a Matrix

1. Press $\boxed{2nd}$ [quit] to go to the Home Screen.
2. Press $\boxed{2nd}$ [matrix] use the MATH submenu to select a matrix command.
3. Use the NAMES submenu to paste the matrix name.

Note: A matrix name, such as [C], is a special character and can ONLY be pasted for a calculation from the [matrix] NAMES menu and not typed from the calculator keypad.

Example:

To find the determinant of [C] as entered above:

- ▶ Use the [matrix] MATH menu to paste the
 - 1: det(command
 - and-
 - [matrix] NAMES 3: [C]as matrix variables to the Home Screen.



Note: Remember that you cannot type in a matrix name from the calculator keypad. Use the [matrix] NAMES menu to paste a matrix name.

Working with Probability and Statistics

This section covers probability and statistics commands.

- Probability commands deal with random numbers, which are generated by algorithms on the calculator.
- Statistics commands allow you to create lists of data, then plot or analyze that data.

Working with Probability

You can find probability commands in the $\boxed{\text{math}}$ PROB submenu.

Many probability commands have Stat Wizards to help you enter the syntax.

Example:

To generate a set of five random integers between 10 and 25 (inclusive):

1. Press $\boxed{\text{math}}$, then press $\boxed{\rightarrow}$ until you highlight **PROB**.
2. Press $\boxed{\downarrow}$ until you highlight **5: randint**(, then $\boxed{\text{enter}}$.



3. Enter the lower integer, then $\boxed{\text{enter}}$.
4. Enter the upper integer, then $\boxed{\text{enter}}$.
5. Enter the number of integers (**n**), then $\boxed{\text{enter}}$.



6. Press $\boxed{\text{enter}}$ to Paste.
7. Press $\boxed{\text{enter}}$ again to see the random set of integers.



Notes:

- With each rand execution, the TI-84 Plus CE generates the same random-number sequence for a given seed value. The TI-84 Plus CE factory-set seed value for rand is 0. To generate a different random-number sequence, store any nonzero seed value to rand. To restore the factory-set seed value, store 0 to rand, or reset the defaults by going to [2nd] [mem] 7:Reset....
- The seed value also affects randInt(), randNorm(), and randBin() instructions.

Working with Statistics

You can find statistics commands in the [stat] menu.

You can use the following statistics functions:


| Description | Keys |
|--|-----------------------------------|
| Best fit equations (regressions) | [stat] [▶] [▲] [▼] |
| Define and store up to three stat plot definitions | [2nd] [stat plot] |
| Distributions | [2nd] [distr] |
| List-based statistical analysis | [2nd] [list] [▶] [▶] |
| Logistic and sine regression analysis | [stat] [▶] [▲] [▼] |
| One- and two-variable analysis | [stat] [▶] [1] and [stat] [▶] [2] |
| Statistical tests | [stat] [▶] [▶] |

Inferential Statistics

You can perform 16 hypothesis tests and confidence intervals and 15 distribution functions. You can display hypothesis test results graphically or numerically.


To enter lists of data:

1. Press [stat].
2. Select **1: Edit** in the **EDIT** submenu, then [enter].

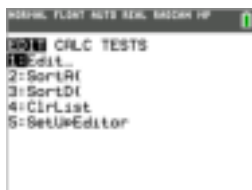


3. Enter your data into list columns.

Note: Once in the list editor, use the arrow keys to enter the data in the lists. L1 – L6 are built-in list names.

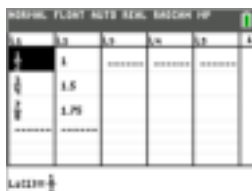

To plot this data:

4. Press **2nd** [stat plot].
5. Press **1**: **Plot1** (to set up a scatter plot for L1 and L2), then **enter**.

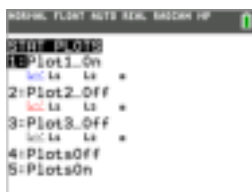

6. Press **left arrow** to highlight **On**.



7. Press **zoom** to automatically set up a graphing window for your data.
8. Press **9**: **ZoomStat** to see the graph.
9. Press **trace** and arrow keys to trace on the plot.




Note: You can plot your statistics data in these ways:

- Scatter plot
- xyLine
- Histogram
- Regular or Modified box-and-whisker plot
- Normal probability plot

To find the two variable statistics for L1 and L2:


1. Press `[stat]`.
2. Press `[>]` to highlight **CALC**.
3. Press `[v]` until you highlight **2:2-Var Stats**, then `[enter]`.

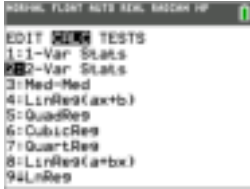

4. Press `[v]` until you highlight **Calculate**, then `[enter]`.



- The screen will display the variable statistics.

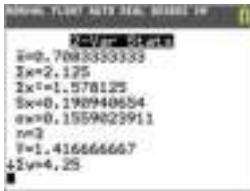

Note: Most common probability and statistics commands will have a wizard to prompt for syntax (values). The built-in Catalog Help is also available by pressing the `[+]` key on most menu items. This opens an editor to help you fill in the syntax (values) needed in a calculation.


Working with Variables

You can enter and use several types of data, including real and complex numbers, matrices, lists, functions, stat plots, graph databases, graph pictures, and strings.

Variables and Defined Items

You can enter and use several types of data, including real and complex numbers, matrices, lists, functions, stat plots, graph databases, graph pictures, and strings.

The TI-84 Plus CE uses assigned names for variables and other items saved in memory. For lists, you also can create your own five-character names.
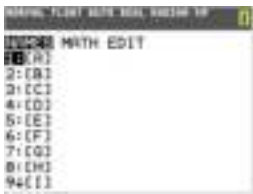
| Variable Type | Names |
|---------------------------------------|---|
| Real numbers (including fractions) | A, B, ... , Z, θ |
| Complex numbers | A, B, ... , Z, θ |
| Matrices | [A], [B], [C], ... , [J] To enter a matrix name: Press [2nd] [matrix]. The Matrix Names menu appears. Press the number on the keypad that corresponds with the desired Matrix Name. Ex: Press 1 for [A] as shown below.  |
| Lists* | L1, L2, L3, L4, L5, L6 , and user-defined names |
| Functions | Y1, Y2, ... , Y9, Y0 |
| Parametric equations | X1T and Y1T, ... , X6T and Y6T |
| Polar functions | r1, r2, r3, r4, r5, r6 |
| Sequence functions | u, v, w |
| Stat plots | Plot1, Plot2, Plot3 |
| Graphical databases | GDB1, GDB2, ... , GDB9, GDB0 |

| Variable Type | Names |
|-------------------|---|
| | Save current equations from Y= and Window settings to re-use. |
| Background images | Image1, Image2, ... , Image9, Image0 |
| Pictures | Pic1, Pic2, ... , Pic9, Pic0 |
| Strings | Str1, Str2, ... , Str9, Str0 |
| Apps | Applications |
| AppVars | Application variables |
| Groups | Grouped variables Save a group of calculator files for sharing or to re-use when setting up a classroom. |
| System variables | Xmin, Xmax , and others |

* Once a list contains a complex number, it is designated as a complex list. To change a list to Real numbers, delete the list and enter the Real values.

Notes about Variables

- You can create as many list names as memory will allow.
- From the home screen or from a program, you can store to matrices, lists, strings, and system variables such as **Xmax**, **TblStart**, and all **Y=** functions.
- From an editor, you can store to matrices, lists, and **Y=** functions.
- From the home screen, a program, or an editor, you can store a value to a matrix element or a list element.
- You can use **DRAW STO** menu items to store and recall Pic Vars.
- Although most variables can be archived, system variables including r , T , X , Y , and θ cannot be archived.
- **Apps** are independent applications, which are stored in Flash archive. **AppVars** is a variable holder used to store variables created by independent applications. You cannot edit or change variables in **AppVars** unless you do so through the application that created them.

Storing Variable Values

Values are stored to and recalled from memory using variable names. When you evaluate an expression that contains a variable name, the graphing calculator substitutes the value currently stored in that variable.

To store a value to a variable from the home screen or a program using the $\boxed{\text{sto}\rightarrow}$ key, begin on a blank line and follow these steps.

1. Enter the value you want to store. The value can be an expression.
2. Press $\boxed{\text{sto}\rightarrow}$.
 \rightarrow is copied to the cursor location.
3. Press $\boxed{\text{alpha}}$ and then the letter of the variable to which you want to store the value.
4. Press $\boxed{\text{enter}}$. The graphing calculator evaluates the expression and stores the value to the variable.



Displaying a Variable Value

To display the value of a variable, enter the variable name on a blank line on the home screen, and then press $\boxed{\text{enter}}$.



Archiving Variables (Archive, Unarchive)

You can store variables in the TI-84 Plus CE user data archive, a protected area of memory separate from RAM. The user data archive lets you:

- Store data, programs, applications or any other variables to a safe location where they cannot be edited or deleted inadvertently.
- Create additional free RAM by archiving variables.

By archiving variables that you do not need to edit frequently, you can free up RAM for applications that may require additional memory.

The graphing calculator places an asterisk (*) to the left of archived variables. You cannot edit or execute archived variables. You can only see and unarchive them.

Example:

If you archive a list named **L1**, you will see that it exists in memory. However, if you select and paste the name **L1** to the home screen, it will not appear on the home screen. You must unarchive it in order to see its contents and edit it.

Note: Image Vars are run and stored in archive, but when an Image Vars displays in **VARS 4:Picture & Background**, the BACKGROUND menu does not display the asterisk *.

Recalling Variable Values

To recall and copy variable contents to the current cursor location, follow these steps. To leave **Rcl**, press **clear**.

1. Press **2nd** **[rc]**. **Rcl** and the edit cursor are displayed on the bottom line of the screen.
2. Enter the name of the variable in one of the following ways:
 - Press **alpha** and then the letter of the variable.
 - Press **2nd** **[list]**, and then select the name of the list, or press **2nd** **[L1]** or **[L2]**, and so forth.
 - Press **2nd** **[matrix]**, and then select the name of the matrix.
 - Press **vars** to display the **VARS** menu or **vars** **[▶]** to display the **VARS Y-VARS** menu; then select the type and then the name of the variable or function.
 - Press **alpha** **[f4]** to display the YVAR shortcut menu, then select the name of the function.

The variable name you selected is displayed on the bottom line and the cursor disappears.



3. Press **enter**. The variable contents are inserted where the cursor was located before you began these steps.



Notes:

- You can edit the characters pasted to the expression without affecting the value in memory.
- You can use **Rcl** in the Y= editor to paste a current function to a new YVar to avoid retyping long expressions.

Managing Calculator Files




This section explains how to transfer the OS from calculator to calculator and describes compatibility between graphing calculators.

Transferring the OS from calculator to calculator

You can transfer the operating system from one calculator to another using a USB unit-to-unit cable.

Connect the two calculators by firmly inserting the USB cable ends into the calculators. The USB port is located on the front-right side of the calculator.

Note: You cannot transfer the OS or files using the TI Charging Station CE (see the accessories section). The TI Charging Station CE only charges the TI-84 Plus CE graphing calculators.

| | |
|--|---|
| Receiving calculator: [2nd] [link] [▶] [enter] |  |
| When you press [enter], the graphing calculator displays the message Waiting... |  |
| Sending calculator: [2nd] [link] [▲] [▲] [enter] |  |

Compatibility with Graphing Calculators

Note: Not all TI-84 Plus CE graphing calculator files are compatible with other TI-84 Plus Family graphing calculator files because of the high resolution of the color screen. In general, numeric files (not limited to lists, variables, matrices, and functions) are shared between these graphing calculators but Apps are not shared between these graphing calculators even if they have the same title. When not compatible, the computer file extensions for the TI-84 Plus CE are different from a similar variable from the TI-84 Plus/TI-84 Plus Silver Edition graphing calculators.

| File Type | Link from TI-84 to TI-84 Plus CE | Link from TI-84 Plus CE to TI-84 | 84P computer file type | TI-84 Plus CE computer file type |
|---------------------|----------------------------------|----------------------------------|------------------------|----------------------------------|
| Operating System | No | No | 8xu | 8eu |
| Apps | No | No | 8xk | 8ek |
| AppVar ¹ | Yes | Yes | 8xv | 8xv |

| File Type | Link from TI-84 to TI-84 Plus CE | Link from TI-84 Plus CE to TI-84 | 84P computer file type | TI-84 Plus CE computer file type |
|-------------------------------------|---|---|-------------------------------|---|
| Programs - TI Basic ^{1, 2} | Yes | Yes | 8xp | 8xp |
| Assembly Programs ¹ | Yes | No | 8xp | 8xp |
| Pictures | No | No | 8xi | 8ci |
| Background Images | N/A | No | N/A | 8ca |
| Group Files | Yes | Yes | 8xg | 8xg |
| User Zoom | Yes | Yes | 8xz | 8xz |
| String | Yes | Yes | 8xs | 8xs |
| Table | Yes | Yes | 8xt | 8xt |
| Function file | Yes | Yes | 8xy | 8xy |
| GDB ³ | Yes | Yes | 8xd | 8xd |
| List | Yes | Yes | 8xl | 8xl |
| Matrix | Yes | Yes | 8xm | 8xm |
| Number | Yes | Yes | 8xn | 8xn |
| Complex | Yes | Yes | 8xc | 8xc |
| Window Setup | Yes | Yes | 8xw | 8xw |
| Backup | No | No | 8xb | — |

¹ App Vars and Programs should be reviewed for use after the transfer between the TI-84 Plus family graphing calculators. Some App Vars may not setup an App as expected. Some Programs will need to be modified due to the difference in screen resolution and new commands.

² Programs created using commands available only in the latest OS version will not transfer to graphing calculators with an earlier OS version.

³ You may receive a version error if you used DOT-THIN line style. Change the line style to avoid the error.

Using Applications (Apps)

These applications are preloaded on your TI-84 Plus CE, and you can install Apps. You can view the Applications Guidebook, install applications, and install the TI Connect™ CE software at education.ti.com/go/download.

Press [apps] to see the complete list of applications.

Cabri™ Jr. App

Construct, analyze, and transform mathematical models and geometric diagrams on your TI graphing calculator. You can:

- Perform analytic, transformational, and Euclidean geometric functions
- Build geometric constructions interactively with points, a set of points for locus, lines, polygons, circles, and other basic geometric objects
- Alter geometric objects on the fly to see patterns, make conjectures, and draw conclusions

CellSheet™ App

Combines spreadsheet functionality with the power of a graphing calculator.

Create cell formulas and use built-in functions.

Cells can contain:

- Integers
- Real numbers
- Formulas
- Variables
- Text and numeric strings
- Functions

Each spreadsheet contains 999 rows and 26 columns. The amount of data you can enter is limited only by the available RAM.

- Store (x,y) coordinate pairs to lists for viewing and optimizing functions for linear programming.

Conic Graphing App

Presents equations in function, parametric, or polar form and provides a simple way to graph the four conic shapes:

- Ellipse
- Circle
- Parabola
- Hyperbola

Enter the required parameters to graph, trace, or solve for the conic's characteristic.

Inequality Graphing App

Gives you new features for graphing equations and inequalities and evaluating the relationship between them. You can:

- Enter inequalities using relation symbols
- Graph inequalities and shade the union and intersection regions
- Enter inequalities (vertical lines only) in an X=editor
- Trace points of interest (such as intersections) between relations
- Store (x,y) coordinate pairs to lists for viewing and optimizing functions for linear programming.

Periodic Table App

Provides a graphical representation of the elements of the Periodic Table. This application allows you to:

- Observe and explore the Periodic Table of the Elements
- Find property data and useful information about the known elements
- Sort the elements by atomic number, alphabetically by name, or alphabetically by symbol
- Identify groups of elements by region (noble gasses, halogens, etc.) and block (p-, d-, s- and f-)
- Export property data to lists for further analysis
- Graph the major properties (atomic radii, electronegativities, etc.) against atomic number to illustrate the periodic nature of the elements

Polynomial Root Finder and Simultaneous Equation Editor App

This application:

- Calculates the roots (zeros) of polynomials of degree 1 through 10 with a convenient, easy-to-use interface.
- Allows you to store solutions into lists, load a list into the application for polynomial coefficients, and store the polynomial to a Y-Var to graph after quitting the App.
- Finds solutions to systems of linear equations.
- Allows you to load matrices containing the coefficients of linear systems, and identify whether a given system has a unique solution, an infinite number of solutions, or no solution.

Probability Simulation App

Explore probability theory with interactive animation that simulates the rolling of dice and tossing of coins, and generates random numbers on your calculator. Options include:

- Bar Graph
- Table of trials data
- Settings for specifying numbers of trials
- Ways to collect data
- Weighting

In addition, students can export data for further exploration.

Science Tools App

Science Tools allows you to perform unit conversions on your calculator. App elements include:

- Significant Figures Calculator
- Constants and Conversions
- Data and Graph Wizard
- Vector Calculator

SmartPad™ CE App

Connecting a Calculator as a Remote Key Pad

The SmartPad™ CE App allows you to connect a calculator as a remote key pad.

To use the TI-84 Plus CE as a remote keypad for TI-SmartView™ CE:

1. Load the SmartPad™ CE App on your TI-84 Plus CE.
2. Connect your TI-84 Plus CE to your computer using the USB Computer cable which came with your calculator.
3. Launch TI-SmartView™ CE.

Note: Make sure the TI-SmartView™ CE window is in focus by clicking on the TI-SmartView™ CE window.

4. Run SmartPad™ CE App on your TI-84 Plus CE.
5. Press **[apps]** and select SmartPad™ CE from the Apps menu.
6. Read the information on the splash screen.



7. Press keys on the calculator key pad which remotely press the emulator key pad.

To stop the App:

- Disconnect the USB cable from the calculator to stop the App and remote key pad feature.

Tip: Reconnect the USB cable and run the App again if the remote key pad connectivity is no longer responding.

Notes:

- The TI-84 Plus CE running the SmartPad™ CE App will not display calculations or graphs. The calculator becomes a remote USB key pad for the emulator only.
- The TI-84 Plus CE will remain a remote key pad when the TI-SmartView™ CE window is in focus. Click on the TI-SmartView window prior to pressing keys on the calculator.
- The TI SilverLink cable is not supported in TI-SmartView™ CE.

TI-Innovator™ Hub App

The TI-Innovator™ Hub App runs automatically in CE OS 5.2 and higher when the App is loaded on the calculator. The TI-Basic program editor is enhanced with a HUB submenu to help you with spelling and syntax of commands for TI-Innovator™ Hub programming. Save time by using the submenu to paste full TI-Innovator™ commands rather than typing alpha characters from the keypad as you write your programs.

Note: This Hub App is listed only in [mem]. You can get CE OS 5.2 or higher and the TI-Innovator™ Hub App at education.ti.com/go/download.

Transformation Graphing App

Transformation Graphing lets you observe the effects of changing coefficient values without leaving the graph screen. Transformation Graphing affects only function graphing mode. X is the independent variable and Y is the dependent variable. It is not available in parametric, polar, or sequence graphing modes.

Transformation Graphing allows you to manipulate up to four coefficients on the graph: A, B, C, and D. All other coefficients act like constants using the value in memory. You can step through the transformation of a function or animate the transformation using play styles, play/pause, play, and fast play.

Vernier EasyData™ App

Use EasyData™ App from Vernier Software & Technology to explore your world. The EasyData™ App auto-launches data collection when used with Vernier EasyTemp™ sensor, and loads built-in experiments for every supported Vernier sensor.

Using Accessories

This section covers how to use:

- TI computer software
- TI Charging Station CE
- TI rechargeable batteries

Using TI Desktop Software

Use TI desktop software to exchange information between your graphing calculator and your computer, or to display a TI graphing calculator for your entire classroom.

Using TI-SmartView™ CE

The TI-SmartView™ CE software allows you to display a TI graphing calculator for your entire classroom. With TI-SmartView™ CE software, you can:

- View the history of your key press entries.
- Capture and save screen shots to use in other documents as you investigate a math or science concept.
- Use the View³™ pane to show three additional screens simultaneously.

The TI-SmartView™ CE software includes two workspaces:

Calculator Emulator: allows you to perform calculations and view answers as you would on a physical calculator

Emulator Explorer: allows you to manage emulator content

Using TI Connect™ CE

The TI Connect™ CE software makes exchanging information between your graphing calculator and your computer quick and easy.

The TI Connect™ CE software includes three workspaces:

Calculator Explorer: allows you to manage emulator content

Screen Capture: allows you to manage screen captures

Program Editor: allows you to work with TI-Basic programs

Using the TI Charging Station CE

The TI Charging Station CE has 10 slots, and each slot can accommodate a TI-84 Plus CE graphing calculator. Place a TI-84 Plus CE graphing calculator in one of these slots to charge the TI Rechargeable Battery.

Note: It is not necessary to fill all the slots in the charging station to charge batteries.



Preparing Charging Stations for Use

The TI Charging Station CE is shipped with the following components in each package:

- A TI Charging Station CE
 - An AC adapter
 - A regional power cord adapter
1. Insert the small end of the power adapter cord into the charging station's power jack.
 2. Plug the other end of the adapter into a power outlet.
- An indentation on each side of the TI Charging Station CE enables you to lift it. Always use two hands to lift and move the charging station.
 - When the charging station is empty, turn it over and you will notice an indentation on the bottom. Thread the cable through this indentation to ensure the charging station sits flat on a surface.
 - Place the charging station on a flat, stable surface. You can also use a wheeled cart if you need to move the charging station between classrooms. When deciding on a location, consider its proximity to a power source such as a power strip or wall outlet.

Inserting Graphing Calculators into the TI Charging Station CE

The slots in the TI Charging Station CE are designed to accommodate a graphing calculator without a slide case attached. The calculator will not fit in the slots with the slide case attached.

The front of the calculator must face the front of the charging station. You may damage the TI-84 Plus CE graphing calculator if you try to force it into the charging station facing the wrong direction. When looking at the TI logo on the charging station, insert calculators into the slot with the keypad facing left.



1. Remove the slide case from the graphing calculator.
2. Align the grooves on the sides of the graphing calculator with the guides in the charging station slots. Ensure the calculator is facing the proper direction.
3. Gently push the graphing calculator into the slot. You will feel a slight resistance; continue pushing down until the graphing calculator is seated.

When the TI-84 Plus CE graphing calculator is properly seated in a slot, the LED light on the side of the calculator turns amber to indicate it is charging.

Charging Batteries

The TI-84 Plus CE graphing calculator uses a Li-Ion TI Rechargeable Battery.

The charging process starts automatically when a graphing calculator is placed in a slot on a powered charging station. You can charge a classroom set of graphing calculators overnight.

Determining Battery Status

The LED light on each connected graphing calculator in the charging station provides basic information about the status of the rechargeable battery.

- When the light is amber, the battery is charging.
- When the light is green, the battery is fully charged.

Troubleshooting

If the recharge fails:

- Make sure the graphing calculator is seated properly in the slot. Batteries are not charged if the connector on the graphing calculator and the connector in the slot are not aligned.

- Check the connector on the graphing calculator to ensure that it is clean. If there is build-up on the graphing calculator's connector, you can remove it with a clean, dry cloth or a pencil eraser. Never use wet cloths or solutions of any kind.

Storing Charging Stations

Store the TI Charging Station CE on a flat surface such as a table or a wheeled cart. You cannot damage the charging station by leaving it plugged in for extended periods of time. Also, you cannot damage the batteries by leaving them in the charging station beyond the time needed to fully charge them.

Using, Replacing, and Charging Batteries

The TI-84 Plus CE graphing calculator comes with a:

- TI rechargeable battery
- USB computer cable for transferring files and charging the battery

Note: Charge the battery for at least four hours to ensure optimum performance.

Battery Status

The battery status icon on the upper right of the screen gives information on battery life.



The battery icons indicate the level of battery power remaining, and indicate if the battery is charging.



Battery is 75% to 100% charged.



Battery is 50% to 75% charged.



Battery is 25% to 50% charged.




Battery is 5% to 25% charged.



Battery is charging.

Warning:

- RAM memory will be lost if the battery charge is lost. You should back up or archive your variables if your battery power gets low.
- Displays this message when you turn on the unit.

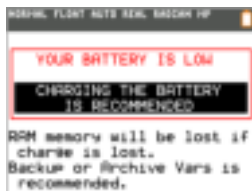

Deep Sleep Mode

To maximize battery life, this graphing calculator is shipped in Deep Sleep mode. To wake the handheld from this mode, press **[on]** for at least 4 seconds or apply USB (computer or wall adapter) or TI Charging Station CE power. After waking the handheld, you can turn it on anytime by pressing **[on]**. To maximize battery life during extended storage periods, the Deep Sleep mode is enabled automatically after a period of being in the off state.

Recharging the TI Rechargeable Battery

You should make sure the TI-84 Plus CE battery is charged for classroom use and before exams.

Use one of the following options to charge the battery in the TI-84 Plus CE graphing calculator:

- Connect the graphing calculator to a computer using a USB computer cable.
- or-
- Connect to a wall outlet using a TI wall adapter (may be sold separately).
- or-
- Place the graphing calculator in a TI Charging Station CE.

The amount of time required to fully charge the battery may vary, but charging takes approximately four hours. It is not necessary to remove the TI Rechargeable Battery from the graphing calculator to recharge it. The graphing calculator operates normally while it is attached to a charging source.

To recharge a graphing calculator from a computer, a TI USB driver must be installed. To download TI Connect™ CE or TI-SmartView™ CE software that includes a driver, go to: education.ti.com/go/download.

Replacing TI Rechargeable Batteries

Take these precautions when replacing rechargeable batteries:


- Use only the charger recommended for the battery, or the one that was provided with the original equipment.
- Remove the graphing calculator from the charger or alternating current adapter when not in use or being charged.
- **Do not** use the battery in other devices because:
 - This may result in personal injury or damage to equipment or property.
 - There is a risk of explosion if a battery is replaced by the wrong type.

Replacing the Battery

Use only the TI Rechargeable Battery to replace the TI-84 Plus CE battery.

To replace the battery, follow these steps.

1. Use a small screwdriver to release the panel from the back of the handheld.
2. Remove the panel.
3. Remove the old battery.
4. Drop in a new battery.
5. Replace the back panel and fasten the screws with a screwdriver.

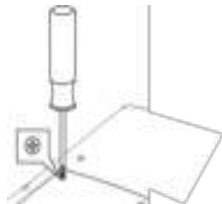

Disposing of Used Batteries Safely and Properly

Do not mutilate, puncture, or dispose of batteries in fire. The batteries can burst or explode, releasing hazardous chemicals. Discard used batteries according to local regulations.

When the TI Rechargeable Battery is fully charged, the graphing calculator draws power in the following order:

1. From a connected external power source, such as:
 - A computer connected through a USB computer cable
 - or-
 - A TI wall adapter (may be sold separately)
2. From the TI Rechargeable Battery

Using Press-to-Test

Use Press-to-Test to manage exams using TI graphing calculators in your classroom.

Setting Up Test Mode

1. Turn the calculator OFF.
2. Press and hold down the \blacktriangleright , \blacktriangleleft , and $\boxed{\text{on}}$ keys, and then release.
3. Press OK on each screen to place calculator in exam mode.
4. Exam LED will blink green.
5. The RESET OPTIONS screen displays.

Notes:

- The status bar is blue when in TEST MODE and TEST MODE ENABLED.
 - Pic & Image Vars are disabled.
 - Calculator data (Vars) are deleted from RAM and Arc.
 - By default:
 - ANGLE is set to DEGREE
 - STAT DIAGNOSTICS is set to ON
 - DISABLE logBASE and DISABLE $\Sigma()$ are set to YES.
6. To change the default settings, move the cursor over the desired setting and press $\boxed{\text{enter}}$.



7. On the exam calculator, press **[apps]** to verify that applications are disabled. The following screen displays:



Note:


- All variables, excluding AppVars, stored in RAM and in archived memory are deleted.
 - Several Apps remain on the calculator for the exam. Press any key to see the Apps menu.
8. On the exam calculator, press **[prgm]** to verify that programs have been disabled. The following screen displays:



9. On the exam calculator, Pic and Image Vars are shown as disabled. The following screen displays:



10. In memory management (**[2nd] [mem]**, **2:Mem Management/Delete...**), disabled files will display with the not equal sign.

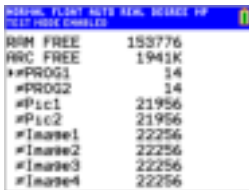

Bringing a Calculator Out of Test Mode

You can re-enable all disabled calculator files by using one of the following methods:

- Link two TI-84 Plus CE graphing calculators using a unit-to-unit USB cable and then transfer a file by using $\boxed{2\text{nd}}$ $\boxed{\text{link}}$, **SEND RECEIVE**
- or-
- Use the TI TestGuard™ App re-enable feature.

Notes:

To clear a calculator of files created during an exam, use the following two-step process:

If you do not need to clear files, use step 2 below:

1. Reset calculator files.
 - a) Turn off the calculator while in test mode.
 - b) "Re-Press-to-Test" - press and hold down the $\boxed{\blacktriangleright}$, $\boxed{\blacktriangleleft}$, and $\boxed{\text{on}}$ keys, and then release.
 - c) Select **OK** when you see the Reset Verification Screen. The calculator is now "clean."
2. Re-enable files to turn off test mode.
 - a) Link two TI-84 Plus CE graphing calculators using a unit-to-unit USB cable.
 - b) Send a file to bring the calculator(s) out of test mode.

Tip: To preserve battery life, take your calculator out of Press-to-Test mode after the exam.


Diagnosing and Correcting Error Conditions

The TI-84 Plus CE detects errors while performing these tasks:

- Evaluating an expression
 - Executing an instruction
 - Plotting a graph
 - Storing a value
1. Determine the error. The error screens give helpful hints about what may have happened, but the errors are not always fully explained.
 2. Correct the expression.

Diagnosing an Error

When the TI-84 Plus CE detects an error, it returns an error message with a short description.

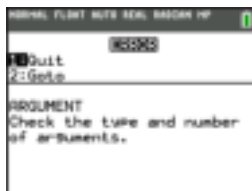

| | |
|---------------|--|
| 1:Quit | Displays the home screen |
| 2:Goto | Displays the previous screen with the cursor at or near the error location |

Note: If a syntax error occurs in the contents of a Y= function during program execution, then the **2:Goto** option returns to the Y= editor, not to the program.

Correcting an Error

To correct an error, follow these steps.

1. Note the error type (`ERROR:error type`).
2. Select **2:Goto** (if it is available). The previous screen is displayed with the cursor at or near the error location.
3. Determine the error. The error screens give helpful hints about what may have happened, but the errors are not always fully explained.
4. Correct the expression.

General Information

Texas Instruments Support and Service

General Information: North and South America

Home Page: education.ti.com

KnowledgeBase and e-mail inquiries: education.ti.com/support

Phone: (800) TI-CARES / (800) 842-2737
For North and South America and U.S. Territories

International contact information: education.ti.com/support/worldwide

For Technical Support

Knowledge Base and support by e-mail: education.ti.com/support or ti-cares@ti.com

Phone (not toll-free): (972) 917-8324

For Product (Hardware) Service

Customers in the U.S., Canada, Mexico, and U.S. territories: Always contact Texas Instruments Customer Support before returning a product for service.

For All Other Countries:

For general information

For more information about TI products and services, contact TI by e-mail or visit the TI Internet address.

E-mail inquiries: ti-cares@ti.com

Home Page: education.ti.com

Service and Warranty Information

For information about the length and terms of the warranty or about product service, refer to the warranty statement enclosed with this product or contact your local Texas Instruments retailer/distributor.

Precautions for Rechargeable Batteries

Take these precautions when replacing rechargeable batteries:

- Use only the charger recommended for the cell or battery, or the one that was provided with the original equipment.
- Remove the cell or battery from the charger or alternating current adapter when not in use or being charged.
- Use of the battery in other devices may result in personal injury or damage to equipment or property.

- Do not mix brands (or types within brands) of batteries. There is a risk of explosion if a battery is replaced by the wrong type.

Disposing of Batteries

Do not mutilate, puncture, or dispose of batteries in fire. The batteries can burst or explode, releasing hazardous chemicals. Discard used batteries according to local regulations.

Korean Class A warning statement

Class A

급기기(업무용방송통신기자재)

Notification

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Index

| | | D | |
|---------------------------------------|--------|---------------------------------------|--------|
| A | | decimal mode (float or fixed) | 22 |
| a+bi (rectangular complex mode) .. | 24 | Degree angle mode | 22 |
| AC adapters | 56 | Desktop Software | 55 |
| alpha cursor | 14 | display brightness | 8 |
| angle modes | 22 | display cursors | 14 |
| APD™ (Automatic Power Down™) . | 4-5 | Displaying the Clock Settings | 26 |
| Apps | 46 | E | |
| AppVars | 46 | E (exponent) | 21, 32 |
| Archive | 47 | edit keys table | 33 |
| Automatic Power Down™ (APD™) . | 4-5 | Eng (engineering notation mode) ... | 21 |
| B | | entry cursor | 14 |
| batteries | | EOS™ (Equation Operating System™) | 29 |
| charging | 57 | Equation Operating System™ (EOS™) | 29 |
| status | 57 | Error Conditions | 65 |
| troubleshooting | 57 | errors | |
| C | | correcting | 65 |
| Cabri™ Jr. | 51 | diagnosing | 65 |
| Catalog Help | 32 | F | |
| CellSheet™ | 51 | Fix (fixed-decimal mode) | 22 |
| charge status | | fixed-decimal mode (Fix) | 22 |
| LED indicator | 57 | Float (floating-decimal mode) | 22 |
| charging batteries | 57 | floating-decimal mode (Float) | 22 |
| troubleshooting | 57 | fractions | |
| charging station | 55 | n/d | 25 |
| color | | Un/d | 25 |
| DRAW commands | 35 | full-screen mode (Full) | 24 |
| graph format screen | 35 | Full (full-screen mode) | 24 |
| spinner | 35 | Func (function graphing mode) | 23 |
| stat plots | 35 | function graphing | |
| Y= editor | 35 | modes | 23 |
| color on the TI-84 Plus CE | 35, 51 | function, definition of | 32 |
| complex | | G | |
| modes (a+bi, re ^{qi}) | 24 | graph-table split-screen mode (G-T) . | 24 |
| numbers | 24 | graphing-order modes | 24 |
| Conic Graphing | 51 | graphing modes | 23 |
| contrast (display) | 8 | GT (graph-table split-screen mode) . | 24 |
| cursors | 14 | | |

| | | | |
|--------------------------------------|-------|---|----|
| H | | Sci (notation) | 21 |
| home screen | 9 | Seq (graphing) | 23 |
| scrolling | 9, 11 | Simul (graphing order) | 24 |
| Horiz (horizontal split-screen mode) | 24 | N | |
| I | | n/d | 25 |
| implied multiplication | 30 | negation (-) | 30 |
| Inequality Graphing | 52 | Normal notation mode | 21 |
| insert cursor | 14 | O | |
| inserting | | order of evaluating equations | 29 |
| calculators in charging station .. | 56 | P | |
| instruction, definition of | 33 | Par/Param (parametric graphing mode) | 23 |
| L | | parentheses | 30 |
| LED lights | 57 | Periodic Table | 52 |
| M | | Pol/Polar (polar graphing mode) ... | 23 |
| menus | 15 | polar graphing mode (Pol/Polar) | 23 |
| scrolling | 15 | Polynomial Root Finder and Simultaneous Equation Editor | 52 |
| shortcut | 12 | Probability Simulation | 52 |
| mode | | R | |
| Answers | 25 | Radian angle mode | 22 |
| Classic | 21 | re^(qi) (polar complex mode) | 24 |
| MathPrint™ | 21 | Real mode | 24 |
| mode settings | | rechargeable batteries status | 57 |
| a+bi (complex rectangular) | 24 | troubleshooting | 57 |
| Degree (angle) | 22 | S | |
| Eng (notation) | 21 | Sci (scientific notation mode) | 21 |
| Fix (decimal) | 22 | Science Tools | 53 |
| Float (decimal) | 22 | scientific notation | 32 |
| Full (screen) | 24 | screen modes | 24 |
| Func (graphing) | 23 | second cursor (2nd) | 14 |
| GT (screen) | 24 | Seq (sequence graphing mode) | 23 |
| Horiz (screen) | 24 | | |
| Normal (notation) | 21 | | |
| Par/Param (graphing) | 23 | | |
| Pol/Polar (graphing) | 23 | | |
| Radian (angle) | 22 | | |
| re^qi (complex polar) | 24 | | |
| Real | 24 | | |

| | |
|--|----|
| setting | |
| display contrast | 8 |
| modes | 19 |
| Simul (simultaneous graphing order mode) | 24 |
| SmartPad™ CE App | 53 |
| spinner | 35 |
| status | |
| LED indicator | 57 |
| rechargeable batteries | 57 |
| status bar | 11 |
| storing | |
| TI-84 Plus CE Charging Stations .. | 58 |

T

| | |
|---------------------------------------|----|
| TI-84 Plus CE Charging Stations | 55 |
| storing | 58 |
| TI-Innovator™ Hub | 54 |
| TI-SmartView™ CE | 55 |
| TI Connect™ CE | 55 |
| TI Rechargeable Batteries | |
| charging | 57 |
| Transformation Graphing | 54 |
| troubleshooting | 57 |

U

| | |
|-----------------|----|
| Un/d | 25 |
| UnArchive | 47 |

V

| | |
|-----------------------------------|----|
| variables | |
| complex | 45 |
| displaying and storing values ... | 47 |
| graph databases | 45 |
| graph pictures | 45 |
| list | 45 |
| matrix | 45 |
| real | 45 |
| types | 45 |
| user and system | 46 |
| Vernier EasyData™ | 54 |