



F17(Magic P129)/P109


U S E R M A N U A L

PME000407

ENGLISH (INT)


MAGNETIC SUCTION INSTALLATION

Easy installation

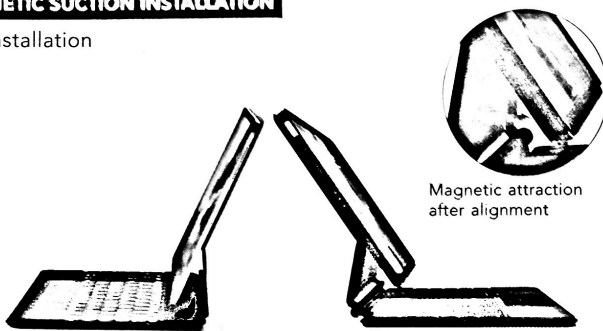


Magnetic attraction after alignment

WIRELESS CONNECTION

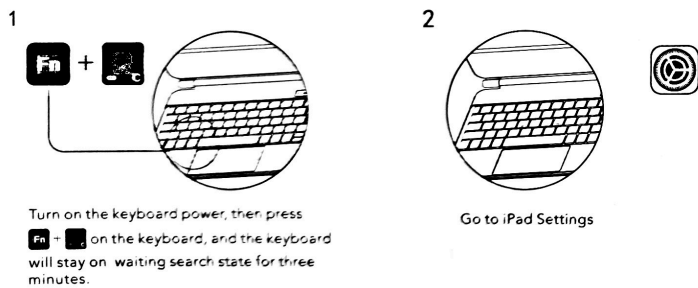

1 Turn on the keyboard power, then press **Fn** + **[Bluetooth icon]** on the keyboard, and the keyboard will stay on waiting search state for three minutes.

2 Go to iPad Settings



3 Turn on Bluetooth and keep "ON"

4 Settings menu "Other devices" "iPad Keyboard". The wireless signal light stays on after paired successfully.


Note: The bluetooth will connect automatically in later usage

CHARGING AND MAINTENANCE



Maintenance: it is stored at room temperature and charged under normal voltage. If it is not needed for a long time, it is necessary to timely charge the keyboard (charge it once every 2 months or so).

POWER ON AND OFF

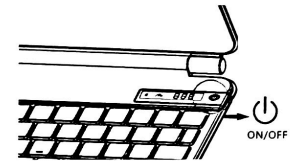


ON/OFF Button

- Power on: Power off state Double click the switch button to power on
- Power off: Power on state Double click the switch button to power off (Note: Single touch time is 0.3-0.8 seconds)


LIGHT INDICATOR INSTRUCTIONS

- ① Bluetooth label: flashing when pairing status
- ② Capital sign: always on when capital, and off when lowercase
- ③ Power indicator: Charging display CH and slow flash. When pressing the keyboard, The battery light goes off in 10 seconds




HOT KEY FUNCTION

P109 Pro

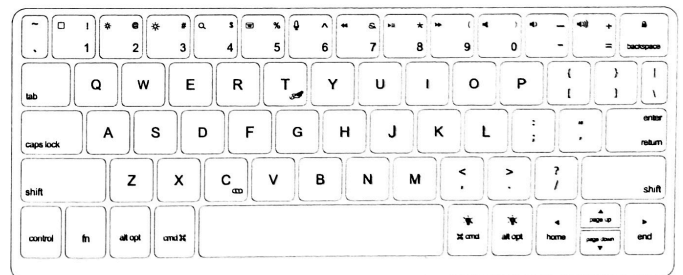

P129 Pro

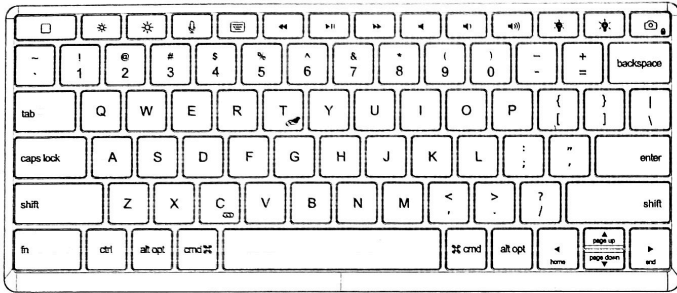

	Home		Following song
	Reduce iPad brightness		Mute
	Increase iPad brightness		Decrease the volume
	Search		Increase the volume
	Virtual keyboard		Bluetooth
	Intelligent voice		Reduce keyboard brightness
	Previous song		Increase keyboard brightness
	Play/Pause		Screenshot

Note: P109 press "Fn + " to achieve the above icons
P129 above the icon click to achieve (Fn + Lock screen key)

INSTRUCTIONS FOR SOME FUNCTION KEYS

- 01 + Turn the trackpad on/off
- 02 Fn+PgUp=Position the cursor at the beginning of the text line
Fn+PgDn=Position the cursor at the end of the text line
- 03 language input switching: +

04 + other keys can realise some uncommon special characters.

05 Some characters shortcut keys:

Selection all: + Copy: + Paste: + Cut: +
screenshot: + + 3

06 Case switching : After connecting to the iPad, Open the settings on the tablet
→Universal→Keyboard→Physical keyboard →Turn off using the caps lock key
to switch languages

07 Incremental backlight: + Diminishing backlight: +

For P109 Pro

PRODUCT FEATURES

- Wireless connection without password, more convenient operation
- Ultra slim design concept, easy to carry
- With energy saving sleep mode
- With touch pad function, operation is more convenient
- Power indicator function


PRODUCT PARAMETERS

1. Operating distance: 10 meters
2. Modulation System: GFSK
3. Working voltage: 3.3-4.2 V
4. Charging Current: <250 mA
5. Standby time: >90 days at full power
6. Continuous working time: <5 hours (with backlight on) <80 hours (with backlight off)
7. Charging time: <3 hours
8. Working temperature: -20~50°C
9. Charging temperature: 0~45°C
10. Lithium battery capacity: 500 mAh


*We won't note you if changing the content of user manual.
MADE IN CHINA

Trackpad Gesture Description V3.0


One Finger

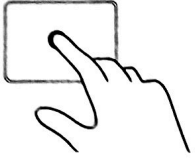


Tap: Press with one finger until it feels a little bit.

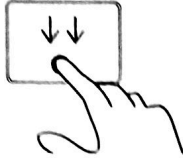


Go to the home screen: Swipe the pointer across the bottom of the screen with one finger. When the dock appears, swipe the pointer across the bottom of the screen again.

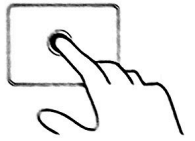


Tap and hold: Press and hold with one finger.

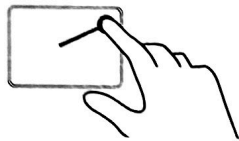


Open "Control Center": Move the pointer to the status icon in the upper right corner of the screen with one finger, then tap or swipe up again with one finger.

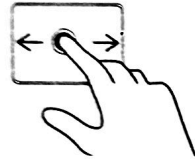

Drag: Tap and hold the item, then slide your finger on the touchpad to move it.

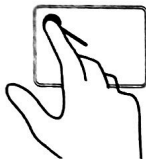


Open "Notification Center": Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.

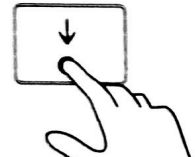

Open the Dock: Swipe the pointer across the bottom of the screen with one finger.


Double Fingers

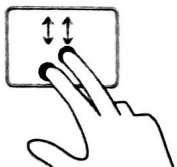


Scroll up or down: Swipe up or down with two fingers.




Scroll left or right: Swipe left or right with two fingers.

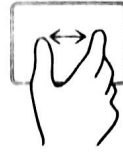


Zoom: Place two fingers close together, spread to zoom in, or pinch to zoom out.

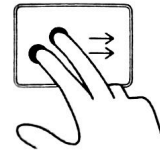

Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.

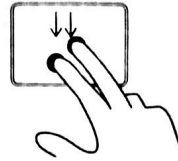


Open search from the home screen: Swipe down with two fingers.

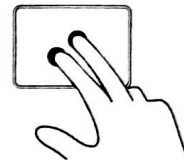


Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.


Three Fingers

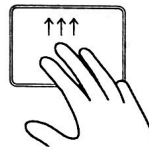

Go to the home screen: Swipe up with three fingers

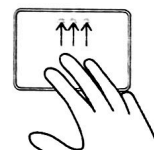



Open the APP switcher: Swipe up with three fingers, pause and then lift your finger.

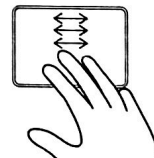

Switch between open apps: Swipe right with three fingers, then swipe left or right to switch.

Notice:

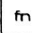- Operating system: IOS 15.0 and above (device must support touch).
- Tap Settings (after successful wireless pairing): Settings → General → Touchpad → Tap to tap / Two-finger assist point (open)
- Sensitivity setting(after successful wireless pairing): Settings→General→Touchpad→Tracking speed (adjust to appropriate speed)
- Touchpad (no physical button style): No "drag" gesture function option.
-  +  Turn on and off the touchpad function.