



# BLACKHEAD REMOVER

CC-9098

## USER MANUAL

Thank you for your recent purchase of our product.  
Read instructions carefully before using the product.  
Results may vary depending proper pore preparation.

### PRODUCT INTRODUCTION

Blackhead Remover Vacuum suction device to quickly remove the outer epidermis and unwanted skin grease, residual dirt buildup, and moderate removal of dead skin keratin.

### FACE PREP

1. Find a cleanser that is best suited to your skin type. A creamy wash works well for dry or sensitive skin. Consider a gel formula for combination or oily skin.
2. Wet your face with warm (not cold or hot) water.
3. Apply the cleanser in gentle circular motions. Massage in your skin for about one minute without scrubbing.
4. Rinse thoroughly with warm water. You can also gently wipe away the cleanser with a warm washcloth for an extra clean feeling.
5. Soak a cloth in warm to hot (not being but hot enough to still be able to touch) water and wring out the excess water.
6. Hold cloth over the face to steam out pores until cloth cools down. Repeat 3x-4x's.
7. Pat (do not rub) your face dry.

### PRODUCT PARAMETERS


Name	Blackhead Remover
Battery capacity	500 mAh
Work Time	≥ 120 minutes
Charging Time	about 2 hours
Standard	GB4706.59-2008
Rate Voltage	5V
Rate Power	1.6W
Rate Current	450 mA

### INSTRUCTIONS

Product is best used after proper face prep instructions.

1. Choose suction tip to desired needs.
2. Light press the power button to start, and then press the selection of gear, a total of three gears.
3. Turn on default is medium gear (II) (neutral skin). then press the power button to switch to high gear (I) (dry skin): press power button again to switch to low gear (III) (oily skin). A total of 3 modes to choose from depending on skin type (low, medium, and high). Spot test on arm or hand to test strength prior to applying on face.
4. Hold down power button for 3 sec to shut down device.
5. Electricity indicator flashes when charging, and stays on when full.

### FUNCTIONS

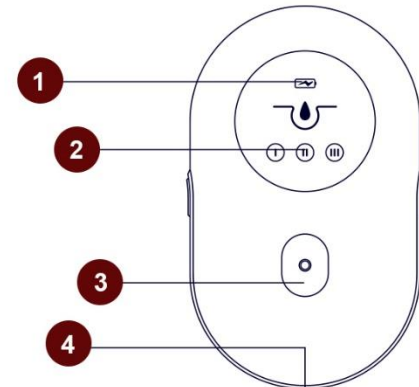

(1) Charging indicator	(2) Gear indicator
(3) ON/Off key	(4) USB Charger

**Note:** On/Off Key - Press the key to turn on, then press to choose the different gear. Hold down to shutdown

### DERMABRASION AND EXFOLIATION

1. Clean and dry facial skin.
2. Replace the working sucker with microcrystalline or large circular hole:

A Place the working suction head in the mandibular region and move from the bottom to the top.

B. Place the work suction heads in the cheek area and move from inside to outside.

C. Place the working suction head in the forehead area and move from the middle to both sides.

D. Place the working suction head in T area and move from bottom to top.




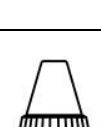

### CLEAN PORES AND DIRT

1. Clean and dry facial skin:
2. Choose and apply desired suction tip.
3. For the removal of blackheads and acne. slide slowly in single horizontal direction.
4. Do not suck on the same spot for more than 3 sec.

### REDUCE FINE LINES

1. Clean and dry facial skin.
2. Replace the elliptical working suction head.
3. Place the working suction head at the corners of the eye. nose. lip, etc. and move up quickly. Pull and pull repeatedly. Act on the underlying layer of skin. increase skin Elasticity, wake up vitality. prevent wrinkles.

### INTRODUCTION OF WORKING SUCKER

	<p><b>Small round hole working sucker</b> Small suction, used to suck blackheads. Thin tender and sensitive skin If the suction is not too strong, use a small suction head.</p>
	<p><b>Medium round hole working sucker</b> High suction. used to suck blackheads. acne. Those with excessive fat, do not use it in one place for a long time.</p>
	<p><b>Large round hole working sucker</b> High suction, used to suck black head, tight V face. When smoking blackheads to move slowly back on the skin. do not spend too long in one place. Use in part; when molding V-face. use pull-up from bottom to top Maneuver, move slowly from chin up.</p>
	<p><b>Elliptical hole working sucker</b> It is mainly used for removing fine lines. It needs to be quickly pulled out after absorbing the skin. Repeats many times, may play the promotion skin blood circulation, increases Skin elasticity.</p>
	<p><b>Microcrystalline working sucker</b> Fine crystals can gently remove aging cutin and make skin tender. Delicate and slippery.</p>

### ATTENTIONS

- This product has no waterproof function. Please wipe the water or other liquids on your hands before use. Dry to prevent water or other liquids from entering the fuselage. thereby damaging the fuselage.
- Do not use abrasive plaster or other cutin products before and after use.
- The function of dermabrasion and exfoliation. It is recommended that dry skin be used once a week. oily or oily. Neutral skin can be used twice a week.
- No more than 5 minutes for each use. It depends on the skin condition.
- Please do not press the working suction head hard on your skin, because the instrument will produce. Strong pulling force.
- Do not continue to use in the same place. otherwise, it may cause skin redness, Purple. If this happens, please suspend use.
- After nursing, due to stimulating the internal circulation of the skin or skin redness. It belongs to the normal phenomenon and will fade out automatically about 30 minutes after use.
- This product is not suitable for cosmetic or skin cosmetic surgery sites; Not suggested for persons with physical. sensory or mental disabilities or lack of experience and knowledge. Use cautiously for children: pregnant women and patients with heart disease.
- Long periods of suction without movement could lead to erythema's/hematomas. Use with care.

