


Cleaning and maintenance

● Cleaning and maintenance

1. Turn the massager off before cleaning the main unit.
2. Wash off the hair and dirt adhering to the massager with water.
3. Remove the massage heads and install them after cleaning.
4. Wipe the massager moisture with a towel or a dry cloth, taking care not to leave moisture in the charging terminal.
5. Be sure to dry the water after use, and then keep it dry before storing.
6. When not in use for a long time, please clean the main body before storing.
7. After fully charging, please cut off the power of the charging base.

Smart Scalp Massager

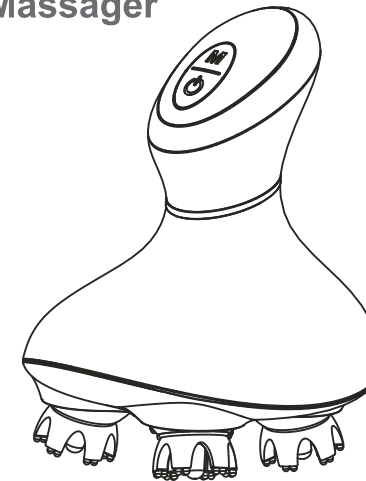

Thanks for purchasing our product. Please read this manual carefully before using the device. Kindly keep this for further reference.

Manual

Parameters

- This product uses the rechargeable lithium battery whose substances that may pollute the environment. The built-in lithium battery should be taken out before disposing of this product.

Input:	DC5V 1A
Power:	5W
Size:	130*110*150MM
Material:	ABS + silicon
Battery Capacity:	1200mAh
Timer:	10 minutes / cycle

thredc

- 05 -

Precautions

Please read the safety precautions carefully before use the massager, to ensure that you can use this product correctly and safely, avoiding harm to you and others, or to cause property damage.

⚠ Dangers

- Forbidden**
- The following people are prohibited from using:
1. Those who use a heart rate adjuster, artificial heart, lung, and other medical electronic devices for life.
 2. Infants, children and those who cannot understand the contents of the instruction manual independently.


⚠ Warnings

- Forbidden**
- Do not use when the body has the following problems:
1. The part of the plastic surgery.
 2. There are abnormalities such as dermatitis and excessive sun exposure on the scalp.
 3. There are wounds, eczema, swelling, and purulent diseases on the scalp.

- 01 -

Structure

Content: massager, charging base, USB cable and manual.

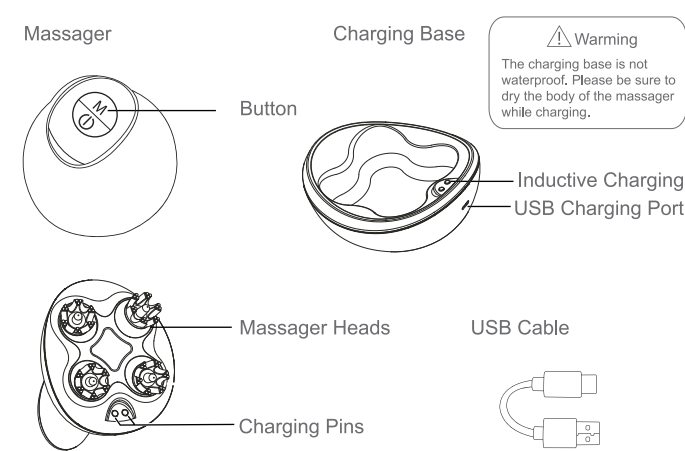

- 02 -

Charging

1. When using it for the first time, if the battery is low (indicator light flashes), please charge the unit before using it.
2. Please use the phone's universal 5V 1A charger (available separately) to charge the massager.
3. Please carefully wipe the massager before charging, otherwise, it may cause product failure if charging with water.
4. When charging, please make the four massage heads in the closed state to avoid contact with the charging terminal, which may result in failure to charge.
5. The full charge time is about 3 hours, and the working time is about 1 hour. Due to the ambient temperature, there may be discrepancies between the full charge time and the use time.


Indicator lights

Low power	Indicator lights flash
Charging	Indicator lights bright and dim
Full charged	Indicator lights are on

- 03 -

Usage

● How to operate the button:

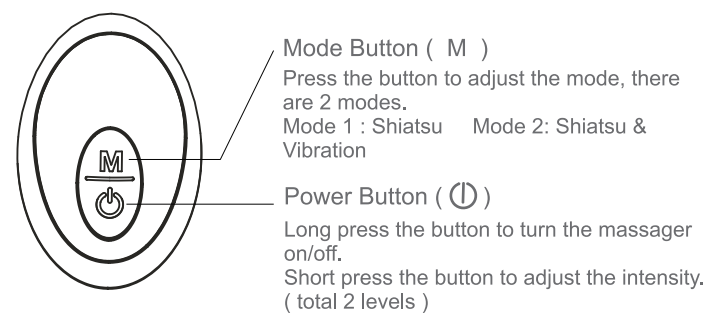

● This massager can be used for both wet and dry:



- 04 -