




Operation

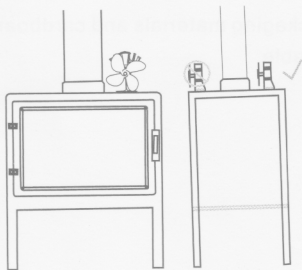

***DO NOT** position the fan before or near the chimney.

***Do not over 350°C(662°F)**

*The optimum operating temperatures shown are for reference and guide only. They may vary in different environments as they have been tested in controlled laboratory conditions.

How to use the stove fan

① Hold Here

Ensure handle is upright before placing on stove.

② Thermoelectric Module


③ Cooling fans

④ Base

DANGER: when in use the base is hot
DO NOT TOUCH!!!

⑤ Heat Sensitive Metal

A safety device to protect the motor from overheating when the surface temp exceeds 250°C(482°F)

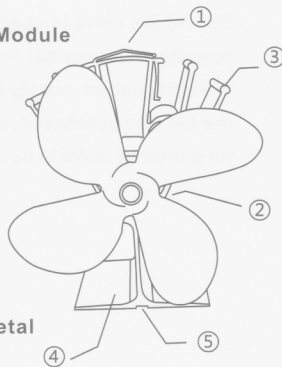

WARNING

***The optimum operating temp is 80-250°C (176-482°F), DO NOT OVER 350°C(662°F).**

•A stove fan thermometer is recommended to monitor the temp, to avoid damage to the components due to overheating.

•Never place the fan on an unprotected surface if the fan base is still hot.

•Not recommended to move the fan when in use unless in an emergency. On this occasion, remember to wear gloves to protect against burns or injury by the rotating blades.

•Keep all obstacles at a distance while the fan is in use.

•Please ensure children and pets are supervised around your stove and the stove fan.

•Start temp 50°C. The fan will spin faster as the temperature increases and will slow down as it decreases. The fan base will cool along with the stove once the fuel has burnt.