


# MAVIC AIR


## Quick Start Guide

V1.2

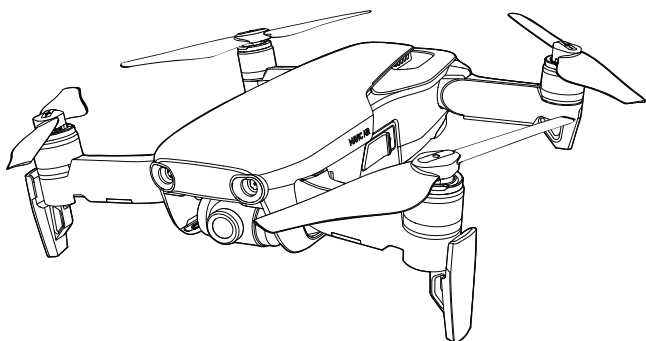

# Aircraft

The DJI™ MAVIC™ Air features a new folding design and a fully stabilized 3-axis gimbal camera capable of shooting 4K video and 12 megapixel photos. DJI signature technologies such as Obstacle Avoidance and Intelligent Flight Modes like SmartCapture, Panorama, Advanced Pilot Assistance Systems, QuickShot, ActiveTrack™, and TapFly™, make capturing complex shots effortless and easy. The Mavic Air boasts a maximum flight speed of 42.5 mph (68.4 kph) and a maximum flight time\* of 21 minutes.

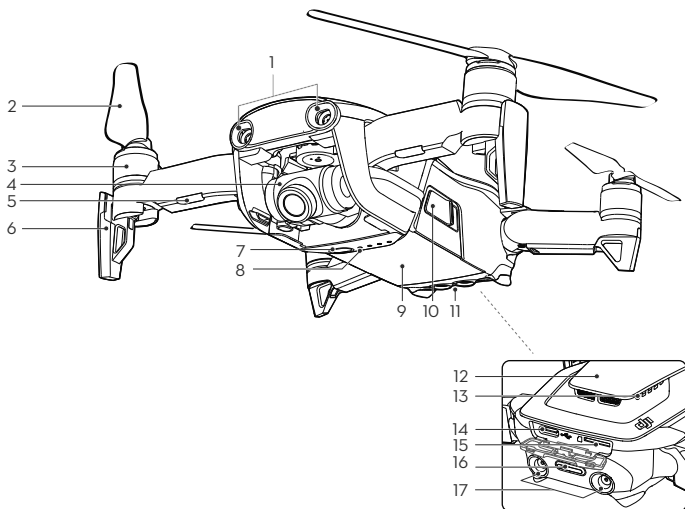

1. Forward Vision System\*\*

2. Propellers

3. Motors

4. Gimbal and Camera

5. Front LEDs

6. Landing Gears (Built-in antennas)

7. Power Button

8. Battery Level LEDs

9. Intelligent Flight Battery

10. Battery Buckles

11. Downward Vision System\*\*

12. GPS Antennas

13. Vents

14. USB -C Port

15. Camera Micro SD Card Slot

16. Aircraft Status Indicator/Function Button

17. Backward Vision System\*\*

\* Maximum flight time was tested in 0 wind at a consistent 15.5 mph (25 kph). This value should be taken for reference only.

\*\* The Forward, Downward and Backward Vision Systems are affected by surrounding conditions. Read the Disclaimer and Safety Guidelines and watch the tutorial in the DJI GO 4 app or on the Official DJI website to learn more. <http://www.dji.com/mavic-air>

# Remote Controller



Built into the Remote Controller is the DJI enhanced Wi-Fi technology, offering a maximum transmission range of 2.49 mi (4 km) and video from the aircraft to the DJI GO™ 4 app on your mobile device at up to 1080p at close range, and 720p at longer ranges. The detachable control sticks make the remote controller easier to store. The Mavic Air also supports flying on your phone with Virtual Joysticks.

Maximum run time: 2.5 hours\*

1. Antennas
2. Status LED
3. RTH Button
4. Charging / Main Video Link Port (Micro USB)
5. Control Sticks
6. Flight Pause Button
7. Flight Mode Switch
8. USB / Assistant Video Link Port
9. Battery Level LEDs
10. Power Button
11. Function Button
12. Mobile Device Clamp



Folded

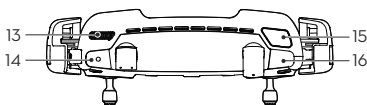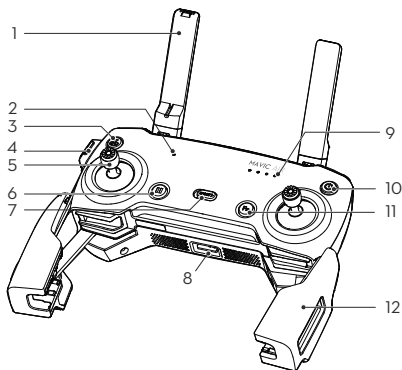

13. Gimbal Dial
14. Record Button
15. Customizable Button
16. Shutter Button

\* The remote controller is able to reach its maximum transmission distance (FCC) in a wide open area with no Electro-Magnetic Interference, and at an altitude of about 400 feet (120 meters).  
The maximum run-time is tested under laboratory environment, only for your reference.

# 1. Downloading the DJI GO 4 App and Watching Tutorial Videos

Search for 'DJI GO 4' in the App Store or Google Play, or scan the QR code to download the app on your mobile device.




DJI GO 4



Tutorial Videos



## 2. Preparing the Aircraft




Remove the gimbal protector from the camera.



Unfold the rear arms.




Unfold the front arms and landing gears.

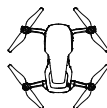

Unfolded



It is recommended to mount the propeller guards when flying in Beginner Mode or indoors to ensure better safety. Refer to the Mavic Air Propeller Guards User Guide to learn more.

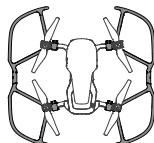


- It is recommended to have the gimbal protector attached when the aircraft is not in use. Make sure the gimbal is horizontal when mounting or removing the gimbal protector.
- Ensure the landing gear is properly unfolded before use. Otherwise, the built-in antenna may be affected causing serious problems to the video link. Make sure you fold the landing gears first before folding the aircraft arms.

### 3. Charging the Batteries

Use the provided charger to full charge the Intelligent Flight Battery before first time use.

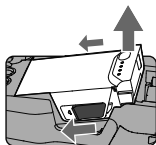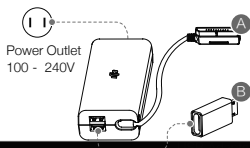


Remove the Intelligent Flight Battery from the aircraft.

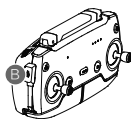

via the port as shown above.

5° to 40°C;  
between 5° to 15°C.


the aircraft until you hear a click,  
series simultaneously. Please visit the  
at the provided communication cable

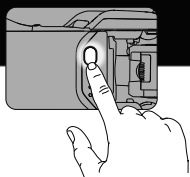


Low ← Battery Level → High



Press once to check the battery level. Press once, then again and hold to turn on/off.

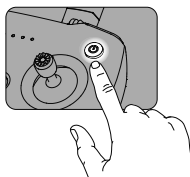


Low ← Battery Level → High



Press the Power button once to check the current battery level. Press once, then again and hold to turn on/off the remote controller.


## 4. Preparing the Remote Controller

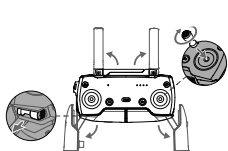


Unfold the antennas and mobile device clamps, then attach the control sticks.



Place one end of the remote controller cable to the end of the slot on the side of the

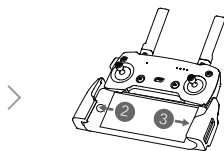

Attach your mobile device within the clamps.



Optimal Transmission Range

mounted by default. Use the remote controller. remote controller. for linking video. Disconnect one port

## 5. Preparing for Takeoff



Power on the remote controller



Power on the aircraft



Launch the DJI GO 4 App



Use your DJI account to activate the aircraft. Activation requires an internet connection.

## 6. Flight

Before taking off, make sure the Aircraft Status Bar in the DJI GO 4 app displays 'Ready to Go'.

Ready to Go (GPS)

- Auto Takeoff / Landing



Auto Takeoff



Auto Landing

- Manual Takeoff / Landing



OR



stick down (slowly) until you  
with the ground  
and a few seconds to stop the  
ors

controller detects critical error.

stick controls the aircraft's  
forward, backward, left and  
a's tilt.

Left Stick



Up



Down



Turn Left

Turn Right

Right Stick



Forward



Backward



Left

Right



Press the Flight Pause button for emergency braking during flight.

• Controlling flight with Virtual Joysticks on your mobile device via Wi-Fi



1. Power on the aircraft.
2. Press and hold the Function Button on the aircraft for four seconds until you hear a double beep, switching to Wi-Fi control mode.
3. Launch the DJI GO 4 app and tap the icon in the top right corner of your screen.

Next, scan the Wi-Fi QR Code on the aircraft to start the connection.

4. Tap Auto Takeoff.
5. Now you can fly the aircraft with touch control via Virtual Joysticks.



- Turn on your mobile device's Wi-Fi and enter the Wi-Fi password shown on the aircraft to connect to the Mavic Air network if for any reason you cannot scan the QR code.
- When using Wi-Fi in a wide open area with no Electro-Magnetic Interference, transmission distance is approximately 262 ft (80 m) at an altitude of 164 ft (50 m).
- Linking is required when switching back to Remote Control mode. The Wi-Fi frequency of your mobile device can be set to 2.4 GHz or 5 GHz. Set your Wi-Fi to 5 GHz for less interference. Once connected to the Mavic Air, you can change your Wi-Fi password or reset your Wi-Fi connection. (Refer to the User Manual for more information).

• In the DJI GO 4 App



Normal



QuickShot



ActiveTrack



TapFly



Tripod



SmartCapture



- Watch the tutorial in the DJI GO 4 app or on the Official DJI website to learn more.
- Always set an appropriate RTH altitude before takeoff. When the aircraft is returning to the Home Point, you should guide it with the control sticks.



## 7. Fly Safe



Fly in Open  
Areas

+



+



+



Maintain Line  
of Sight

Fly Below 400 Feet  
(120 m)




Avoid flying over or near obstacles, crowds, high voltage power lines, trees or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



DO NOT use the aircraft in adverse weather conditions such as rain, snow, fog and wind speeds exceeding 10 m/s or 22 mph.

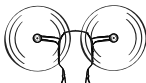

Stay away from the rotating propellers and motors.



No Fly Zone

Learn more at:

<http://fllysafe.dji.com/no-fly>



It's important to understand basic flight guidelines, for the safety of both you and those around you. Don't forget to read the *Disclaimer and Safety Guidelines*.

# Specifications

## • Aircraft

Weight	430 g
Max Speed	42.5 mph (68.4 kph) in Sport Mode without wind
Max Flight Time	21 minutes (0 wind at a consistent 15.5 mph (25 kph))
Operating Temperature	32° to 104°F (0° to 40°C)
GNSS	GPS / GLONASS
Operating Frequency	2.4-2.4835 GHz; 5.725-5.850 GHz
Transmitter Power (EIRP)	2.4 GHz: 28 dBm (FCC), 19 dBm (CE), 19 dBm (SRRC) 19 dBm (MIC) 5.8 GHz: 31 dBm (FCC), 14 dBm (CE), 27 dBm (SRRC)

## • Gimbal

Controllable Range	Pitch: -90° to +0° (Default settings) -90° to +17° (Extended)
--------------------	--

## • Camera

Sensor	CMOS
Max Image Size	4056×3040
Still Photography Modes	Single shot HDR Burst shooting: 3/5/7 frames Auto Exposure Bracketing (AEB): 3/5 bracketed frames at 0.7 EV Bias Interval: 2/3/5/7/10/15/20/30/60 s Panorama(3×1, 3×3, 3×7, Sphere)
Video Recording Modes	4K Ultra HD: 3840×2160 24 / 25 / 30p 2.7K: 2720×1530 24 / 25 / 30 / 48 / 50 / 60p FHD: 1920×1080 24 / 25 / 30 / 48 / 50 / 60 / 120p
Video Storage Bitrate	100 Mbps
Photo	JPEG, DNG
Video	MP4, MOV (MPEG-4 AVC / H.264)
Supported SD Cards	microSD. Class 10 or UHS-1 rating required.

## • Remote Controller

Dimensions	143.9×78.3×61.2 mm (Folded)
Operating Frequency	2.4-2.4835 GHz; 5.725-5.850 GHz
Max Transmission Distance	2.4 GHz: FCC: 2.5 mi (4 km); CE/SRRC/MIC: 1.2 mi (2 km) 5.8 GHz: FCC: 2.5 mi (4 km); CE: 0.3 mi (0.5 km) SRRC: 1.6 mi (2.5 km) (Unobstructed and free of interference)
Operating Temperature	32° to 104° F (0° to 40° C)
Battery	2970 mAh

Transmitter Power (EIRP)	2.4 GHz: 26 dBm (FCC), 18 dBm (CE), 18 dBm (SRRC) 18 dBm (MIC) 5.8 GHz: 30 dBm (FCC), 14 dBm (CE), 26 dBm (SRRC)
Operating Voltage	1000 mA @ 3.7 V
Supported Mobile Device Size	Thickness supported: 6.5 - 8.5 mm, Max length: 160 mm Supported USB port types: Lightning, Micro USB (Type-B) USB-C

- **Power Adapter**

Voltage	13.2 V
Rated Power	50 W

- **Intelligent Flight Battery**

Capacity	2375 mAh
Voltage	11.55 V, Max 13.2 V
Battery Type	LiPo 3S
Energy	27.43 Wh
Net Weight	Approx. 140 g
Charging Temperature Range	41° to 104° F (5° to 40° C)
Max Charging Power	60 W

---

**For more information, read the User Manual:**

<http://www.dji.com/mavic-air>

※ This content is subject to change without prior notice.

# MAVIC AIR



For online support, please scan this code with Facebook Messenger



0K1DRM02UK