

- before each use of personal protective equipment it is obligatory to carry out a pre-use check of the equipment, to ensure that it is in a serviceable condition and operates correctly before it is used.
- after every 12 months of utilization, personal protective equipment must be withdrawn from use to carry out periodical detailed inspection. The periodic inspection must be carried out by a competent person for periodic inspection. The periodic inspection can be carried out also by the manufacturer or his authorized representative. In case of some types of the complex equipment e.g. some types of retractable fall arresters the annual inspection can be carried out only by the manufacturer or his authorized representative.
- regular periodic inspections are the essential for equipment maintenance and the safety of the users which depends upon the continued efficiency and durability of the equipment.
- during periodic inspection it is necessary to check the legibility of the equipment marking.
- it is essential for the safety of the user that if the product is re-sold outside the original country of destination the reseller shall provide instructions for use, for maintenance, for periodic examination and for repair in language of the country in which the product is to be used.
- a full body harness (conforming to EN 361) is the only acceptable body holding device that can be used in a fall arrest system.
- in full body harness use only attaching points marked with a capital letter "A" to attach a fall arrest system.
- the anchor device or anchor point for the fall arrest system should always be positioned, and the work carried out in such a way, as to minimise both the potential for falls and potential fall distance. The anchor device/point should be placed above the position of the user. The shape and construction of the anchor device/point shall not allowed to self-acting disconnection of the equipment. Minimal static strength of the anchor device/point is 12 kN. It is recommended to use certified and marked structural anchor point complied with EN795
- it is obligatory to verify the free space required beneath the user at the workplace before each occasion of use the fall arrest system, so that, in the case of a fall, there will be no collision with the ground or other obstacle in the fall path. The required value of the free space should be taken from instruction manual of used equipment.
- there are many hazards that may affect the performance of the equipment and corresponding safety precautions that have to be observed during equipment utilization, especially: - trailing or looping of lanyards or lifelines over sharp edges, - any defects like cutting, abrasion, corrosion, - climatic exposure, - pendulum falls, - extremes of temperature, - chemical reagents, - electrical conductivity.
- personal protective equipment must be transported in the package (e.g.: bag made of moisture-proof textile or foil bag or cases made of steel or plastic) to protect it against damage or moisture.
- the equipment can be cleaned without causing adverse effect on the materials in the manufacture of the equipment. For textile products use mild detergents for delicate fabrics, wash by hand or in a machine and rinse in water. Plastic parts can be cleaned only with water. When the equipment becomes wet, either from being in use or when due cleaning, it shall be allowed to dry naturally, and shall be kept away from direct heat. In metallic products some mechanic parts (spring, pin, hinge, etc.) can be regularly slightly lubricated to ensure better operation.
- Other maintenance and cleaning procedures should be adhered to detailed instructions stated in the manual of the equipment.
- personal protective equipment should be stored loosely packed, in a well-ventilated place, protected from direct light, ultraviolet degradation, damp environment, sharp edges, extreme temperatures and corrosive or aggressive substances.

IDENTITY CARD


IT IS THE RESPONSIBILITY OF THE USER ORGANISATION TO PROVIDE THE IDENTITY CARD AND TO FILL IN THE DETAILS REQUIRED. THE IDENTITY CARD SHOULD BE FILLED IN BEFORE THE FIRST USE BY A COMPETENT PERSON, RESPONSIBLE IN THE USER ORGANIZATION FOR PROTECTIVE EQUIPMENT. ANY INFORMATION ABOUT THE EQUIPMENT LIKE PERIODIC INSPECTIONS, REPAIRS, REASONS OF EQUIPMENT'S WITHDRAWN FROM USE SHALL BE NOTED INTO THE IDENTITY CARD BY A COMPETENT PERSON. THE IDENTITY CARD SHOULD BE STORED DURING A WHOLE PERIOD OF EQUIPMENT UTILIZATION. DO NOT USE THE EQUIPMENT WITHOUT THE IDENTITY CARD. ALL RECORDS IN THE IDENTITY CARD CAN BE FILLED IN ONLY BY A COMPETENT PERSON.

MODEL AND TYPE OF EQUIPMENT		REF. NUMBER	
SERIAL NUMBER		DATE OF MANUF.	
USER NAME			
DATE OF PURCHASE		DATE OF PUTTING INTO OPERATION	
PERIODIC EXAMINATION AND REPAIR HISTORY			
DATE	REASON FOR ENTRY PERIODIC INSPECTION OR REPAIR	DEFECTS NOTED, REPAIRS CARRIED OUT AND OTHER RELEVANT INFORMATIONS	NAME AND SIGNATURE OF COMPETENT PERSON

LANEX s.r.o., Hlučinská 1098, 747 23 Bolinec, Česká republika, www.lanex.cz
TEL: +420 553 751 111, FAX: +420 553 654 125, E-MAIL: lanex@lanex.cz

Notified body, at which the European certification was issued and which supervises the production of the equipment: APAVE SUDEUROPE SAS -
8 rue Jean-Jacques Vemazza - Z.A.C. Saumaty-Séon
CS-60193 - 13322 MARSEILLE Cedex 16, France - No. 0082

Instruction Manual



READ CAREFULLY
BEFORE
USE THE EQUIPMENT

CE 0082

EN 353-2:2002

+ VG11 11.075

DEVICE DESCRIPTION

LANOSTOP is a guided type fall arrester device on flexible guide that is a part of personal protective equipment against falls from a height. The device is compliant with EN 353-2. The device includes the polyester guide (working ropes) of 12 mm diameter.

LANOSTOP can be used to protect a single user only.

ATTENTION:

LANOSTOP is a complete component of fall arrest system. The rope grab is permanently fixed on the guide (working rope) and any activity to remove the rope grab from the rope is strictly forbidden.

The guided type fall arrester including flexible anchorage line LANOSTOP has been successfully tested according to VG11 11.075 requirements (which are outside of CE regulations) for horizontal use and a resulting simulated fall over an edge.

A steel bar with a radius of $r = 0.5$ mm with no burrs was used in these tests. On the basis of this test, the equipment is suitable for use over similar edges such as rolled steel profiles, wooden beams or a clad, rounded roof parapet.

MARKINGS



Arrow indicating correct positioning of the rope grab on the guide (working rope)

GUIDED TYPE FALL ARRESTER — Type of device

LANOSTOP

Kat. č. XPFAAC032XX — Reference of the guided type fall arrester

CE 0082

CE marking and number of the notified body controlling manufacturing of the equipment (art. 11)

EN 353-2:2002 — Number and year of the European Standard, the device is compliant with.

LENGTH: xx m — Length of the guide (working rope)

Manufacture date: MM.RRRR — month and year of manufacture

Serial number: XXXXXXXX — Serial number of the device




Caution!
Read the manual before use

GUIDED TYPE FALL ARRESTER
ON FLEXIBLE GUIDE


Lanex

LANOSTOP


Ref. XPFAAC032XX

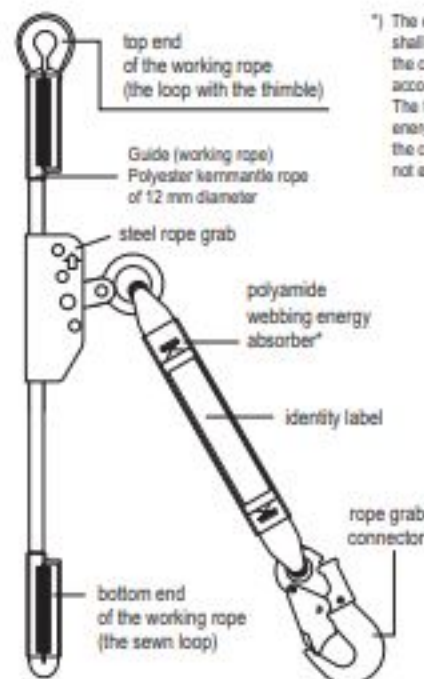

The energy absorber shall be equipped with the connector certified according to EN 362. The total length of the energy absorber with the connector should not exceed 44 cm.

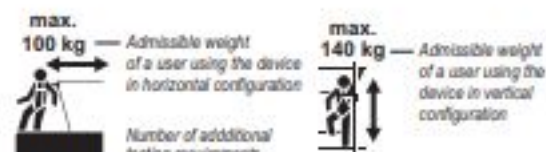

VG11 11.075 — Reference of the testing requirements for recommendation for horizontal use

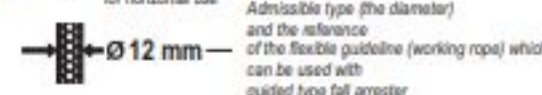

Lanex — Designation of the device manufacturer or distributor