

LOW CARB RICE COOKER

LAZYCHEF





Model: 20

Dear customers, we deeply appreciated that you have trusted and chosen products from Lazychef.
Please, read the description and manual before use!

Product specification

Model	20
Volume	2.0L
Electricity supply	220V/50Hz
Heat wattage	400W
Standard	The product has been granted a stamp of quality certification by Directorate for Standards Metrology and Quality of Viet Nam

Product composition

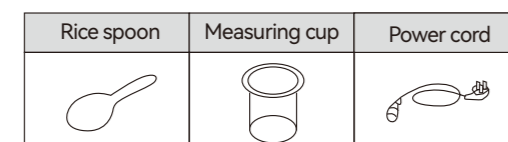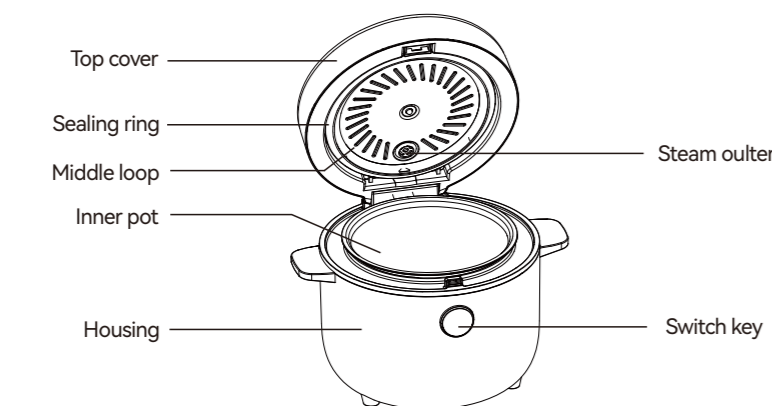

Low carb steamer

Monitor board function

Infrared touch cap:

- Put your hands on the top cover within the distance of 20cm, the cooker will wake up and in the standby status.
- At the moment, you can touch the key of "MENU" to select the desired function.
- If without any operation in 30 seconds, the cooker will sound and auto power off.
- During function working status, the wake up function will off automatically.



Control Panel :



Function guide

"ON/OFF" button :

- Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status.
- In the standby status, touch the key of "MENU" to select the desired function, then touch the key of "ON/OFF" it will start working. After the program finished, it will return to standby status.
- In the standby status, touch the key of "ON/OFF", the cooker will power off.
- During working status, touch the key of "ON/OFF", the cooker will cancel current working function and return to standby status.

"Timer" button :

- Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status.
- In the standby status, touch the key of "MENU" to select the desired function, then touch "Timer" to select Preset function or Timer function.

"Timer" function :

Touch one time, it means "Timer" function, you can increase or reduce the time by "+", "-" key, one touching it can increase or reduce 1 minute, the longest time is 4 hours. Then touch the key of "ON/OFF", it will start working. After the program finished, it will return to standby status.

"Preset" function :

Touch two times, it means "Preset" function, you can increase or reduce the time by "+", "-" key, one touching it can increase or reduce 30 minute, the longest time is 24 hours. Then touch the key of "ON/OFF" it will start working. After the program finished, it will return to standby status.

"+" button :

During "Timer" status, touch the key of "+", it can increase 1 minute, the longest time is 4 hours.

During "Preset" status, touch the key of "+", it can increase 30 minutes, the longest time is 24 hours.

"-" button :

During "Timer" status, touch the key of "-", it can reduce 1 minute, until return to the program default time.

During "Preset" status, touch the key of "-", it can reduce 30 minutes, until return to the program default time.

The operating modes of the pot:

"Child lock" mode :

- Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status.
- In the standby status, touch the key of "MENU" to select the desired function, then touch the key of "ON/OFF", it will start working.
- During working status, long touch the key of "+*"- for 2 seconds at the same time, the cooker will sound and start "Child lock" mode.
- During "Child lock" mode, when you touch any key, it can't work; but the working function is still on.
- When you long touch the key of "+*"- at the same time again, the cooker will sound and the "Child lock" mode will unlock.

"Rice" mode :

Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status. Then touch the key of "MENU" to choose "Rice" function, the indicator light of "Rice" will light up, the default cooking time is 40 minutes, you can adjust the cooking time or preset the cooking time by the key of "TIMER", the cooking time is from 40 minutes to 4 hours. The preset time is from 30 minutes to 24 hours. After completed the program, the cooker will enter 2 hours keep warm, after then, it will return to standby status automatically.

"Low Sugar Rice" mode :

Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status. Then touch the key of "MENU" to choose "Low sugar" Rice function, the indicator light of "Low sugar" Rice will light up, the default cooking time is 45 minutes, you can adjust the cooking time or preset the cooking time by the key of "TIMER", the cooking time is from 45 minutes to 4 hours. The preset time is from 30 minutes to 24 hours. After completed the program, the cooker will enter 2 hours keep warm, after then, it will

return to standby status automatically.

"Porridge" mode :

Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status. Then touch the key of "MENU" to choose "Porridge" function, the indicator light of "Porridge" will light up, the default cooking time is 1 hour and 30 minutes, you can adjust the cooking time or preset the cooking time by the key of "TIMER", the cooking time is from 1 hour 30 minutes to 4 hours. The preset time is from 30 minutes to 24 hours. After completed the program, the cooker will enter 2 hours keep warm, after then, it will return to standby status automatically.

"Soup" mode :

Connect the socket, touch the key of "ON/OFF" for 2 seconds, or using infrared inductive wake up function, the cooker will wake up and in the standby status. Then touch the key of "MENU" to choose "Soup" function, the indicator light of "Soup" will light up, the default cooking time is 1 hour and 50 minutes, you can adjust the cooking time or preset the cooking time by the key of "TIMER", the cooking time is from 1 hour 50 minutes to 4 hours. The preset time is from 30 minutes to 24 hours. After completed the program, the cooker will enter 2 hours keep warm, after then, it will return to standby status automatically.

Cookie time table with per mode :

Function	Rice	Low sugar rice	Porridge	Soup
Working time	40 minutes	45 minutes	1 hour and 30 minute	1 hour and 50 minutes

When the cooking program is finished, the cooker will enter keep warm automatically. If you don't want to continuous warming, please cut off the power.

Warning:

Do not touch the steam outlet by hands directly. Hot steam/liquid may be ejected. Keep hand and face away from steam outlet, use pot holders when removing the inner pot.

Steps to use

- Use a measuring cup to take some rice and wash with other container, in order to avoid scratched.
- Put some rice and water inside the pot, and ratio of rice and water is 1:1, or put 1 cup of rice, keep the water to the "1" water line level of the inner pot. Also you can adjust the water as needed.
- Use clean towel dry the water of the inner pot outsides. And put it properly to the cooker.



- Close the cover, connect the socket and turn on the power. We can start the cooker by press the switch key or infrared inductive wake up mode, then touch the Key of "MENU" to choose desired function as needed. After finished setting, the cooker will start working, when the cooker finished program, it will sound beep and automatically enter 2 hour keep warm status, last auto power off.

Warning:

When cooking porridge and soup, do not leave for a long time avoid overflow. And keep the water do not exceed 2/3 of the inner pot capacity.

Caution

When using electrical appliances. Basic safety precaution should always be observe, including the following:

- Do not place near flammable material, always use in a well ventilated area.
- Do not damage the sealing ring or use other types of rubber ring to replace sealing ring, or use tension washer to be pressurized

- Do not twist the steel ring of lid by hand or other tools. If the steel ring drops off lid, please change a new lid.
- Do not use rag to cover the appliance when in operation.
- Always unplug before cleaning and removing parts.
- Please use wooden and plastic meal spoon, in order to protect the non-stick cooking pot.
- Do not operate the appliance after it malfunctions and servicing or repair should only be completed by consumer service center.
- Using attachments not recommended or sold by the manufacturer may cause danger
- Do not operate any appliance with a damaged cord or plug.
- Do not attempt to dislodge food when the appliance is plugged in.

Cleaness and Maintenance

- Please shut off the power and pull out the plug before your cleaning.
- Clean the unit until it cools down completely.
- To remove dirt, please select litmus less detergent.
- After remove dirt, please use neat wet cloth to clean the unit.
- Do not clean by water directly, water gets inside may cause malfunction.
- Clean the outer body with a soft cloth such as a paper towel or microfibre cloth. Do not do not immerse the outer body in water or pour water into it.
- Remove and clean the condensation collector, then re-install it. Clean the center ring with a wet towel.
- To hand clean the cooking pot. Use a sponge or a soft nonmetal brush and wipe. Be careful not to damage the inside coating.